


Amazon Basics NY1507-15K Portable Radiator Heater



Amazon Basics NY1507-15K Portable Radiator Heater User Manual

[Home](#) » [Support](#) » Amazon Basics NY1507-15K Portable Radiator Heater User Manual 

Contents

- [1 Amazon Basics NY1507-15K Portable Radiator Heater](#)
- [2 Contents](#)
- [3 IMPORTANT SAFEGUARDS](#)
- [4 Intended Use](#)
- [5 Assembly](#)
- [6 Operation](#)
- [7 Cleaning and Maintenance](#)
- [8 Troubleshooting](#)
- [9 Polarized Plug](#)
- [10 Specifications](#)
- [11 Warranty Information](#)
- [12 FAQs](#)
- [13 References](#)
- [14 Related Posts](#)




Amazon Basics NY1507-15K Portable Radiator Heater



Contents

Before getting started, ensure the package contains the following components:

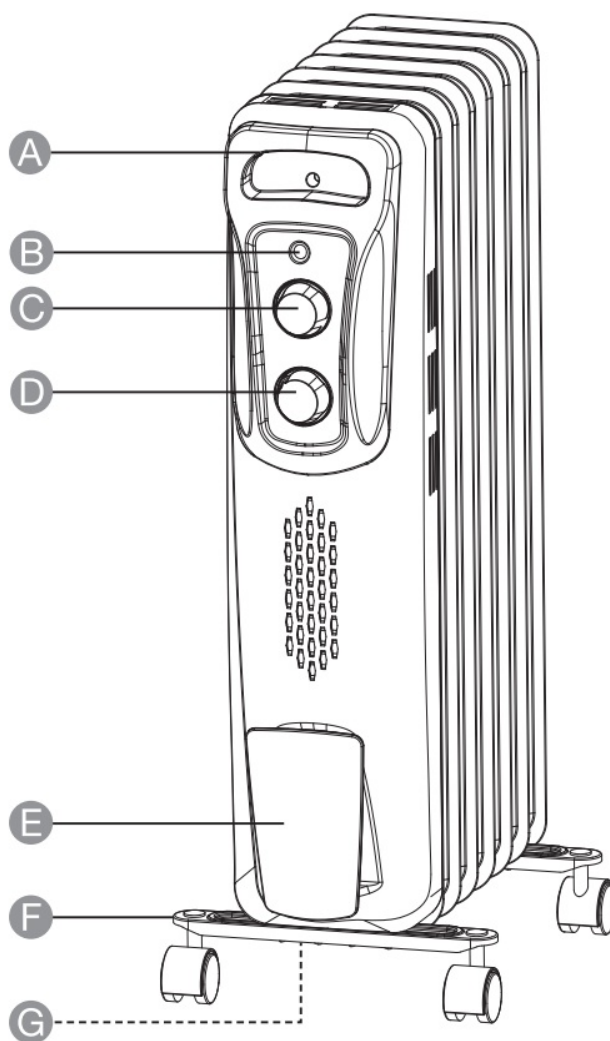

1. Handle
2. Indicator light

3. Thermostat control
4. Heat level control
5. Cord wrap
6. Caster plate x2
7. Butterfly nut x4

IMPORTANT SAFEGUARDS

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included. When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, hyperthermia, and/or injury to persons, including the following:

- Read all instructions before using the heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) away from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or by people with reduced physical, sensory or mental capabilities unless supervised.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas or any area where there is still or stagnant water.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from trafficked areas and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- Do not use this heater in areas where gasoline, paint or flammable liquids are used or stored. This heater may have hot, arcing or sparking parts inside.
- A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- CAUTION: Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- The heater must not be located right under a socket/outlet.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- This heater is filled with a precise quantity of special oil. Repairs requiring opening of the oil container are only

to be made by the manufacturer or service agent who should be contacted if there is an oil leak.

- When scrapping the heater, follow the regulations concerning the disposal of oil.
- To avoid damaging the cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well.
- Do not operate the appliance with wet hands or while standing on a wet floor. Do not touch the power plug with wet hands.
- Do not open the appliance casing under any circumstances.
- Do not pull the power plug out of the electrical outlet by the power cord and do not wrap the power cord around the appliance. Use the provided cord wrap.
- Connect the power plug to an easily reachable electrical outlet so that in case of an emergency the appliance can be unplugged immediately. Pull the power plug out of the electrical outlet to completely switch off the appliance. Use the power plug as the disconnection device.
- Disconnect the power plug from the electrical outlet when not in use and before cleaning.
- Always turn the appliance off before disconnecting the power plug.
- In order to avoid damages to the appliance, always use it in an upright position.
- When using this appliance for the first time, a slight, temporary odor could develop. This is due to manufacturing residues, which are burning off. Ensure for sufficient room ventilation.
- Should a fire break out, pull the plug out of the power outlet or otherwise separate the appliance from the power source first before using appropriate fire-fighting measures.
- In order to avoid overheating, do not cover the heater.
- Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
- To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave the product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
- SAVE THESE INSTRUCTIONS

Intended Use

- This product is intended for temporarily heating residential rooms.
- This product is intended for household use only. It is not intended for commercial use.
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

Before First Use


- Check for transport damages.
- Place the product on a stable, flat, and heat-resistant surface.
- Before connecting the product to the power supply, check that the power supply voltage and current rating correspond with the power supply details shown on the product rating label.

DANGER

Risk of suffocation! Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

Assembly

Unpack your heater and find the wheel-holding plate and butterfly nuts between the fins.

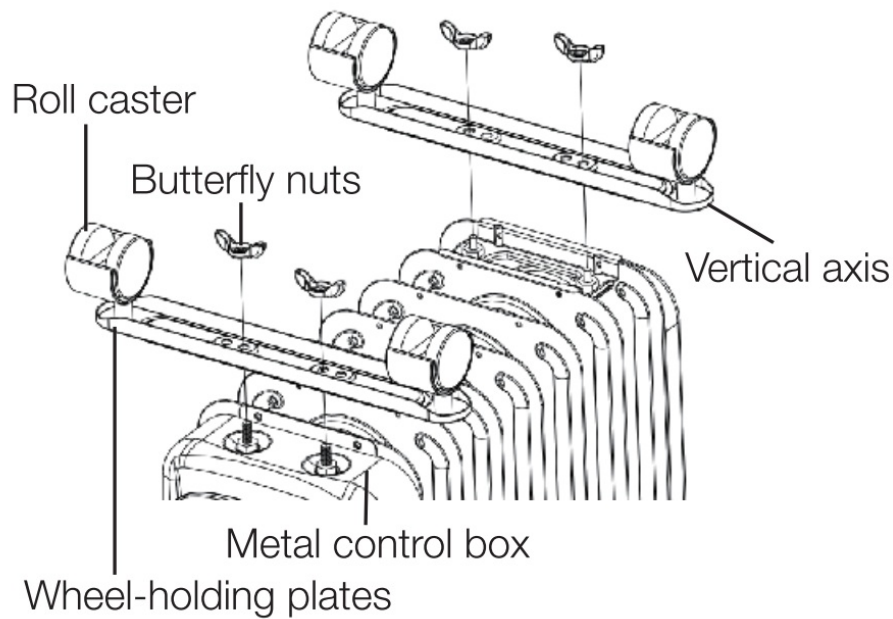

- Make sure the heater is unplugged and in the “OFF” position.
- Turn the heater upside down.
- Attach the wheel-holding plates onto the heater as shown. The U plate is fixed between the last two fins and the other one is fixed under the metal control box. -ix the castors to the vertical axis of both the wheel-holding plates.
- Insert the butterfly nuts and tighten them securely. Your heater is now ready to use.

WARNING

Risk of fire. Do not operate the heater without the wheel assembly attached. Operate the heater in the upright position only (wheels on bottom, controls on top). Any other position could create a hazardous situation. Ensure that the surface beneath the heater is clean and free of any obstructions. It is not recommended that this heater be placed on high-pile carpeting or any other surface that impedes the flow of air underneath the heater.

Operation

Switching on/off

- Connect the power cord to a suitable power outlet.
- Turn the thermostat control (C) clockwise to the “MAX” position.
- Turn the heat level control (D) to the “3” position. The indicator light (B) switches on.
- To switch the product off, turn the power switch knob to the “O” position. The indicator light switches off.

Temperature adjustment

- Once the desired room temperature has been reached, turn the thermostat knob anticlockwise until you hear a click and the indicator light turns off.
- To reduce energy consumption, set the power switch knob to a lower level (1 = low / 2 = medium / 3 = high).

NOTICE

In case of overheating, the product will shut off automatically. Turn the power switch to “0” and disconnect the product from the power outlet. Let it cool down before resuming operation.

Cleaning and Maintenance

WARNING

Risk of electric shock! To prevent electric shock, unplug before cleaning.

WARNING

Risk of electric shock! During cleaning do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water. Before cleaning, make sure the product has completely cooled down.

- To clean, wipe with a soft, slightly moist cloth.
- Dry the product after cleaning.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Storage

- Before storing, make sure the product has completely cooled down.
- When not in use, store the product in its original packaging.
- Store the product in a cool, dry place.

Troubleshooting

Problem	Solution
The product cannot be switched on.	1. Check if the power plug is connected to the power outlet.
	2. Check if the power outlet works.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Specifications

Specification	Detail
Voltage/frequency	120 V~, 60 Hz
Power consumption	1500 W
Dimensions (W x H x D)	approx. 11 x 25.2 x 14.8 in (28 x 64 x 37.5 cm)
Net weight	approx. 17.4 lbs (7.9 kg)

Warranty Information

To obtain a copy of the warranty for this product:

Visit amazon.com/AmazonBasics/Warranty – or – Contact Customer Service at 1-866-216-1072

Feedback

Love it? Hate it?

Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.

Please visit: amazon.com/review/review-your-purchases#



For further services:

Visit amazon.com/gp/help/customer/contact-us

— Or —

Contact Customer Service at 1-866-216-1072

FAQs

Does the Amazon Basics NY1507-15K have any smart features, like Wi-Fi connectivity?

The Amazon Basics NY1507-15K does not come with smart features like Wi-Fi connectivity. It's a basic, manually operated radiator heater.

How much space can the Amazon Basics NY1507-15K effectively heat?

The Amazon Basics NY1507-15K is suitable for medium-sized rooms. Its effectiveness will depend on factors like room insulation and ambient temperature.

How does the Amazon Basics NY1507-15K regulate temperature?

The heater has an adjustable thermostat that allows you to set the desired temperature. It cycles on and off to maintain the set temperature.

What is the weight and size of the Amazon Basics NY1507-15K, and is it easy to move?

The Amazon Basics NY1507-15K is relatively lightweight and portable, with easy-glide caster wheels and a built-in carrying handle for easy movement.

Is there a warranty for the Amazon Basics NY1507-15K?

Yes, the Amazon Basics NY1507-15K typically comes with a limited warranty. For specific warranty details, it's best to check the product documentation or contact Amazon customer support.

Can the Amazon Basics NY1507-15K be used in a child's room?

Yes, the Amazon Basics NY1507-15K can be used in a child's room, as it has a safe design with overheating protection and a cool-to-touch exterior. However, as with any heating device, it should be used under adult supervision and placed away from flammable materials.

How energy efficient is the Amazon Basics NY1507-15K?

The Amazon Basics NY1507-15K is designed for energy efficiency, using oil-filled fins to provide radiant heat while maintaining a lower surface temperature. Its adjustable thermostat helps to maintain a comfortable temperature without unnecessary power use.

How long is the power cord on the Amazon Basics NY1507-15K, and what power supply does it require?

The Amazon Basics NY1507-15K typically has a standard-length power cord, suitable for most rooms. It operates on a standard 110-120V household electrical outlet.

What are the key features of the Amazon Basics NY1507-15K Portable Radiator Heater?

The Amazon Basics NY1507-15K features include adjustable thermostat control for personalized comfort, seven oil-filled fins for consistent heat distribution, a power indicator light, and overheat protection for safety. It's portable with easy-glide caster wheels and a built-in carrying handle.

Is the Amazon Basics NY1507-15K noisy when operating? P>

The Amazon Basics NY1507-15K is known for its quiet operation, as it uses radiant heat and does not have a fan or blower.

Can the Amazon Basics NY1507-15K be used in bathrooms or damp areas?

It's generally not recommended to use the Amazon Basics NY1507-15K in bathrooms or damp areas due to safety concerns with electrical appliances in wet environments.

How do I clean and maintain the Amazon Basics NY1507-15K?

To clean the Amazon Basics NY1507-15K, ensure it's turned off and unplugged. Wipe the exterior with a dry cloth. Avoid using water or cleaning fluids. Regularly check for any obstructions or dust accumulation.

Download this pdf manual: [Amazon Basics NY1507-15K Portable Radiator Heater User Manual](#)

References

- [User Manual](#)

