




amazon basics B012DAKEBY Frying Pan Instruction Manual

[Home](#) » [amazon basics](#) » amazon basics B012DAKEBY Frying Pan Instruction Manual 

amazon basics B012DAKEBY Frying Pan



Contents

- 1 Important Safety Instructions
- 2 Non-Stick Cookware
- 3 Discoloration
- 4 Intended use
- 5 Cleaning
- 6 Specification
- 7 Importer Information
- 8 Disposal
- 9 Feedback and Help
- 10 Customers Support
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

Important Safety Instructions



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:



DANGER

Risk of suffocation! Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. suffocation.



CAUTION

Risk of burns! Hold the handle when moving the product as it becomes very hot during use. Use potholders or oven mitts if necessary

- For household use only.
- This product is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are fully supervised.
- Remove all labels and packaging materials.
- This product can withstand temperatures of up to 350 °F (175 °C).
- Do not preheat the product to high temperatures without cooking contents.
- Do not allow the contents to evaporate fully when in use. Never leave this product unattended while cooking.
- Never heat up the product over the recommended temperature. Overheating can cause serious injury and damage to the product. If smoke develops, ventilate thoroughly.

For Europe:



This symbol identifies that the materials provided are safe for food contact and comply with European Regulation (EC) No 1935/2004.

Non-Stick Cookware

- Avoid using metal utensils as these can damage the non-stick coating. Always use suitable heat-resistant wooden or synthetic utensils.
- Never cut food directly in the product or gouge the non-stick surface in any way.
- With use, the non-stick surface may become slightly darker. Slight surface marks or abrasions are normal and will not affect the performance of the non-stick coating.
- Non-stick cooking sprays are not necessary with non-stick product. The use of such sprays may create an invisible buildup on the surface of the pan that will affect the product's non-stick properties.

Discoloration

Overheating can cause brown or blue stains. This is not a defect in the product:

- It occurs from using a too high heat setting (typically in an empty or minimally filled product).
- Food films that were not properly or fully removed from past cooking will also cause discoloration to the product when reheated.

Intended use

- Suitable for all heating sources, excluding microwave oven:

Halogen hob	Conventional oven	Induction hob
Electrical hob	Electrical radiant	Gas stove

- The product cannot be used over a campfire, or on any type of grill, and should not be placed in the oven during the self-clean cycle.




- It is recommended to “season” the product prior to first use. Wash the product thoroughly and dry. Heat the product on low for 30 seconds. Remove from heat and apply tablespoon of vegetable oil. Rub the oil over the entire surface with a paper towel. Repeat if accidental overheating occurs.
- For optimal energy use, the hob ring should be the same size as the base of the product (8.6”/ 21.9 cm) and it should be placed in the center of the ring.
- To prolong the lifespan of the product, it is recommended to cook at low to medium temperatures. High temperature cooking may discolor or damage the product and reduce its performance.
- When using a gas stove, adjust the height of the flame to avoid overheating the side walls of the product.



Cleaning



This product is dishwasher safe. However, hand washing is recommended to prolong the service life of the product.

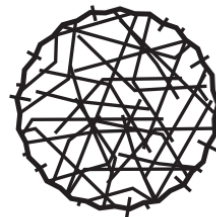

- Wash the product in warm, soapy water, then rinse and dry using a soft cloth or paper towel. For stubborn residue, use a soft nylon brush.
- Do not use steel wool or scouring pads to clean the product.
- Dry the product thoroughly before storage.

Specification

Surface coating	Black, non-stick coating
Full water capacity	3166 ml
Materials	Stainless steel 304 with non-stick coating
Dimensions	11 x 2.17 in (28 x 5.5 cm)
Net weight	2.56 lbs (1.16 kg)

Importer Information

For UK	
Postal:	Amazon EU SARL, UK Branch, 1 Principal Place, Worship St, London EC2A 2 FA, United Kingdom
Business Reg.:	BR017427

Disposal



Dispose of the product according to local regulations. If in doubt, consult your local authorities.

Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.

Scan QR Code with your phone camera or QR reader:

US:



Customers Support



UK: amazon.co.uk/review/review-your-purchases#

If you need help with your Amazon Basics product, please use the website or number below.



US: amazon.com/gp/help/customer/contact-us

UK: amazon.co.uk/gp/help/customer/contact-us



+1 877-485-0385 (US Phone Number)

amazon.com/AmazonBasics

amazon basics



[amazon basics B012DAKEBY Frying Pan](#) [pdf] Instruction Manual
B012DAKEBY Frying Pan, B012DAKEBY, Frying Pan, Pan

References

- [a Amazon Basics](#)
- [a Amazon.co.jp](#)
- [a Amazon Sign-In](#)
- [a Amazon Sign-In](#)
- [a Amazon.co.jp](#)
- [User Manual](#)