



amazon basics B07BRKS8Q Bookshelf Speaker with Active Speaker 80W User Manual

[Home](#) » [amazon basics](#) » amazon basics B07BRKS8Q Bookshelf Speaker with Active Speaker 80W User Manual 

Contents

- [1 amazon basics B07BRKS8Q Bookshelf Speaker with Active Speaker 80W](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 SAVE THESE INSTRUCTIONS](#)
- [4 Product Description](#)
- [5 Operation](#)
- [6 Installing/replacing the batteries \(remote control\)](#)
- [7 Cleaning and Maintenance](#)
- [8 Troubleshooting](#)
- [9 FCC Compliance Statement](#)
- [10 Specifications](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

The logo for Amazon Basics, featuring the word "amazonbasics" in white lowercase letters on a black rectangular background. The "amazon" part includes the iconic curved arrow underneath it.

amazon basics B07BRKS8Q Bookshelf Speaker with Active Speaker 80W



IMPORTANT SAFEGUARDS

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included. When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

CAUTION

THE RISK OF ELECTRIC SHOCK DO NOT OPEN

WARNING

Risk of fire or electric shock! To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING

Risk of fire or electric shock! The terminals marked with, & symbol carry dangerous voltages and the external wiring connected to these terminals require installation by an instructed person or the use of ready-made leads or cords.

Caution

To prevent possible hearing damage, do not listen at high volume levels for long periods.

- Read these instructions.
- Keep these instructions.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- When a cart is used, use caution when moving the \m cart/apparatus combination to avoid injury from tip-over.

- Unplug this apparatus during lightning storms or when unused for long period of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as if the power-supply cord or plug is damaged, liquid has spilled or objects have fallen into the apparatus, or if the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Connect the power plug to a readily operable mains socket outlet so that in case of an emergency the product can be unplugged immediately. Use the power plug as the disconnection device.
- No naked flame sources, such as lighted candles, should be placed on the product.
- This product is only suitable for use in moderate climates. Do not use it in tropic or in particularly humid climates.
- The product shall not be exposed to dripping or splashing water. No objects filled with liquids, such as vases, shall be placed on the product.
- Do not use the product in an environment where temperatures are below 32 °F (0 °C) or exceed + 104 °F (40 °C).

Polarized Plug (for US/Canada)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

SAVE THESE INSTRUCTIONS

Battery Warnings

- Do not mix old and new batteries or batteries of different types or brands.
- Exhausted batteries should be immediately removed from product and properly disposed.
- Keep batteries out of the reach of children.
- Do not dispose of batteries in fire.
- Remove batteries from product if it is not to be used for an extended period of time unless it is for emergency purposes.
- If the battery leaks avoid contact with skin and eyes. Rinse affected areas immediately with plenty of clean water, then consult a doctor.


Symbols Explanation

1. This symbol, adjacent to a terminal, indicates that, under normal use, hazardous voltages may be present.
2. This symbol stands for “Conformite Europeenne”, which means “Conformity with EU directives”. With the CE-marking the manufacturer confirms that this product complies with applicable European directives and regulations.
3. This product is classified as protection class II. This means the product is equipped with reinforced or double insulation between the mains supply circuit and the output voltage or the casing. Therefore it does not require a safety connection to electrical earth (ground).
4. Alternating current (AC).
5. Direct current (DC).

Intended Use

- This product is intended for household use only. It is not intended for commercial use.
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

Product Description

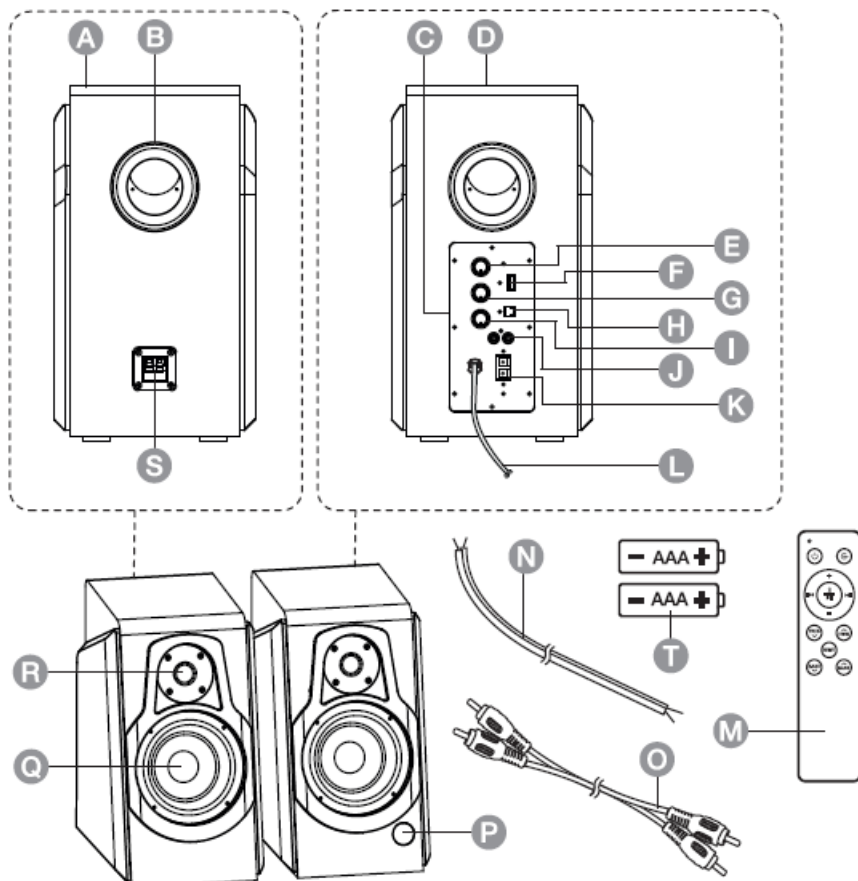

- Passive speaker
- Bass output
- Control panel
- Active speaker
- On/off and source button/
- Volume knob
- USB charging port
- Treble control knob
- Optical socket (output)
- Bass control knob
- RCA sockets (input)
- Push type connectors (output)
- Supply cord
- Remote control
- Speaker wires
- Audio cable (RCA to RCA)
- Power/status/pairing indicators

-
- Bass driver
- Treble driver
- Push type connectors (input)
- 2 x AAA (R03) batteries

Before first use

- Check the product for transport damages fore First
- Use Remove all the packing materials.

Operation

NOTICE

Risk of product damage and injury! Lay speaker wires so that no one can trip over them. Secure with cable ties or tape whenever possible.

NOTICE

Risk of product damage! Before making any connections, unplug the product.

NOTICE

in stereo mode, the active speaker (D) plays the right channel and the passive speaker (A) plays the left channel.

- Wire the passive speaker (A) to the active speaker (D) using provided speaker wires (N). To do so press on the push type connector (K, S), insert the wire and release to lock.
- Wires must be connected correctly on both speakers (A, D).
- The positive connector (red) on the passive speaker (A) must be connected to the positive connector (red) on the active speaker (D). The same applies to the negative connectors (black).
- Connect the audio cable (O) to the RCA sockets (J). Connect the red plug to the red connector and the white plug to the white connector.
- Connect the other ends of the audio cable (O) to the audio device. Connect the red plug to the red connector and the white plug to the white connector.
- Connect an optical cable (not provided) to the optical socket (H).
- Connect the other end of an optical cable to the audio device.

Installing/replacing the batteries (remote control)

NOTICE

I Use 2 x 1.5 V type MA (R03) batteries (T).

1. Remove the battery compartment cover on the backside of the remote control.
2. Insert 2 x MA (R03) batteries (T) with the correct polarities(+) and (-) as marked on the battery and inside the battery compartment.
3. Slide the battery compartment cover back into place.









Switching on/off





1. Connect the supply cord (L) to a socket outlet. The power indicator (P) lights up. The product is in standby

mode.

2. To switch the product on, press and hold the on/off button (E).
3. To select the audio source, press the source button (E) repeatedly.
4. To switch the product off, disconnect the power plug from the socket-outlet. The red power indicator (P) goes off.

Controls

Control panel (C)	Remote control (M)	Function	Indicator light
On/off and source button (E) (press and hold)		Switch on/off	Red
On/off and source button (E) (press)		- Bluetooth® mode - Optical mode - RCA mode	Blue Pink Green
Treble control knob (G) (rotate clockwise)		Increase treble	-
Treble control knob (G) (rotate anti-clockwise)		Decrease treble	-
Bass control knob (I) (rotate clockwise)		Increase bass	-
Bass control knob (I) (rotate anti-clockwise)		Decrease bass	-
	RESET	Reset all audio settings	-
	RESET (press and hold 10 sec)	Restore to factory default settings	-
Volume knob (E) (rotate clockwise)		Volume increase	-
Volume knob (E) (rotate anti-clockwise)		Volume decrease	-

Control panel (C)	Remote control (M)	Function	Indicator light
		Previous track	-
		Next track	-
		Play / pause	-
	 (press and hold)	Disconnect, enter pairing mode	Blue

NOTICE

The product automatically goes into a standby mode approximately after 15 minutes of inactivity.

Pairing Bluetooth

NOTICE

Bluetooth® pairing is required if the speaker is used the first time with a new Bluetooth® enabled device.

- After switching on the product, the pairing indicator (P) blinks blue slowly. The product starts the pairing mode automatically.
- If the product does not automatically start pairing mode, press the source button (E) to enter pairing mode. The pairing indicator (P) flashes blue.
- Activate Bluetooth® on the device you wish to pair and search for a new device.



- Select the Bluetooth® device R60BT-A on your device.

Disconnecting Bluetooth

Press and hold the .lii on the remote control to disconnect the connected device.

NOTICE

Alternatively, press the source button (E) to select a different audio source.

Cleaning and Maintenance

WARNING

Risk of electric shock! To prevent electric shock, unplug the product before cleaning.

WARNING

Risk of electric shock! During cleaning do not immerse the product in water or other liquids. Never hold the product under running water.

- To clean the product, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, or metal or sharp utensils to clean the product.

Storage

Store the product in its original packaging in a dry area. Keep away from children and pets. Plug fuse replacement (for UK only)

- Use a flat screwdriver to open the fuse compartment cover.
- Remove the fuse and replace with the same type (3 A, B81362). Refit the cover.

Maintenance

Any other servicing than mentioned in this manual should be performed by a professional repair centre.

Troubleshooting

Problem	Solution
The product does not switch on.	Check if the power plug is connected to the socket outlet. Check if the socket outlet works.
For UK only: Fuse in the plug is blown.	Use a flat screwdriver to open the fuse compartment cover. Remove the fuse and replace with the same type (3 A, BS1362). Refit the cover.

FCC Compliance Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Canada IC Notice

1. This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:
this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.
3. This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment.
4. This Class B digital apparatus complies with Canadian CAN ICES-3(8) / NMB-3(8) standard.

Simplified EU Declaration of Conformity

- Hereby, Amazon EU Sari declares that the radio equipment type B07W4CM6KC, B07W4CK43F is in compliance with Directive 2014/53/EU.
- The full text of the EU declaration of conformity is available at the following internet address:
https://www.amazon.co.uk/amazon_private_brand_EU_compliance

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Amazon.com, Inc. or its affiliates is under license.

Disposal


The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimise the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed of separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

Battery Disposal

Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.

Specifications


Specifications

Model number:	R60BTUS, R60BTEU, R60BTL
Rated voltage:	100-240 V~, 50/60 Hz, 0.5 A
Protection class:	II / 
Rated power output:	2 x 40 W
Impedance:	4 Ω
Frequency response:	35 Hz – 20 kHz
Bass driver size:	5.25" (13.33 cm)
Treble driver size:	1" (2.54 cm)
Sensitivity:	-5.74 dB
Bluetooth® version:	5.0
Effective range:	32.8 ft (10 m)
Frequency:	2400 – 2483.5 MHz
RF output power:	<2.5 mW
Net weight:	approx. 21.38 lbs (9.7 kg)
Dimensions (W x H x D):	approx. 7.66 x 13.46 x 10.59" (19.45 x 34.18 x 26.89 cm)

Remote control

Power supply:	2 x 1.5 V AAA (R03) batteries
Range:	26.24 ft (8 m)



USB port

Power output:	5 V  , 1 A
---------------	---

Feedback and Help

Love it? Hate it? Let us know with a customer review. AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.

Documents / Resources

  <small>Bookshelf Speakers with Active Speaker: 80W Excelesse de Bookshelfe a Voz Passiva: 80W Hauptbeschreiber mit Aktivlautsprecher: 80W Altoparlanti da Scaffale con Altoparlante Attivo: 80W Altavoces para Estantería con Altavoz Activo: 80W Bokshelfspeakersystem med Aktiv Løftspøker: 80W Bokshelfspeakersystem med Aktiv Løftspøker: 80W</small>	amazon basics B07BRKS8Q Bookshelf Speaker with Active Speaker 80W [pdf] User Manual R60BT, HBOR60BT, B07BRKS8Q, B07W4CM6KC, Bookshelf Speaker with Active Speaker 80 W
---	---