



amazon basics B07FLLCKJJ 600 ml Blend and Go Smoothie Blender Instruction Manual

[Home](#) » [amazon basics](#) » amazon basics B07FLLCKJJ 600 ml Blend and Go Smoothie Blender Instruction Manual 

Contents

- [1 Amazon Basics B07FLLCKJJ 600 ml Blend and Go Smoothie Blender](#)
- [2 Contents](#)
- [3 IMPORTANT SAFEGUARDS](#)
- [4 Description of signal words](#)
- [5 Operation](#)
- [6 Recipes](#)
- [7 Cleaning and Maintenance](#)
- [8 Troubleshooting](#)
- [9 FAQ](#)
- [10 Specifications](#)
- [11 Warranty Information](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)



 
Amazon Basics B07FLLCKJJ 600 ml Blend and Go Smoothie Blender



Welcome Guide

Contents

Before getting started, ensure the package contains the following components:

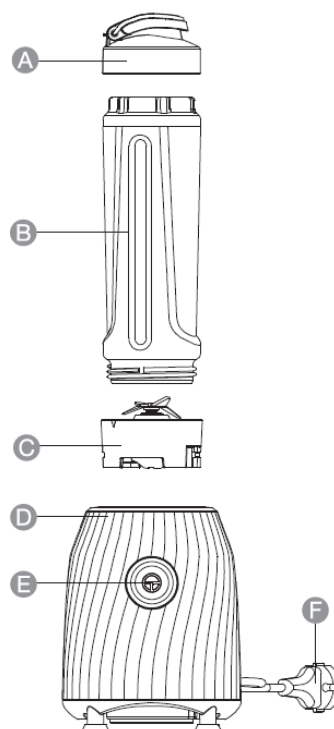

- Lid
- Jar (600 ml)
- Blade assembly
- Main housing
- Switch button
- Power cord

IMPORTANT SAFEGUARDS

- Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:
 - Read all instructions, safeguards and warnings before operating the blender.
 - Misuse poses a potential risk of injury. Please handle the product with care.
 - Always disconnect the appliance from the power supply if it is left unattended before assembly, disassembly, and cleaning.
 - This appliance may not be used by children. Keep the appliance and its cord out of the reach of children.
 - Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
 - Children may not play with the appliance.
 - Be careful when handling the sharp cutting blades, emptying the jar, and cleaning.
 - Be careful if hot liquid is poured into the blender as it may be ejected out of the appliance due to sudden steaming.
 - Switch off the appliance and disconnect from the power supply before changing accessories or approaching parts that move in use.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices, and other working environments;
 - Farm houses;
 - By clients in hotels, motels, and other residential-type environments;
 - Bed and breakfast type environments.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid safety hazards.
- For details on cleaning surfaces that come into contact with food, please see the content of the cleaning section.
- **CAUTION** To avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance may not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility provider.
- This appliance conforms to EC Regulation 1935/2004 on materials and articles intended to come into contact with food.

Save these instructions.

- This appliance is intended for household use only.

CAUTION

- Ensure that the blender is switched off before removing it.
- Failure to follow any of the important safeguards and the important instructions for safe use is a misuse of your blender that can void your warranty and pose a risk of serious injury.

Safety system

- This appliance's motor is equipped with a thermal cut-out. If the appliance overheats, it switches off automatically.
- Unplug the appliance and let it cool down to room temperature, then plug the mains plug back into the power outlet and switch on the appliance again.
- Please contact your dealer or an authorized service center if it is activated too often.

Description of signal words

DANGER

- The signal word indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

WARNING

- The signal word indicates a hazard with a medium level of risk which, If not avoided, could result in death or serious injury.

CAUTION

- The signal word indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- Indicates a practical tip, advice, or action not related to personal injury.

Before First Use

- Check for transport damages.
- Clean the product before first use.
- Before connecting the product to the power supply, check that the power supply voltage and current rating correspond with the power supply details shown on the product rating label.

 
DANGER

- Risk of suffocation! Keep any packaging materials away from children — these materials are a potential source

of danger, e.g. suffocation.


Operation

Step 1:

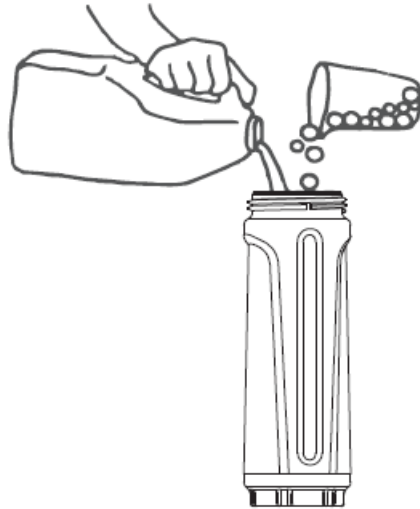


- Fill the jar with your favorite ingredients. Be sure not to fill ingredients over the 600 ml mark.

 Step 2:

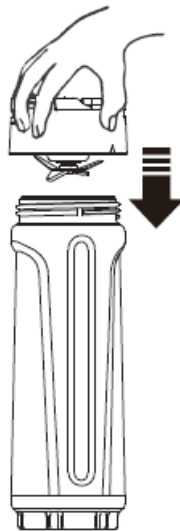


- Fasten the blade assembly on the open end of the jar.

 Step 3:

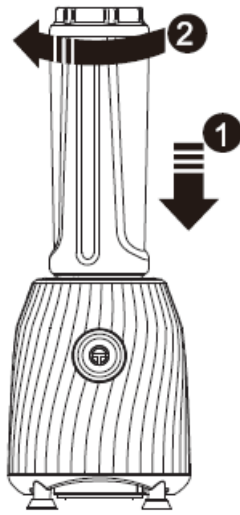


 - Turn the jar upside down, line up the arrow ▲ on the blade assembly to the lock □ on the base, place the jar in the base by pressing and simply turn the jar clockwise to lock □ on the base.

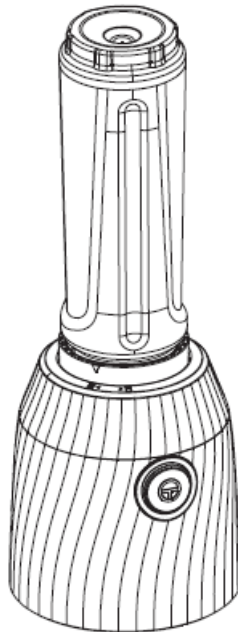


- Double-check if the jar is assembled correctly on the base.

 Step 4:

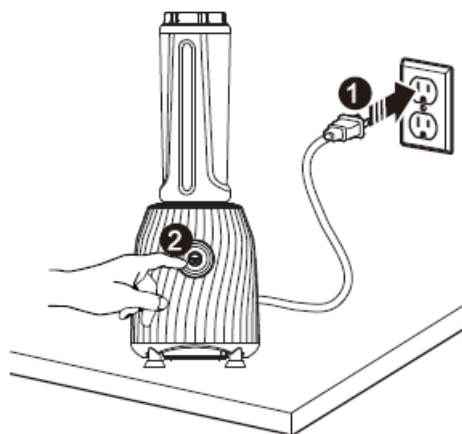


Place the blender base on a flat surface and plug it in. Pressing the switch, the blender will start to work, release the switch to stop operation.

 Step 5:

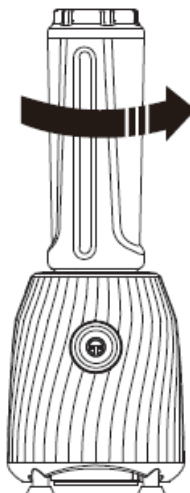

After the ingredients are fully blended, stop the blender operation, and turn the jar counterclockwise to remove the jar from the base.

 Step 6:

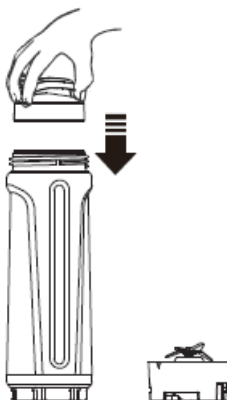


- Replace the blade assembly for use.
- **WARNING** Rotating blades can cause severe injury.
- **WARNING** DO NOT put hands, spatulas, etc. in the jar while the machine is running or while the jar is still on the base.
- **WARNING** Lids are not interchangeable between different jar styles, types, and sizes.
- **WARNING** DO NOT reach into a jar while the machine is running.
- **WARNING** Machine running time cannot exceed 3 minutes. After the shut-down, it is necessary to let the product fully cool to room temperature.

Recipes

Item	Food	Quantity	Time
1	Carrot juice Jar capacity 600 ml	240 g carrot + 360 g water	1 min
2	Crushed ice cubes and water	250 g 20 mm diameter ice cubes, 250 g drinking water	1 min
3	Pineapple smoothie	150 g pineapple, peeled and diced, 300 ml milk, 3 ice cubes	15 seconds
4	Kiwi smoothie	2 kiwi, peeled and diced, 3 ice cubes, 300 ml milk	15 seconds
5	Banana smoothie	1/2 banana, halved, 250 ml milk, 1 scoop ice cream, 1 tbsp honey	15 seconds

Cleaning and Maintenance

 
- **WARNING** Risk of electric shock! To prevent electric shock, unplug before cleaning.
- **WARNING** electrical parts of the product in water or other liquids. Never hold the product under running water.

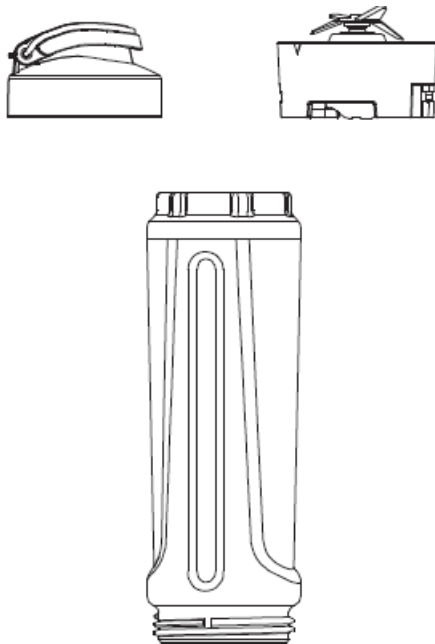

1. Unplug from the power source before cleaning.
2. Remove all fittings except the main motor for cleaning in water. Please be careful when cleaning sharp blades to avoid cutting injuries.

NOTICE

 The lid, personal jar, and blade assembly can be washed in the dishwasher on the top shelf only.

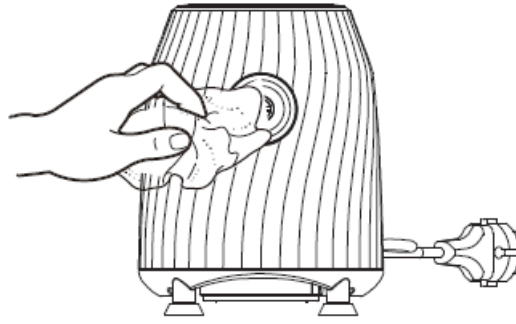

1. Use a damp cloth to wipe the surface of the motor body with a dry cloth, do not immerse the main motor body in water or other solutions for cleaning to avoid hazards.
2. After all the parts are dried, reverse the above steps to reassemble the product.
3. If you experience any problems when operating the product, please do not disassemble without the manufacturer's authorization; immediately contact the nearest authorized service provider or customer service maintenance point for assessment and maintenance.

Troubleshooting

- In case of abnormalities such as abnormal noises, odors, smoke, etc., you should immediately cut off power and stop use.
- If the product does not operate, please check if the power supply is connected, if the switch is at the ON position and if the fittings are installed correctly in place.
- If the product still does not operate after the above checks have been performed, please consult the designated repair center for maintenance.

FAQ

Symptom	Possible Causes	Countermeasure
Product does not work	The jar assembly is not installed correctly.	Double check if the jar is assembled correctly on the base.
	The inching switch is not pressed.	Keep the switch pressed.
	This appliance's motor is equipped with a thermal cut-out. If the appliance overheats, it switches off automatically.	Unplug the appliance and let it cool down to room temperature, then plug the mains plug back into the power outlet and switch on the appliance again.
Blender blade stuck	The amount of processed food is too much.	Reduce the amount of processed food.
	Food sticking to the blade.	Switch off the power supply and clean the ingredients from the blade.
The product produces abnormal odours, heat, smoke and other phenomena	The amount of processed food is too much.	Reduce the amount of processed food.
	The product running time is too long.	Reduce the motor running time.
	The temperature of the processed ingredients is too high.	Do not exceed 60 °C.
Drain jar liquids (water)	The blade holder seal is missing or not properly mounted on the tool holder assembly.	Check the state of the blade holder seal.
	The jar is screwed into the blade holder assembly without tightening.	Verify that the jar is securely tightened.
	The jar is screwed into the jar cover without tightening.	Verify that the jar is securely tightened.

Specifications

- **Weight:** 1200 g
- **Capacity:** 600 ml
- **Dimensions** (L x W x H) 37.2 x 14.0 x 14.0 cm
- **Voltage/frequency:** 220-240 V-, 50/60 Hz
- **Power consumption:** 600W

Disposal

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimize the impact of electrical and electronic goods on the environment, by increasing reuse and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed of separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers to conserve natural resources. Each country should have its own collection centers for electrical and electronic equipment recycling. For information about your recycling drop-off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.


Warranty Information

- To obtain a copy of the warranty for this product: [amazon.co.uk/basics-warranty](https://www.amazon.co.uk/basics-warranty)
- +44 (0)20-219-12a4

Feedback and Help

- Love it? Hate it? Let us know with a customer review.
- AmazonBasics is committed to delivering customer-driven products that live up to your high standards.
- We encourage you to write a review sharing your experiences with the product.
- [amazon.co.uk/review/review-your-purchases#](https://www.amazon.co.uk/review/review-your-purchases#)
- [amazon.co.uk/gp/help/customer/contact-us](https://www.amazon.co.uk/gp/help/customer/contact-us)

Documents / Resources

	<p>amazon basics B07FLLCKJJ 600 ml Blend and Go Smoothie Blender [pdf] Instruction Manual</p> <p>B07FLLCKJJ, B07FLLCKJJ 600 ml Blend and Go Smoothie Blender, 600 ml Blend and Go Smoothie Blender, Blend and Go Smoothie Blender, Go Smoothie Blender, Smoothie Blender, Blender</p>
---	---

References

- [User Manual](#)