 


Amazon Basics B07JW45HH3 1500W Portable Space Heater User Guide

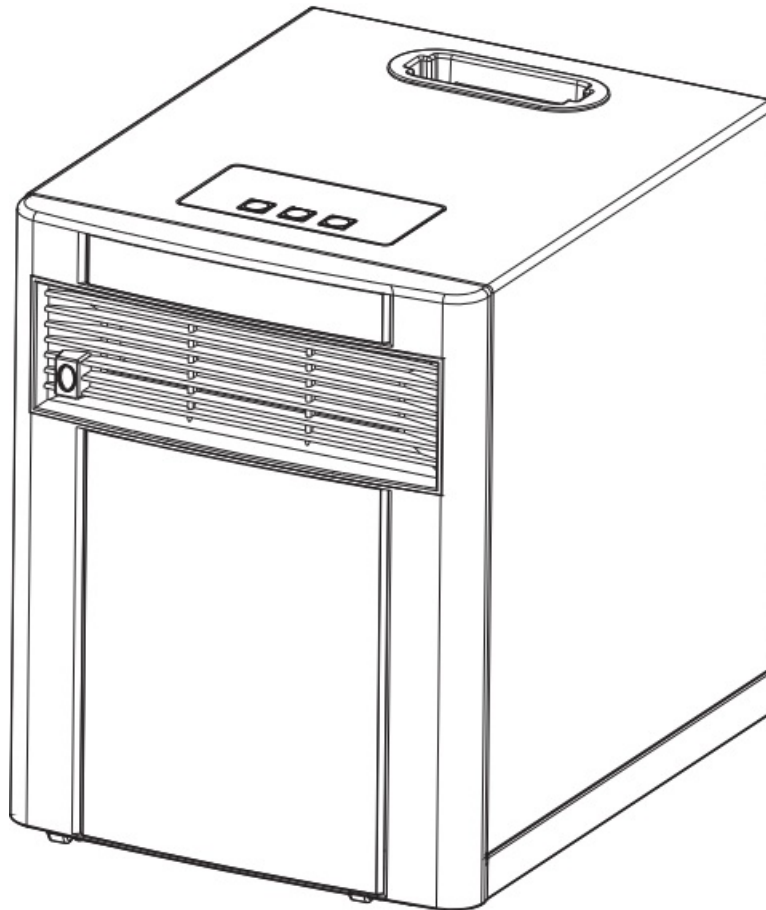



Contents

1 Portable Space Heater 1500W

1.1 BO7JW45HH3

1.1.1 1. IMPORTANT SAFEGUARDS

1.1.2 2. Battery Warnings

1.1.3 3. Intended Use

1.1.4 4. Appliance Description

1.1.5 5. Before First Use

1.1.6 6. Inserting Batteries

1.1.7 7. Operation

1.1.7.1 7.1 Switching on/off

1.1.7.2 7.2 Adjusting the temperature

1.1.7.3 7.3 Using ECO mode

1.1.8 8. Cleaning and Maintenance

1.1.8.1 8.1 Cleaning

1.1.8.2 8.2 Storage

1.1.8.3 8.3 Maintenance

1.1.9 9. Frequently Asked Questions

1.1.10 10. Battery Disposal

1.1.11 11. Specifications

1.1.12 12. Feedback and Help

2 Documents / Resources

2.1 References

3 Related Posts

Portable Space Heater 1500W

BO7JW45HH3

1. IMPORTANT SAFEGUARDS



Read these instructions carefully and retain them for future use. If this appliance is passed to a third party, then these instructions must be included.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:



WARNING

Risk of burns! Do not touch hot surfaces.

The surfaces of the appliance can become hot. Do not touch any hot surfaces during and immediately after use.



WARNING

Risk of fire!

To reduce the risk of fire—keep electrical cords, drapery and other furnishings at least 3 feet from the front of the appliance and away from the sides and rear.

- Read all instructions before using this appliance.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Only plug the appliance into an outlet that is accessible at any time.

- There shall be no covers like curtains in front of the outlet.
- Only use the appliance in its intended operating position(s).
- Let the appliance cool down before unplugging it from the outlet.
- Only use in dry environments.
- Not for use in caravans or campers/mobile homes.
- The appliance shall not be used with extension cords, multiple socket outlets or adapters (e.g. timer).
- Keep children under close supervision when using the appliance in their proximity.
- Always operate the appliance on a level, stable, clean and dry surface.
- Never use a damaged, defective or malfunctioning appliance or after it was dropped. Do not attempt to repair the appliance yourself. Disconnect the appliance from the outlet and contact a professional repair center.
- To avoid damaging the power cord, do not squash, bend or chafe it on sharp edges. Keep the power cord and appliance away from hot surfaces and open flames.
- Place the power cord in such a way that unintentional pulling or tripping over it is not possible.
- Do not use extension cords with this appliance due to its high wattage and amperage demands. Connect the appliance directly to a dedicated socket outlet.
- Do not operate the appliance with wet hands or while standing on a wet floor. Do not touch the plug with wet hands.
- Never reach to retrieve the appliance after it has fallen into water. Unplug the appliance from the outlet first.
- Do not open the appliance housing. Do not insert any foreign objects into the inside of the appliance.
- Do not pull the plug out of the outlet by the power cord. Always pull on the plug itself. Do not wrap the power cord around the appliance.
- Connect the plug to an easily reachable outlet so that in case of an emergency the appliance can be unplugged immediately. Pull the plug out of the outlet to completely switch off and disconnect the appliance. The power plug is used as a disconnecting device.
- Always switch the appliance off, before disconnecting the plug from the outlet, when not in use, before cleaning and / or before changing attachments.
- The appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- Do not use outdoors.
- This appliance is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate appliance where it may fall into a bathtub or other water container.

SAVE THESE INSTRUCTIONS

2. Battery Warnings



DANGER

Risk of explosion!

Risk of explosion if the battery is replaced by an incorrect type.



WARNING

- **INGESTION HAZARD:** This appliance contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The remote control is compatible only with battery type 3 V CR2025.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the appliance, remove the batteries, and keep them away from children.
- When used correctly, primary batteries provide a safe and dependable source of portable power. However, misuse or abuse may result in leakage, fire, or explosion.
- Always take care to install your batteries correctly observing the "+" and "-" marks on the battery and the appliance. Batteries which are incorrectly placed into some equipment may be short-circuited, or charged. This can result in a rapid temperature rise causing venting, leakage, explosion and personal injury.
- Keep batteries out of the reach of children, especially small batteries that could be easily ingested.
- Immediately seek medical attention if a cell or battery has been swallowed. Also, contact your local poison control center.
- Never dispose of batteries in fire. When batteries are disposed of in fire, the heat build-up may cause explosion and personal injury. Do not incinerate batteries except for approved disposal in a controlled incinerator.
- Never attempt to recharge primary batteries. Attempting to charge a non-rechargeable (primary) battery may cause internal gas or heat generation resulting in venting, leakage, explosion and personal injury.
- Never short circuit batteries as this may lead to high temperatures, leakage, or explosion. When the positive (+) and negative (-) terminals of a battery are in electrical contact with each other, the battery becomes short-

 
circuited. This may result in venting, leakage, explosion and personal injury.

- In the event that the electrolyte comes into contact with the skin or eyes, immediately flush with fresh water for at least 15 minutes and seek medical attention.
- Never heat batteries in order to revive them. When a battery is exposed to heat, venting, leakage and explosion may occur and cause personal injury.
- Never attempt to disassemble, crush, puncture or open batteries. Such abuse may result in venting, leakage, rupture, and cause personal injury.
- Purchase the correct size and grade of cell or battery most suitable for the intended use.

3. Intended Use


- This appliance is intended for heating indoor living spaces only.
- This appliance is intended for household use only.
- This appliance is intended to be used in dry indoor areas only.

4. Appliance Description

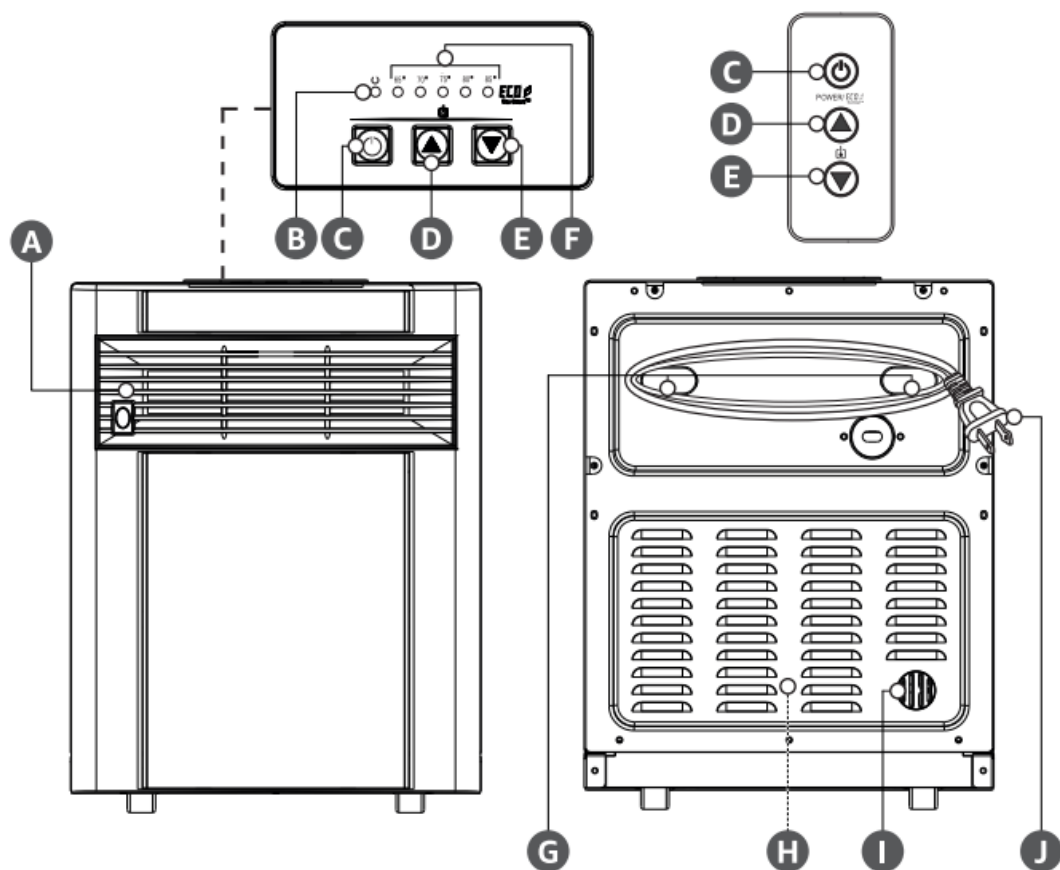

A Front grill with IR receiver

B Power indicator

C  button (ON/OFF)

D  button (increase temperature)

E  button (decrease temperature)

F Thermostat indicators

G Power cord with plug

H Temperature sensor

I Air inlet

J Power cord hooks

5. Before First Use



DANGER

Risk of suffocation!

 
Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. suffocation.

- Remove all the packing materials.
- Remove and review all components before use.
- Check the appliance for transport damages.
- Before connecting the appliance to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label.
- The appliance may emit a slight smell or smoke when it is first used. This is entirely safe and harmless. Ensure there is adequate ventilation in the room.
- Remove the plastic tab from the remote control's battery compartment.

6. Inserting Batteries

NOTICE

Replace the battery if the range of the remote control decreases noticeably or if the appliance cannot be controlled via remote control.

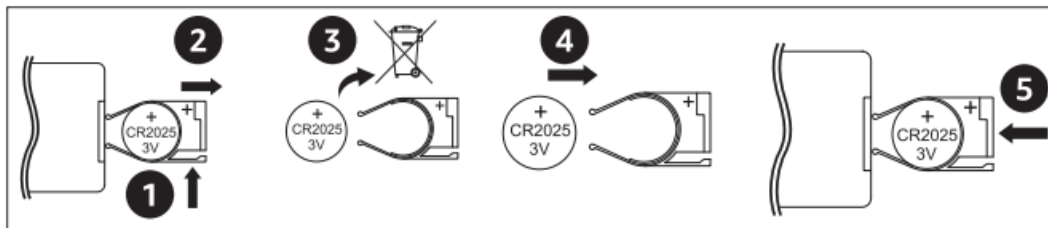



1. Remove the battery compartment cover from the remote control.
2. Replace the existing battery with one of the same type.
3. Refit the battery compartment cover.

7. Operation

NOTICE

Use the control panel on the main unit or the remote control to operate the appliance. Point the remote control towards the IR receiver in the lower left corner of the front grill (A).

7.1 Switching on/off






1. Connect the power cord (G) to a suitable outlet. The power indicator (B) lights up.
2. To switch the appliance on, press the  button (C). The thermostat indicators (F) light up.
3. To switch the appliance off, press the  button (C) twice.

– After switching the appliance off, the power indicator (B) blinks and the appliance blows cold air for 60 seconds to cool down. When the appliance cools down, the fan stops and the power indicator (B) lights up continuously.

7.2 Adjusting the temperature

NOTICE

- The appliance starts heating on the default temperature, 85 °F.
- After reaching the set temperature, the power indicator (B) starts blinking. The appliance blows cold air for 60 seconds and then switches off. When the room temperature drops below the set temperature level, the appliance switches on again automatically.
- To increase the temperature, press the ▲ button (D).
- To decrease the temperature, press the ▼ button (E).

| Thermostat indicators (F) | Temperature |
|---|-------------|
|  | 65 °F |
|  | 70 °F |
|  | 75 °F |
|  | 80 °F |
|  | 85 °F |

7.3 Using ECO mode

In **ECO** mode, the thermostat cycles between the low and high temperature settings.

- To switch **ECO** mode on, turn the appliance on and press the ⏻ button (C) once. The **ECO** indicator lights up.
- To switch **ECO** mode off, press the ⏻ button (C) again. The appliance switches off.

8. Cleaning and Maintenance

 **WARNING**
Risk of electric shock!

- To prevent electric shock, unplug the appliance before cleaning.
- During cleaning do not immerse the electrical parts of the appliance in water or other liquids. Never hold the appliance under running water.

8.1 Cleaning

- I To clean the appliance, wipe with a soft, slightly damp cloth.
- I Wipe the appliance dry after cleaning.
- I Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the appliance.

8.2 Storage

Store the appliance in a cool, dry area. Keep away from children and pets.

8.3 Maintenance

Any other servicing than mentioned in this manual should be performed by a professional repair center.

9. Frequently Asked Questions

| Problem | Solution |
|---|---|
| The appliance does not switch on. | Check if the plug is connected to the outlet. Use voltage tester to verify if the outlet is powered. |
| The appliance makes unexpected crackling noises. | The crackling noise is normal. Once the appliance heats up, the crackling stops. |
| The appliance emits an unpleasant or burnt smell. | There may be dust or other debris on the heating element. This is normal during first use and after prolonged storage. Operate the appliance in a well ventilated area. Keep the appliance switched on, until the smell disappears. If the smell persists, switch the appliance off and consult a qualified professional. |

10. Battery Disposal



Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.



To learn more about recycling batteries, visit: call2recycle.org/what-can-i-recycle

11. Specifications

| | |
|---------------------------------------|-----------------|
| Rated voltage | 120 V AC, 50 Hz |
| Power consumption | 1500 W |
| Current consumption | 12.5 A |
| Protection class | Class II |
| Voltage/battery type (remote control) | 3V 1x CR2025 |

12. Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.

Scan QR Code below with your phone camera or QR reader:



If you need help with your Amazon Basics product, please use the website or number below.

amazon.com/gp/help/customer/contact-us

**+1 877-485-0385**



MADE IN CHINA
vol -01/24

Documents / Resources



amazon basics
Portable Space Heater 1500W
Appareil de Chauffage Portable 1500 W
Calentador de Espacio Portátil de 1500 W
calentador

[Amazon Basics B07JW45HH3 1500W Portable Space Heater](#) [pdf] User Guide
B07JW45HH3 1500W Portable Space Heater, B07JW45HH3, 1500W Portable Space Heater, P
ortable Space Heater, Space Heater, Heater

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.