




amazon basics B07TFKQW5 3 Speed Oscillating Portable Tower Fan User Guide

[Home](#) » [amazon basics](#) » amazon basics B07TFKQW5 3 Speed Oscillating Portable Tower Fan User Guide 

Contents

- [1 amazon basics B07TFKQW5 3 Speed Oscillating Portable Tower Fan](#)
- [2 Contents](#)
- [3 IMPORTANT SAFEGUARDS](#)
- [4 Assembly](#)
- [5 Operation](#)
- [6 Cleaning and Maintenance](#)
- [7 Specifications](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

 


amazon basics B07TFKQW5 3 Speed Oscillating Portable Tower Fan



Contents

- Before getting started, ensure the package contains the following components:

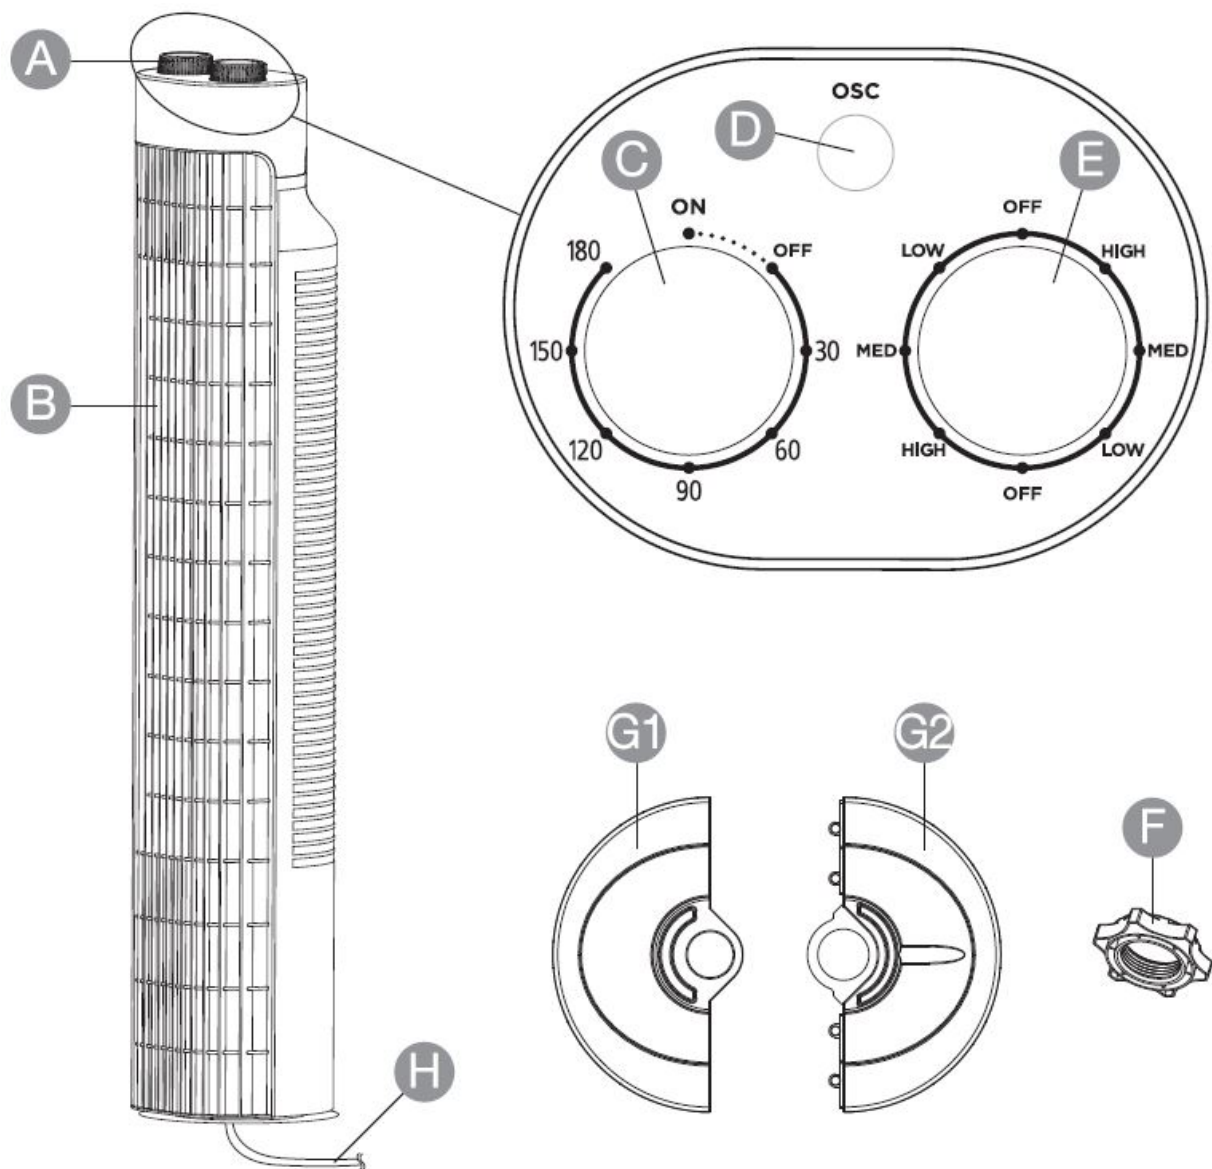

- **A:** Control panel
- **B:** Main body
- **C:** Timer knob
- **D:** OSC button
- **E:** Mode knob
- **F:** Fixing ring
- **G1:** Base wing 1
- **G2:** Base wing 2
- **H:** Supply cord with power plug

IMPORTANT SAFEGUARDS

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

- Ensure that the fan is switched off from the supply mains before removing the guard.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or

mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

- Cleaning and user maintenance shall not be done by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Intended Use

- This product is intended for household use only. It is not intended for commercial use.
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

 
Before First Use

- Check for transport damages.
- Before connecting the product to the power supply, check that the power supply voltage and current rating correspond with the power supply details shown on the product rating label.

DANGER Risk of suffocation! Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.


Assembly

Step 1

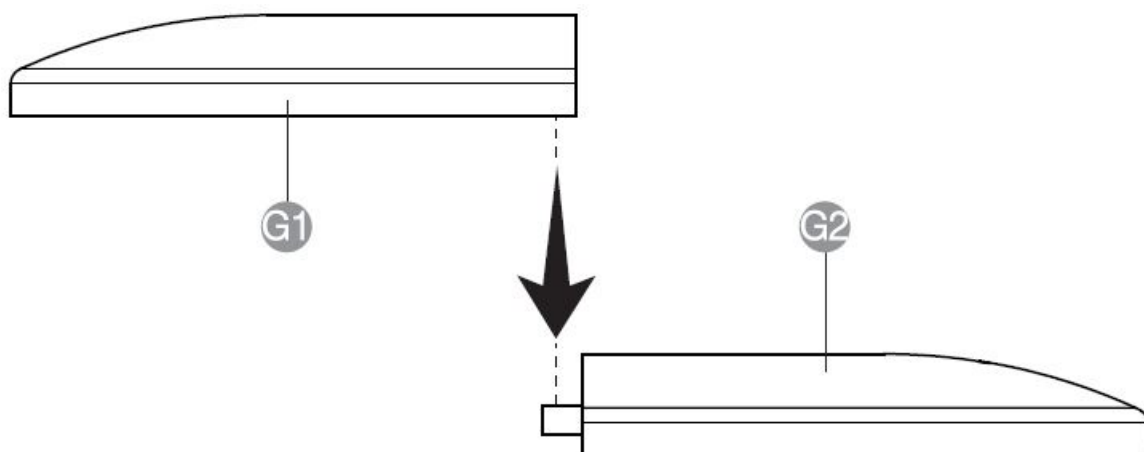

Connect the base wings (G1) and (G2).

 Step 2

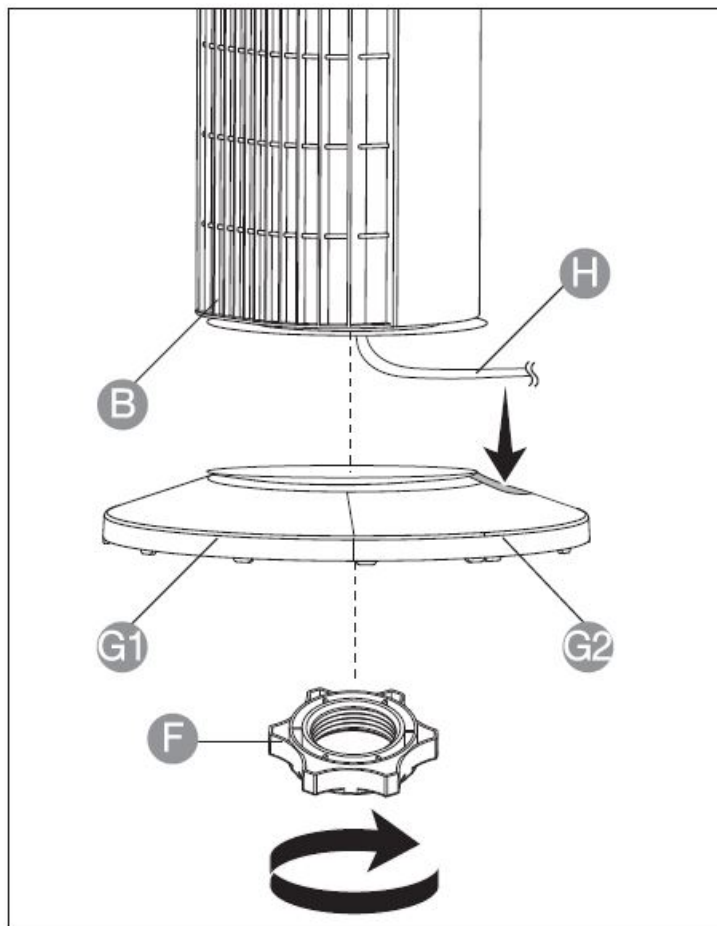

NOTICE Insert the supply cord (H) into the base wing's (G2) cord notch.
Connect the base assembly to the main body (B).
Secure the connection with the fixing ring (F).

Operation

Switching on/off

- Place the product on a flat and stable surface.
- Plug the product into the electrical outlet.
- To switch on, set the mode knob (E) to one of the settings.

Mode Speed

- HIGH High speed setting
- MED Medium speed setting
- LOW Low speed setting

NOTICE The mode knob (E) has the HIGH, MED and LOW modes featured twice for convenience during operation.
To switch off, set the mode knob (E) to OFF.

Setting the timer

The product features a timer, which allows it to switch off the product automatically after a set amount of minutes. To set the timer, turn the timer knob (C) clockwise to the desired time setting. The timer mechanically rotates back until it reaches OFF.

NOTICE Do not turn the timer knob (C) anti-clockwise. It may damage the product.

Setting the oscillation

- To switch on the oscillation, press the OSC button (D).
- To switch off the oscillation, press the OSC button (D) again.

Cleaning and Maintenance

WARNING Risk of electric shock! To prevent electric shock, unplug before cleaning.

WARNING Risk of electric shock! During cleaning do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water

Cleaning

- To clean the product, wipe with a soft, slightly moist cloth.
- Regularly remove dust and dirt from the guards using a vacuum cleaner.
- Never use corrosive detergents, wire brushes, abrasive scourers, or metal or sharp utensils to clean the product.

Maintenance

- Store the product in a cool and dry place away from children and pets, ideally in original packaging.
- Avoid any vibrations and shocks.

Disposal

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimise the impact of electrical and electronic goods on the environment, by increasing reuse and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed of separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its own collection centres for electrical and electronic equipment recycling. For information about your recycling drop-off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.



 
Specifications

- **Rated power:** 230 V~, 50 Hz
- **Power consumption:** 45 W
- **Oscillation range:** 60° ÷ 5°
- **Protection class:** Class II
- **Net weight:** 3.15 kg
- **Dimensions (W x H x D):** 24 x 24 x 76.5 cm

Feedback and Help

- Love it? Hate it? Let us know with a customer review.
 - AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.
 - amazon.co.uk/review/review-your-purchases#
 - amazon.co.uk/gp/help/customer/contact-us
 - amazon.com/AmazonBasics
-

Documents / Resources
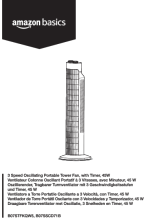
| | |
|---|--|
|  | <p>amazon basics B07TFKQW5 3 Speed Oscillating Portable Tower Fan [pdf] User Guide B07TFKQW5 3 Speed Oscillating Portable Tower Fan, B07TFKQW5, 3 Speed Oscillating Portable Tower Fan, Oscillating Portable Tower Fan, Portable Tower Fan, Tower Fan, Fan</p> |
|---|--|

References

- [User Manual](#)

[Manuals±](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.