

 


## amazon basics B07YJCTXN5 Window Fan with Twin 9 Inch Blade User Manual

[Home](#) » [amazon basics](#) » amazon basics B07YJCTXN5 Window Fan with Twin 9 Inch Blade User Manual 

# amazon basics

Window Fan with Twin 9-Inch Blades

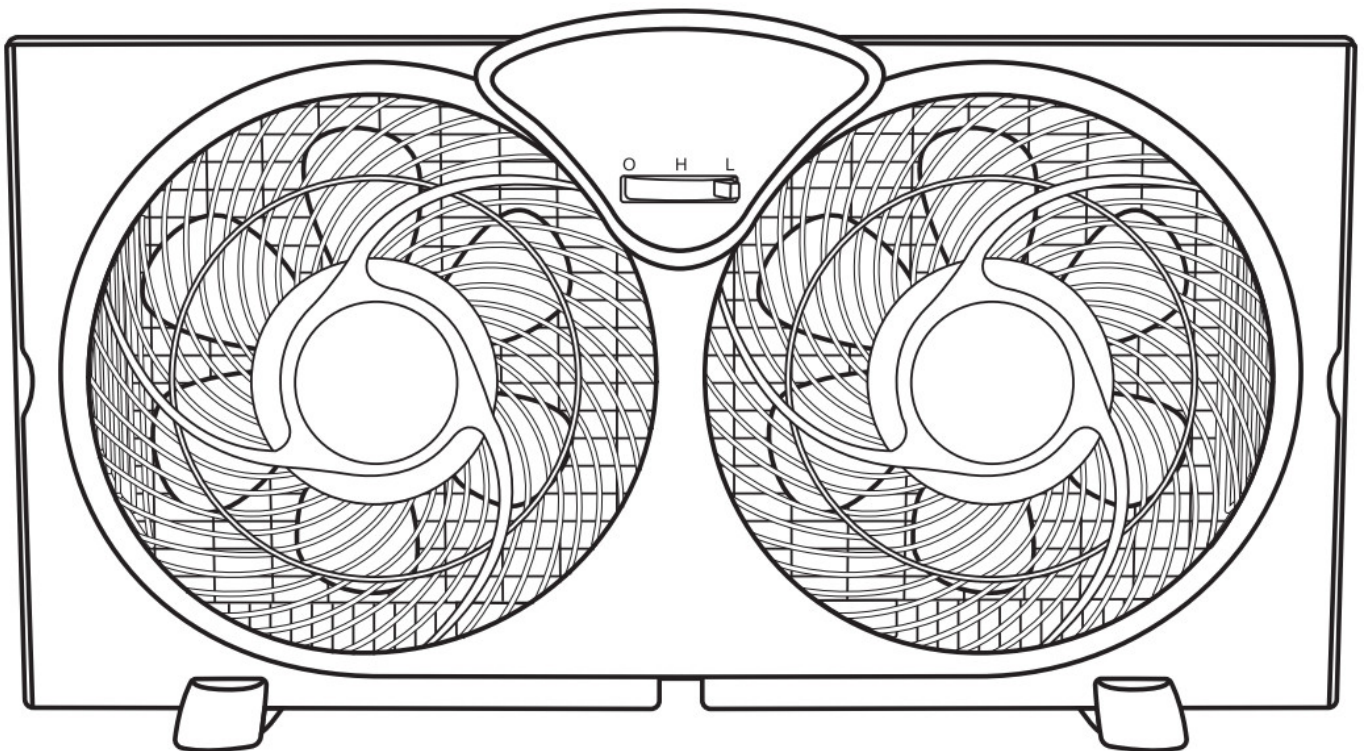

B07YJCTXNS

## Contents

### 1 IMPORTANT SAFETY INSTRUCTIONS

#### 2 Intended Use

#### 3 Product Description

#### 4 Before First Use

#### 5 Installation

#### 6 Operation

#### 7 User Servicing Instructions

#### 8 Cleaning and Maintenance

#### 9 Feedback and Help

#### 10 Documents / Resources

##### 10.1 References

#### 11 Related Posts

## IMPORTANT SAFETY INSTRUCTIONS



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:



### **WARNING** Risk of injury!

Avoid contacting moving parts. Wait until all components have completely stopped before touching them.



### **CAUTION** Risk of fire!

To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.



### **CAUTION** Risk of electric shock!

To reduce risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting device.

- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product's rating label.
- Do not insert fingers or foreign objects in any opening of the product and do not obstruct the air vents.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not use an extension cord for this fan.
- Do not run under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Never use the product without the safety guard or with a damaged safety guard.
- Do not place any clothes or curtains on the product as they could be sucked into the fan during operation and damage the product.
- During use, keep hands, hair, clothing and utensils away from the safety guard to avoid injuries and damage of the product.
- Unplug or disconnect the appliance from the power supply before servicing.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If

the fuse blows, unplug the product from the outlet.

Replace the fuse according to the instructions in this manual (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

- Do not allow water to drip on or enter into the fan motor housing.

### 1.1 Polarized plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## SAVE THESE INSTRUCTIONS

 
### Intended Use

- This product is intended for household use only. It is not intended for commercial use.
- This product is intended for a fixed installation in a window or as a freestanding unit. The power cord must be connected to indoor GFCI protected receptacles only.

This product is not intended for use in bathrooms, laundry areas and similar indoor locations.

- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

### Product Description

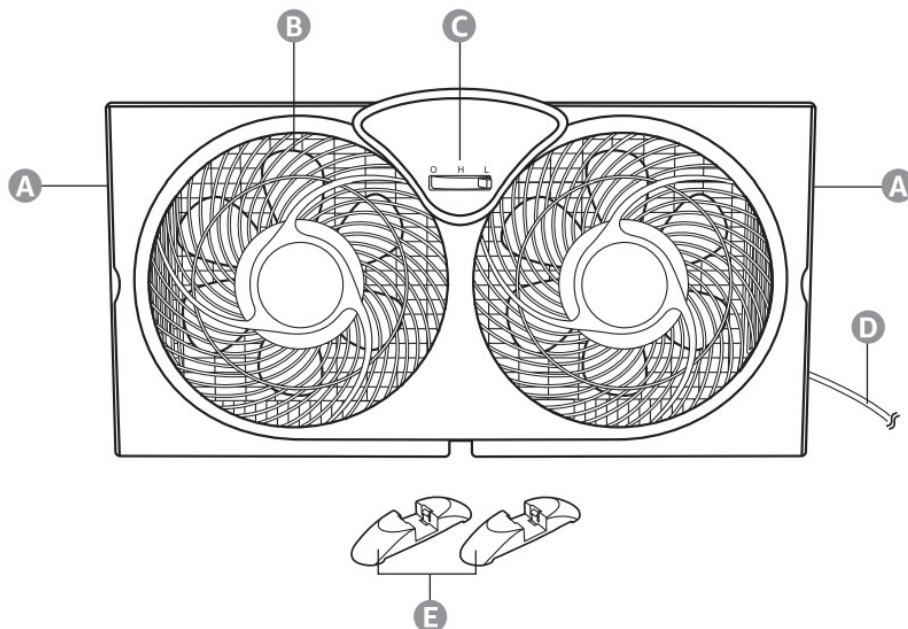

### Before First Use

- Check the product for transport damages.
- Remove all the packing materials.
- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product rating label.



 
## **DANGER** Risk of suffocation!

Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

## **Installation**

### **5.1 Floor/table installation**


**NOTICE** | The product should be placed at a minimum distance of 3.9" (10 cm) from the wall or other obstacles.

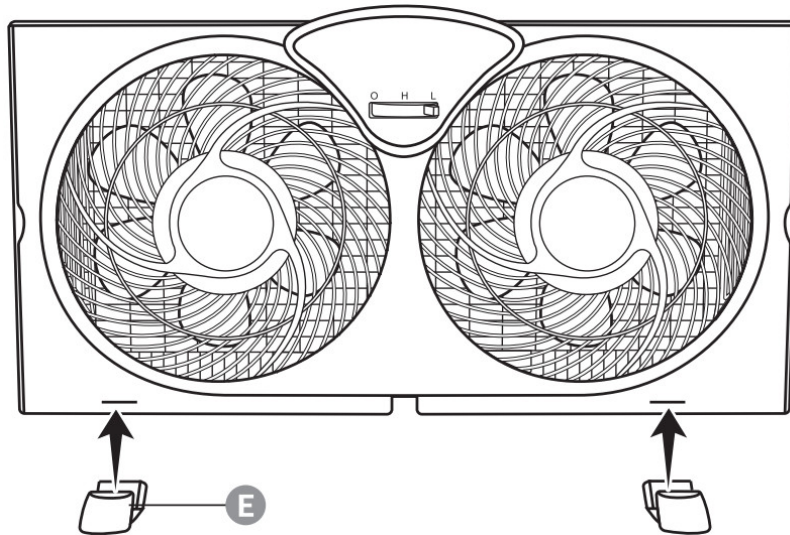

Align the stands (E) with the indents on the main body. Push the stands in until they snap in place.

### **5.2 Window installation**

 The product can be installed in double-hung windows with minimum openings of 24.4" (62 cm) in width and 13" (33 cm) in height.

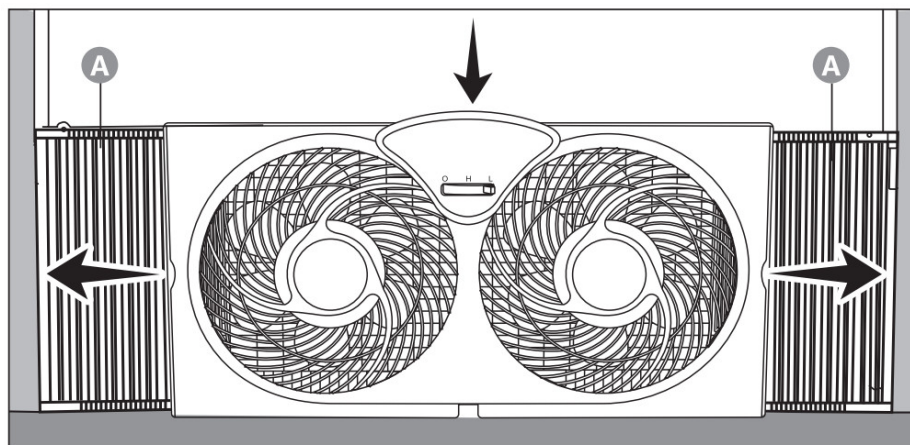

- Place the product on the window sill.
- Fully extend the accordion shutters (A) until the product fits the window frame.
- Close the window sash, so it rests on the top of the product.

## **Operation**

### **6.1 Switching on/off**

- To switch the product on, set the control switch (C) to H or L position.
- To switch the product off, set the control switch (C) to O position.

 
## 6.2 Fan modes

The product features two fan modes:

Mode	Function
H	High airflow
L	Low airflow

## User Servicing Instructions

**NOTICE** The product requires a 2.5 A 125 V fuse.

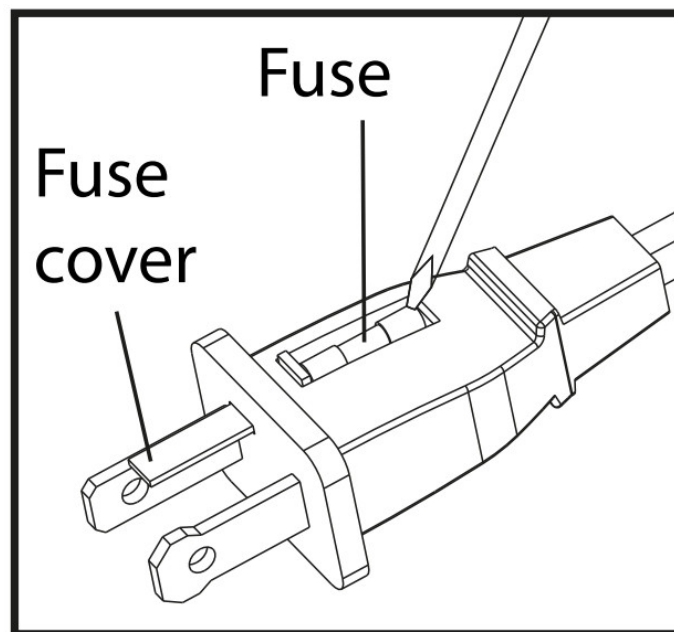

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Slide open fuse access cover on top of attachment plug towards blades.
- Remove fuse carefully by using a small screwdriver to pry the fuse out of the compartment by the metal ends of the fuse.
- Risk of fire. Replace only with 2.5 A, 125 Volt fuse.
- Slide closed the fuse access cover on top of the attachment plug.

## Cleaning and Maintenance



**WARNING** Risk of electric shock!

- To prevent electric shock, unplug the product before cleaning.
- During cleaning do not immerse the product in water or other liquids. Never hold the product under running water.



## 8.1 Cleaning

- To clean the product, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

## 8.2 Storage

Store the product in its original packaging in a dry area. Keep away from children and pets.

## 8.3 Maintenance

Any other servicing than mentioned in this manual should be performed by a professional repair centre.

Model number:	BO7YJCTXN5, WDF9-1S
Rated voltage:	120 V~, 60 Hz
Power consumption:	68 W
Net weight:	5.85 lbs (2.66 kg)
Dimensions with stands (WxHxD):	approx. 23.4 x 12.6 x 5.35" (59.4 x 32 x 13.6 cm)
Dimensions without stands (WxHxD):	approx. 23.4 x 12.6 x 3.35" (59.4 x 32 x 8.5 cm)

## Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.

Scan QR Code below with your phone camera or QR reader:



[https://www.amazon.com/review/review-your-purchases/listing/?ref=HPB\\_UM\\_CR](https://www.amazon.com/review/review-your-purchases/listing/?ref=HPB_UM_CR)

If you need help with your Amazon Basics product, please use the website or number below.




[amazon.com/gp/help/customer/contact-us](https://www.amazon.com/gp/help/customer/contact-us)



+1877-485-0385

**amazon basics**

Documents / Resources
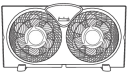
<div><div>amazon basics</div><div></div><div><div>Window Fan with Twin 9 Inch Blade</div><div>Qualitätsfan mit Twin 9-Zoll-Blättern aus 5-Power (22,85 cm)</div><div>Qualitätsfan mit Twin 9-Zoll-Blättern aus 5-Power (22,85 cm)</div><div>B07YJCTXN5</div><div>Page 2</div><div>Page 12</div></div></div>	<p><a href="#">amazon basics B07YJCTXN5 Window Fan with Twin 9 Inch Blade</a> [pdf] User Manual B07YJCTXN5 Window Fan with Twin 9 Inch Blade, B07YJCTXN5, Window Fan with Twin 9 Inch Blade, Twin 9 Inch Blade, 9 Inch Blade</p>
--	--

References

- [User Manual](#)