

amazon basics B07ZVMQ9B9 Recycled Wood Rectangular Garden Planter



amazon basics B07ZVMQ9B9 Recycled Wood Rectangular Garden Planter User Manual

[Home](#) » [amazon basics](#) » amazon basics B07ZVMQ9B9 Recycled Wood Rectangular Garden Planter User Manual 

Contents

- [1 amazon basics B07ZVMQ9B9 Recycled Wood Rectangular Garden Planter](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 Planting Tips](#)
- [4 Cleaning and Maintenance](#)
- [5 Maintenance](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)








amazon basics B07ZVMQ9B9 Recycled Wood Rectangular Garden Planter




IMPORTANT SAFEGUARDS


Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

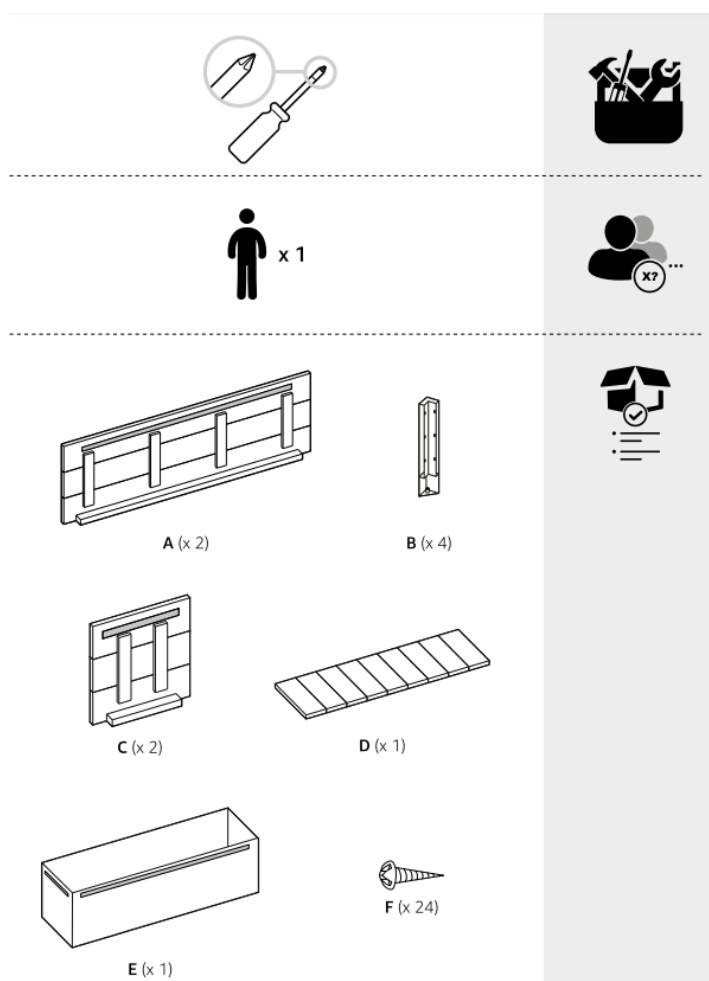

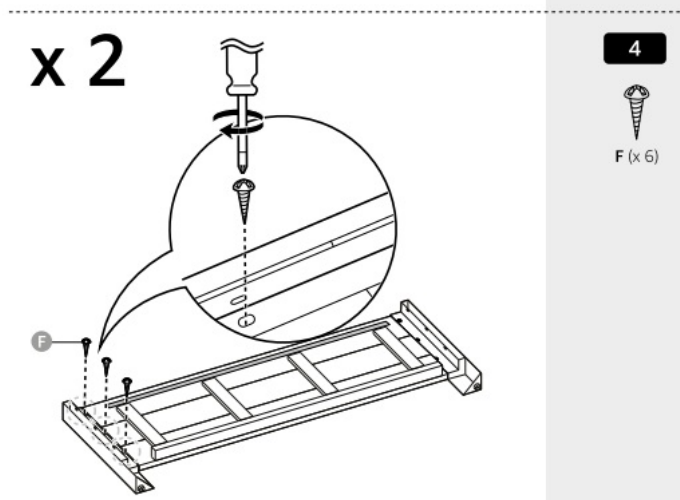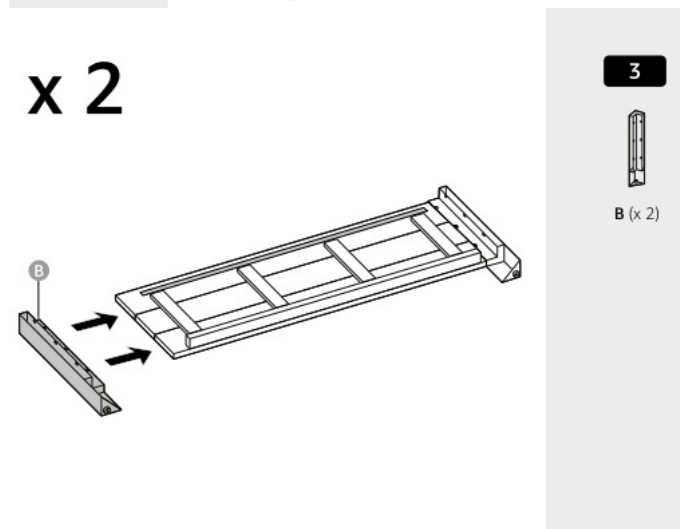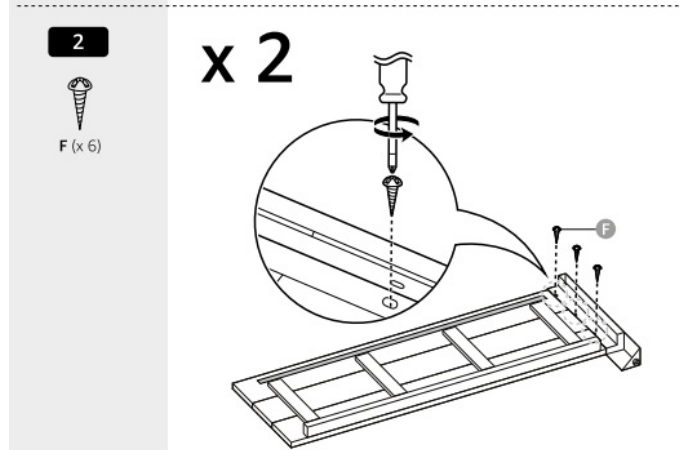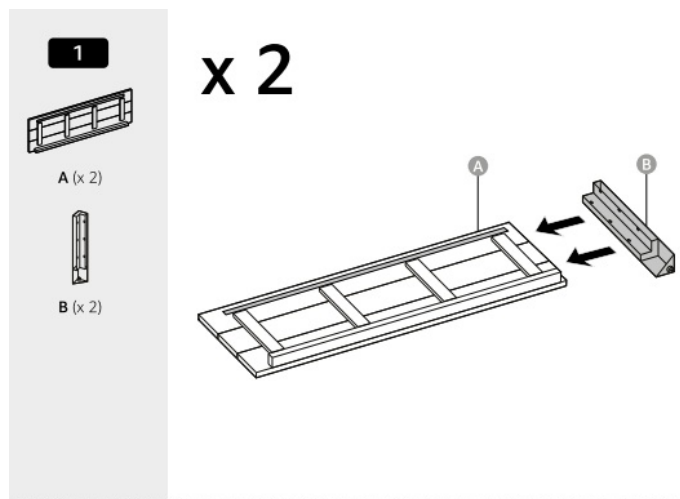

2. A competent adult must assemble this product.
3. Keep children and pets away while assembling the product.
4. Do not let children climb on the product.
5. Always use the product on a firm, level ground.

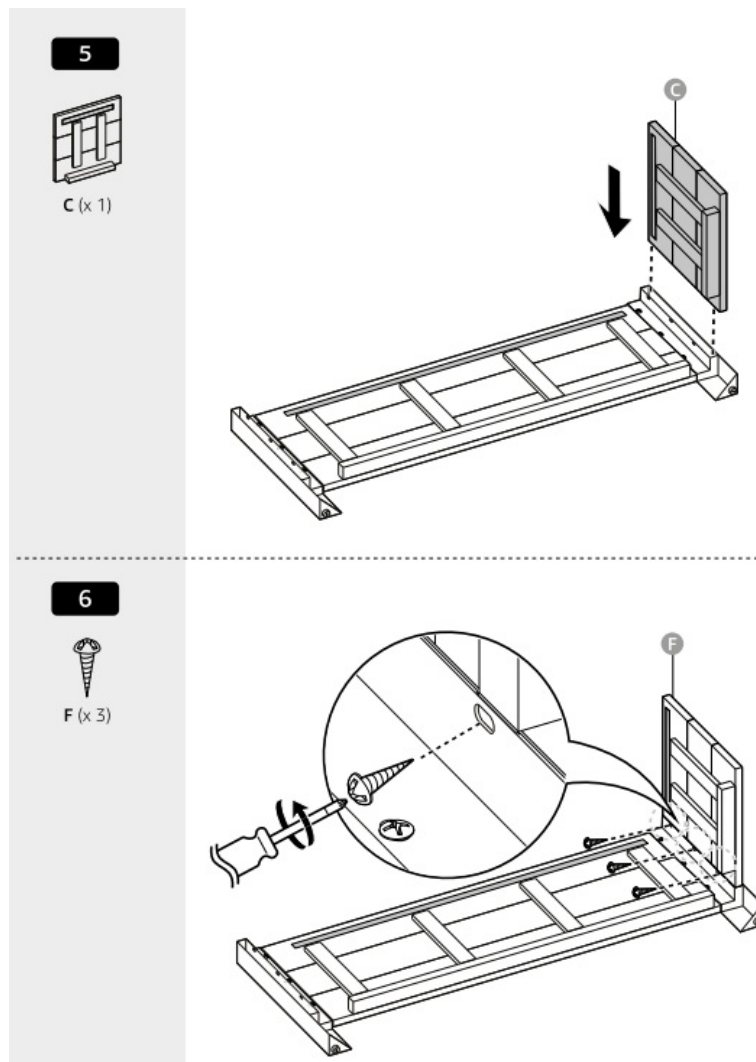


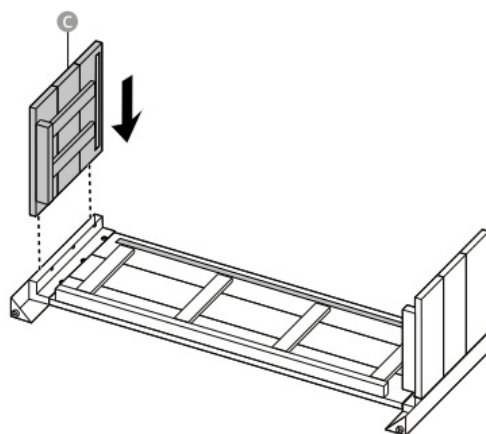

7



C (x 1)

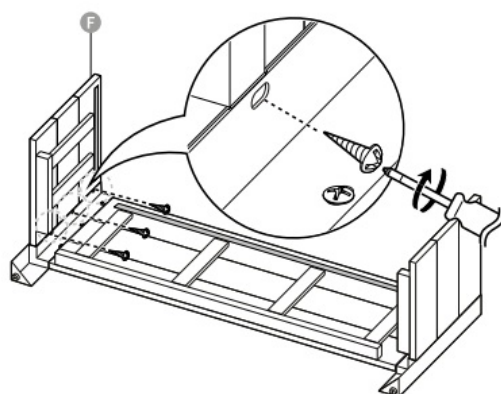

8




F (x 3)

6. Do not use this product if any parts are missing, damaged, or worn.
7. Do not overtighten the fasteners.
8. Regularly examine the product for wear and tear.


9




D (x 1)

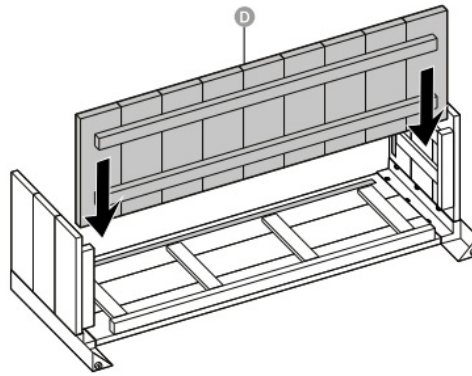

10

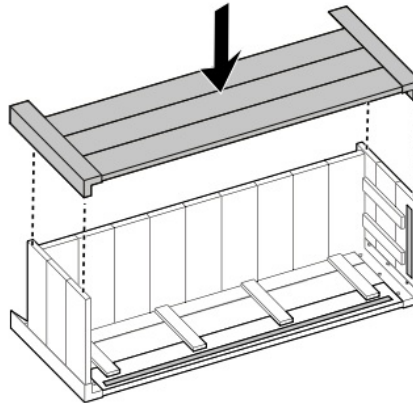

9. Stop using the product at the first sign of damage or if parts become detached.

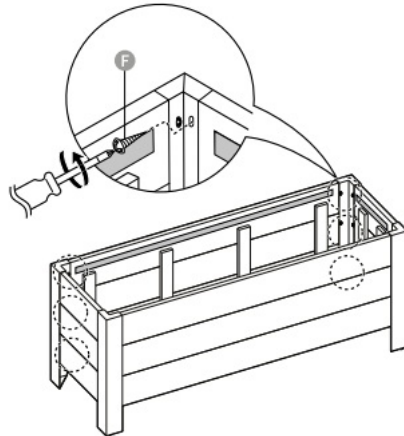

11




F (x 6)

12



E (x 1)

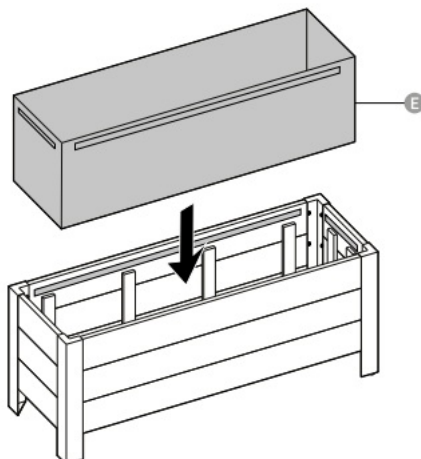

CAUTION

Risk of hand injury! This product might contain splinters. Wear protective gloves during assembly.

Before First Use

- Check the product for transport damages.
- Remove all the packing materials.

LA DANGER

Risk of suffocation! Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

Before First Use

- Check the product for transport damages.
- Remove all the packing materials.

DANGER

Risk of suffocation! Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

Planting Tips

- Add water every couple of days when plants are small/young.
- Increase to daily watering as the plants mature.
- For best results use a strip of common, dry, granular fertilizer or plant food for vegetables.
- Do not overcrowd the planter. This product does not include a fertilizer strip.
- Select a sunny spot with a minimum of 8 hours of daily sunshine for warm-season crops such as tomatoes, pepper, and eggplant.
- Select a partial shade for cool-season crops such as lettuce, spinach, and arugula.
- Do not use compost or growing media that contains rock, clay, sand or topsoil.
- Tall plants (tomatoes, cucumbers, eggplants etc.) and vines require support as they grow.
- Stakes or small cages can be inserted into the planter to support these plants as they mature.

Cleaning and Maintenance

Cleaning

- To clean the product, wipe with a soft, slightly moist cloth.
- Pressure cleaners can be used for cleaning.
- Never use corrosive detergents, wire brushes, abrasive scourers, or metal or sharp utensils to clean the product.

Maintenance

- Regularly check that all the components and fasteners are tightened.
- Avoid any vibrations and shocks.

Dispose of the product according to local regulations. If in doubt, consult your local authorities.

	For EU
Postal	Amazon EU S.à r.l. 38 avenue John F. Kennedy, L-1855 Luxembourg
Business Reg.	134248
	For UK
Postal	Amazon EU SARL, UK Branch 1 Principal Place, Worship St, London EC2A 2FA, United Kingdom
Business Reg.	BR017427

UK: [amazon.co.uk/review/review-your-purchases#](https://www.amazon.co.uk/review/review-your-purchases#)

amazon basics

[amazon basics B07ZVMQ9B9 Recycled Wood Rectangular Garden Planter](#) [pdf] User Manual

B07ZVMQ9B9 Recycled Wood Rectangular Garden Planter, B07ZVMQ9B9, Recycled Wood Rectangular Garden Planter, Wood Rectangular Garden Planter, Rectangular Garden Planter, Garden Planter, Planter

- User Manual

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.