 




amazon basics B0842DLRVM Electric Scalp Massager Instruction Manual

[Home](#) » [amazon basics](#) » amazon basics B0842DLRVM Electric Scalp Massager Instruction Manual 

amazon basics

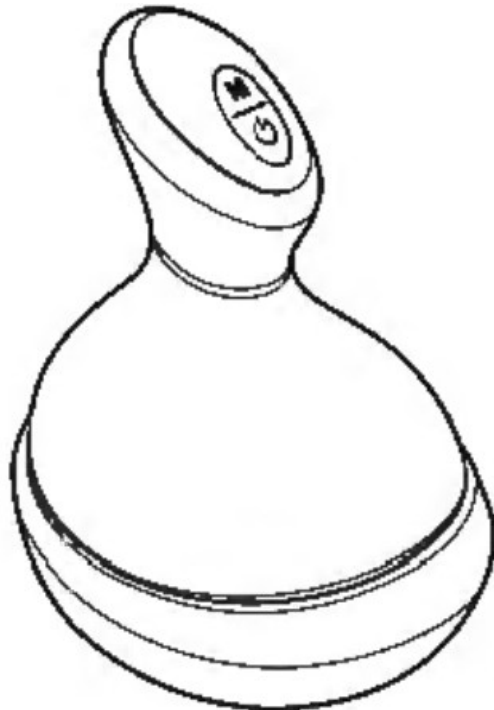

Electric Scalp Massager
B0842DLRVM

Contents

- 1 Important Safety Instructions
- 2 Symbols Explanation
- 3 Product Description
- 4 Before First Use
- 5 Operation
- 6 Cleaning and Maintenance
- 7 Troubleshooting
- 8 FCC – Supplier's Declaration of Conformity
- 9 FCC Compliance Statement
- 10 Battery Disposal
- 11 Specifications
- 12 Importer Information
- 13 Feedback and Help
- 14 Documents / Resources
 - 14.1 References

Important Safety Instructions



When using an electrical appliance, basic precautions should always be followed, including the following: Read these instructions carefully before using and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:



WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.



WARNING

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails,

screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

WARNING

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion. The temperature of 130°C can be replaced by the temperature of 265°F.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.
- Use only with Listed Certified Information Technology (Computer). Equipment or Certified ITE Power Supply or Class 2 power unit.
- Do not use the appliance continuously for longer than 10 minutes to avoid overheating. Let the appliance cool down before using it again.
- The appliance is only to be used with the accessories provided.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Do not use on an infant, invalid or on a sleeping or unconscious person.
- Keep all hair, clothing and jewellery clear of the massage mechanism or any other moving parts of the appliance at all times.
- Do not use the appliance directly on:

a	Irritable skin conditions
b	Varicose veins
C	The throat area
d	Genital areas
e	Unconscious or sleeping person
f	Acute conditions requiring first aid or medical attention
h	Deep vein thrombosis
i	Recent burn
j	Recent surgery
k	Frostbite
m	Severe unstable hypertension Acute flare-up of inflammatory conditions such as rheumatoid arthritis

- Consult your doctor prior to using the appliance if you are pregnant, if you have a pacemaker or if you have any concerns regarding your health.
- If you feel any discomfort whilst using this appliance, discontinue use and consult your doctor.

For Europe:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved. Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision. Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
Appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
-

SAVE THESE INSTRUCTIONS

Battery Warnings



DANGER Risk of explosion!

Risk of explosion if the battery is replaced by an incorrect type.

- Do not mix old and new batteries or batteries of different types or brands.
- Exhausted batteries should be immediately removed from product and properly disposed.
- When discharged batteries are kept in the equipment for a long time, electrolyte leakage can occur causing damage to the equipment and/or personal injury.
- Keep batteries out of the reach of children.
- Do not dispose of batteries in fire.
- Remove batteries from product if it is not to be used for an extended period of time unless it is for emergency purposes.

- If the battery leaks avoid contact with skin and eyes. Rinse affected areas immediately with plenty of clean water, then consult a doctor.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- When used correctly, primary batteries provide a safe and dependable source of portable power. However, misuse or abuse may result in leakage, fire, or rupture. Always take care to install your batteries correctly observing the “+” and “-” marks on the battery and the product. Batteries that are incorrectly placed into some equipment may be short-circuited, or charged. This can result in a rapid temperature rise causing venting, leakage, rupture and personal injury.
- Replace all batteries of a set at the same time. When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.
- Store unused batteries in their original packaging and away from metal objects. Unpacked batteries could be jumbled or get mixed with metal objects. This can cause battery short-circuiting which may result in venting, leakage and rupture and personal injury; one of the best ways to avoid this happening is to store unused batteries in their original packaging.
- Remove discharged batteries from product promptly to avoid possible damage from leakage. When discharged batteries are kept in the product for a long time, electrolyte leakage may occur causing damage to the product and/or personal injury.
- Never dispose of batteries in fire. When batteries are disposed of in fire, the heat build-up may cause rupture and personal injury. Do not incinerate batteries except for approved disposal in a controlled incinerator.
- Never attempt to recharge primary batteries. Attempting to charge a non- rechargeable (primary) battery may cause internal gas and/or heat generation resulting in venting, leakage, rupture and personal injury.
- Never short circuit batteries as this may lead to high temperatures, leakage, or rupture. When the positive (+) and negative (-) terminals of a battery are in electrical contact with each other, the battery becomes short-circuited. This may result in venting, leakage, rupture and personal injury.
- Never heat batteries in order to revive them. When a battery is exposed to heat, venting, leakage and rupture may occur and cause personal injury.
- Remember to switch off products after use. A battery that has been partially or completely exhausted may be more prone to leak than one that is unused.
- Never attempt to disassemble, crush, puncture or open batteries. Such abuse may result in venting, leakage, and rupture, and cause personal injury.
- Keep batteries out of the reach of children, especially small batteries that could be easily ingested.
- Immediately seek medical attention if a cell or battery has been swallowed. Also, contact your local poison control center.

NOTICE

The batteries are not included.

NOTICE

The batteries are not included.

- Always insert batteries correctly with regards to polarity (+ and -) marked on the battery and the product.

- Exhausted batteries should be immediately removed from product and properly disposed.



DANGER


Risk of explosion!

- Do not leave the battery in an extremely high temperature surrounding environment that can result in an explosion of the battery.
- Disposal of the product into fire or a hot oven, or mechanically crushing or cutting of a battery that can result in an explosion of the battery.
- Do not subject the battery to extremely low air pressure that may result in an explosion of the battery.



DANGER

Risk of explosion!

- Risk of explosion if the battery is replaced by an incorrect type.
- This product contains batteries that are non-replaceable.
- Before disposal, the battery must be removed from the product. Contact qualified professional.
- Do not leave the battery charging for a prolonged period of time when the product is not in use.
- Do not charge the battery overnight.
- If the product appears to be bulging or shows other undesirable phenomena (e.g. excess noise), stop using the product immediately.
- Do not cover the product while charging the battery. Charge the product in a well-ventilated environment.
- When in long term storage, charge the battery to its 70% capacity once every 3 months to avoid shortening its life.
- Batteries produce heat when charging and discharging. If the product becomes too hot to touch, switch the product off and unplug immediately.
- Charge the product only with a compatible power source from reputable manufacturer e.g. power adapter or power bank. The maximum rating should not exceed 5 V1  1A.
- If the battery leaks, avoid contact with skin and eyes. Rinse affected areas immediately with plenty of clean water, then consult a doctor.

Intended Use

- This product is intended for to provide a soothing and relaxing massage to the scalp.
- Do not use the product as a substitute for medical attention.
- This product is intended for household use only. It is not intended for commercial use.
- The main unit is rated IPX6 and can be used under shower.
- The charging base is not water resistant and should be used only in dry areas.
- Do not immerse the main unit in water as it is not waterproof.

Symbols Explanation



 
This symbol stands for “Conformité Européenne”, which declares “Conformity with EU directives,


regulations and applicable standards". With the CE-marking, the manufacturer confirms that this product complies with applicable European directives and regulation.



This symbol stands for "United Kingdom Conformity Assessed". With the UKCA-marking, the manufacturer confirms that this product complies with applicable regulations and standards within Great Britain.

Product Description

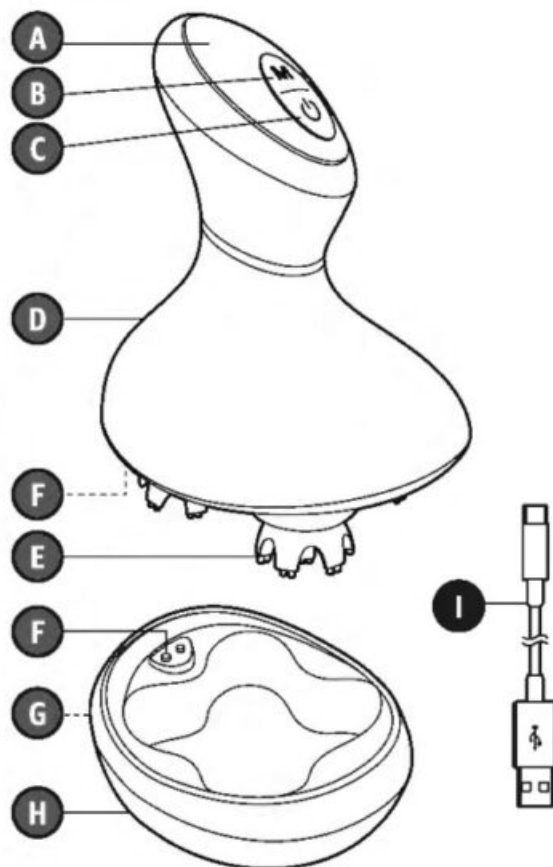

- A** Display
- B** M (mode) button
- C**  button
- D** Main unit
- E** Massage heads x4
- F** Charging pins
- G** USB port
- H** Charging base
- I** USB cable

Before First Use



DANGER Risk of suffocation!

Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

- Check the product for transport damages.
- Remove all the packing materials, including the protective film on the display (A).

Operation


Charging the product



WARNING Risk of electric shock!

- The charging base (H) is not water resistant. If the main unit (D) is wet, dry it before charging. Never short-circuit the 2 contact pins on the charger base (H).

NOTICE

The icon  flashes on the display (A) when battery is low.
The main unit (D) cannot be used while charging.

1. Connect the USB cable (I) to the USB port (G) of the charging base (H) and to a suitable power source.
2. Place the main unit (D) into the charging base (H).

Battery empty: The  icon blinks fast.

Battery low or charging: The  icon flashes slowly.


Battery full: The  icon stays on.

3. After charging, unplug the USB cable (I) from the USB port (G).

Switching on/off

NOTICE

The main unit (D) can be used under the shower.

Press the  button (C) to switch the product on/off.

Switching modes

NOTICE

The default massage mode at startup is L (low) speed massaging inwards.

Press the M button (B) repeatedly to switch between different massage modes. The 4 modes are:

 
1. L (low) speed massaging inwards (L is shown on the display (A))
2. H (high) speed massaging inwards (H is shown on the display (A))
3. L (low) speed massaging outwards (L is shown on the display (A))
4. H (high) speed massaging outwards (H is shown on the display (A))

Cleaning and Maintenance



WARNING Risk of electric shock! To prevent electric shock, unplug the product before cleaning.

Cleaning the main unit

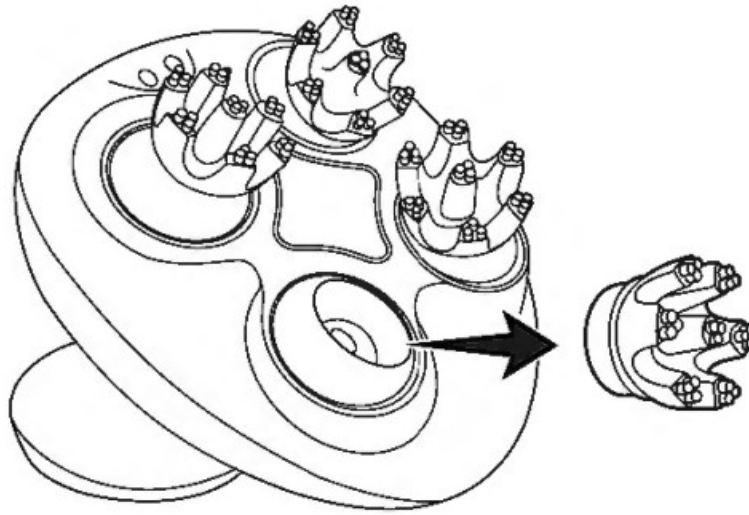

- The massage heads (E) can be removed for cleaning.
- Rinse the main unit (D) under water then wipe it dry.

Cleaning the charging base

To clean the charging base, wipe with a soft, slightly moist cloth.

Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Storage

Store the product in its original packaging in a dry area. Keep away from children and pets.

Troubleshooting

Problem	Solution
The product switches off suddenly.	The product was continuously on for more than 10 minutes. Let the product cool for 5 minutes and restart.

FCC – Supplier's Declaration of Conformity

Unique Identifier	B0842DLRVM – Scalp Massager – White
Responsible Party	Amazon.com Services LLC.
U.S. Contact Information	410 Terry Ave N. Seattle, WA 98109, United States
Telephone Number	206-266-1000

FCC Compliance Statement

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 1. this device may not cause harmful interference.
 2. this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Canada IC Notice

This Class B digital apparatus complies with Canadian CAN ICES-3(B) / NMB-3(B) standard

Disposal (for Europe only)




The Waste Electrical and Electronic Equipment (WEEE) laws aim to minimise the impact of electrical and electronic goods on the environment and human health, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centres in order to conserve natural resources. Each country should have its collection centres for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

Battery Disposal



Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.

Specifications

Model number	B0842DLRVM
Rated voltage	5V  1A
Power consumption	5 W
Battery capacity/type	1200 mAh, Li-ion battery
Protection class	Class III
IP rating	Massager: IPX6 Charging base: IPX0
Manufacturer	XIAMEN COMFORT SCIENCE & TECHNOLOGY GROUP CO.,LTD
Address	168#, Qianpu Road, Siming Zone, Xiamen Fujian, China

Importer Information

For EU

Postal:	Amazon EU S.à r.l., 38 avenue John F. Kennedy, L-1855 Luxembourg
Business Reg.:	134248

For UK

Postal:	Amazon EU SARL, UK Branch, 1 Principal Place, Worship St, London EC2A 2FA, United Kingdom
Business Reg.:	BR017427

Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.

Scan QR Code below with your phone camera or QR reader:



https://www.amazon.com/review/review-your-purchases/listing/?ref=HPB_UM_CR

If you need help with your Amazon Basics product, please use the website or number below.



US: [amazon.com/gp/help/customer/contact-us](https://www.amazon.com/gp/help/customer/contact-us)

UK: amazon.co.uk/gp/help/customer/contact-us



+1877-485-0385 (US Phone Number)

amazon basics

UK
CA

MADE IN CHINA



V02-01/24

Documents / Resources



[amazon basics B0842DLRVM Electric Scalp Massager](#) [pdf] Instruction Manual
B0842DLRVM Electric Scalp Massager, B0842DLRVM, Electric Scalp Massager, Scalp Massag
er, Massager

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.