



amazon basics B084ZGMX1K 12 Cup Digital Coffee Maker with Reusable Filter User Manual

[Home](#) » [amazon basics](#) » amazon basics B084ZGMX1K 12 Cup Digital Coffee Maker with Reusable Filter User Manual 

Contents

- [1 amazon basics B084ZGMX1K 12 Cup Digital Coffee Maker with Reusable Filter](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 Product Description](#)
- [4 Before First Use](#)
- [5 Operation](#)
- [6 Cleaning and Maintenance](#)
- [7 Troubleshooting](#)
- [8 Specifications](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



amazon basics B084ZGMX1K 12 Cup Digital Coffee Maker with Reusable Filter



Warning label on the appliance:

WARNING

- RISK OF FIRE OR ELECTRIC SHOCK
- DO NOT OPEN
- WARNING, TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK,
- DO NOT REMOVE COVER (OR BACK)
- NO USER-SERVICEABLE PARTS INSIDE
- REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY

IMPORTANT SAFEGUARDS

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included. When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

- The exclamation point within equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
- The lightening flash with arrowed symbol, within equilateral triangle, is intended to alert the user to the presence of insulated “dangerous voltage” within the product’s enclosure that may be sufficient magnitude to constitute a risk of fire or electric shock to person.

WARNING Risk of burn!

- Steam evaporates from the product when in operation. Do not place hands on or near the product when in operation.
- To avoid the risk of injury, do not open the brew chamber during the brew process.
- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- Do not immerse in water.
- To protect against electric shock, do not place cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to the off position, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.
- The container is designed for use with this appliance. It must never be used on a range top.
- Do not set a hot container on a set or cold surface.
- Do not use a cracked container or a container having a loose or weakened handle.
- Do not clean container with cleansers, steel wool pads, or other abrasive material.
- To reduce the risk of fire or electric shock, do not place any electric or gas heating appliance beneath the drip-type coffee maker.
- Extreme caution must be used when moving an appliance containing hot food, hot oil, water or other hot liquids.
- Unplug from outlet when either the appliance or display clock is not in use, and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

Plug and cord instruction

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Extension cords are available and may be used if care is exercised in their use. If an extension cord is used,
 - the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.


- the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

Intended Use

- This product is intended for brewing coffee.
- This product is intended for household use only. It is not intended for commercial use.
- No liability will be accepted for damages resulting from improper use or non compliance with these instructions.

Product Description

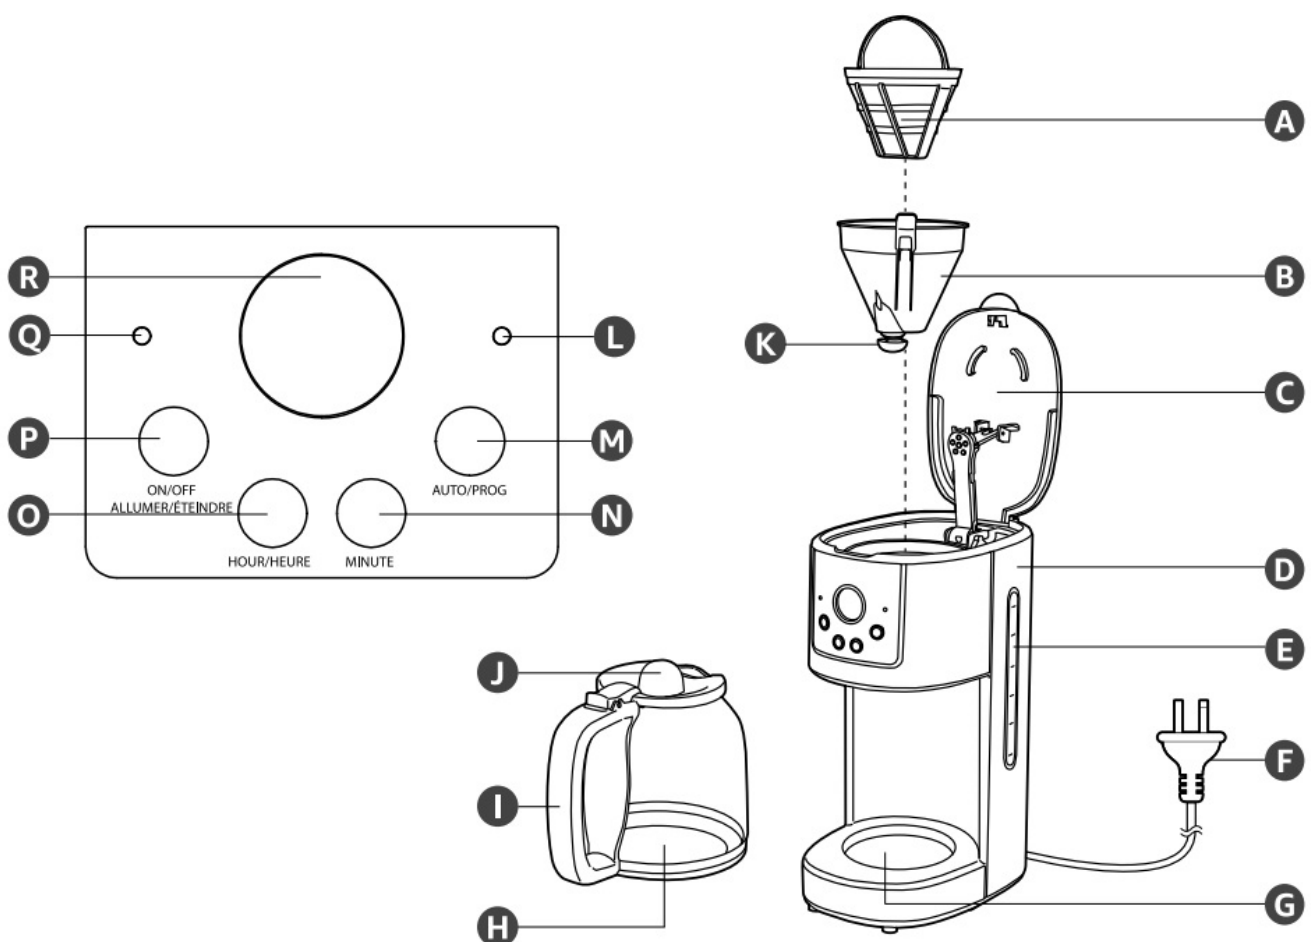

- A. Filter
- B. Filter holder
- C. Water tank lid
- D. Water tank
- E. Water level gauge
- F. Power cord with plug
- G. Warm plate
- H. Container
- I. Handle

- **J.** Lid
- **K.** Anti-leak valve
- **L.** Auto/prog mode indicator
- **M.** AUTO/PROG button
- **N.** MINUTE button
- **O.** HOUR button
- **P.** ON/OFF button
- **Q.** On/off indicator
- **R.** Display

Before First Use

DANGER- Risk of suffocation!

Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

NOTICE: Make sure the water tank lid (C) is closed before switching on the product.

- Check the product for transport damages.
- Remove all the packing materials.
- Clean the product before first use.
- Place the product on a dry, level and heat-resistant surface.
- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product rating label.

Preparing the product

- To clean the manufacturing residues, operate the product as described in chapter 5.1: Brewing coffee, but without coffee.
- Discard the water afterwards.

Operation


Brewing coffee

CAUTION Risk of burn!

Take extra caution when removing the container (H) during the brewing process as hot liquids can splatter and cause serious injuries.

NOTICE

- During the brewing process, HOUR button (O), MINUTE button (N) and AUTO/ PROG button (M) cannot be used.
- You can remove the container (H) during brewing to pour coffee. Place back the container (H) as soon as possible to continue brewing.
- Paper filters can be used instead of the provided nylon filter (A) providing the water tank lid (C) can be closed properly.

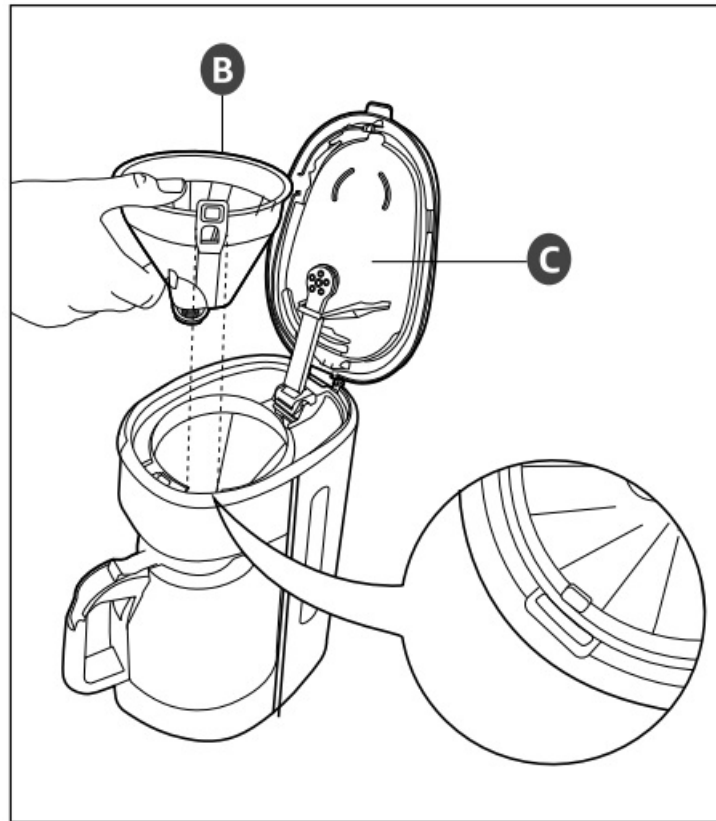

1. Open the water tank lid (C) and fill the water tank (D) with drinking water. Do not exceed the MAX level as indicated on the water level gauge (E).
2. Place the filter holder (B) into brewing compartment. The groove on the water tank rim should align with the groove on the filter holder (B).
3. Place the filter (A) into the filter holder (B).
4. Add grounded dry coffee to the filter according to the instructions on the coffee packaging then close the water tank lid (C).
5. Place the container (H) with lid (J) closed onto the warm plate (G). Align the center of the container (H) to the bottom of the filter holder (B) and anti-leak valve (K).
6. Connect the plug (F) to a suitable outlet. The display (R) lights up.
7. Press the ON/OFF button (P) to start the brewing process. The on/off indicator (Q) lights up and shows 12:00 AM.
8. Wait until all the water has run through. Press the ON/OFF button (P) to switch off the product. The on/off indicator (Q) goes off.
9. The product beeps 3 times to indicate the brewing process has finished.
10. After the brewing process, the warm plate (G) automatically turns on to keep the coffee warm, and stays on for 2 hours including brewing time and goes off automatically.
11. Wait until no liquid remains in the filter (A), then remove the container (H) from the warming plate (G) to serve coffee.

NOTICE

- The filter holder (B) is equipped with an anti-leak valve (K) to prevent the coffee from dripping if the container (H) is temporarily removed from the warming plate (G).
- Let the product cool down for at least 3 minutes before starting another brewing cycle.

Brewing tips

NOTICE A small proportion of water is absorbed by the dry coffee. The amount of coffee brewed will always be slightly less than water which was added at the beginning.

- Always use fresh cold drinking water when filling up the water tank (D).
- For optimal tasting coffee, buy whole coffee beans and grind finely before brewing each time.
- Keep the product clean by following steps from chapter 6.1: Cleaning and 6.2: Descaling.
- Do not reuse coffee grounds.
- Do not reheat brewed coffee.
- Store unused coffee beans in a cool, dry place. After opening, reseal the coffee tightly to maintain freshness.

Setting the clock

NOTICE

- Clock setting works only when the product is on standby mode.
 - Clock must be set each time the product is unplugged from the outlet.
1. On standby mode, press the HOUR button (0) repeatedly to set the hour. Continue pressing the HOUR button (0) to select PM hours.
 2. Press the MINUTE button (N) repeatedly to set the minutes.
 3. The product automatically saves the time once you finish

Setting a delayed start time

CAUTION Risk of burns!

Be careful when using delayed start function with children around as the product will get very hot. Continuous observation should be exercised when using auto/prog mode.

NOTICE The clock needs to be set to use the delayed start time function.

1. On standby mode, press the AUTO/PROG button (M). The display (R) and auto/prog indicator (L) starts flashing.
2. Press the HOUR button (0) repeatedly to set the hour. Continue pressing the HOUR button (O) to select PM hours.
3. Press the MINUTE button (N) repeatedly to set the minutes.
4. Press the AUTO/PROG button (M) to save the set time.
5. Press and hold the AUTO/PROG button (M) for 3 seconds to activate the delayed start time function. The auto/prog indicator (L) stays lit.
6. After a 3 seconds, the current time appears on the display (R).
7. To cancel the delayed brewing time function, press and hold AUTO/PROG button (M) for 3 seconds. The auto/prog indicator (L) goes off.

Cleaning and Maintenance

WARNING Risk of electric shock!

- To prevent electric shock, unplug the product before cleaning.

- During cleaning do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.

CAUTION Risk of burns!

The product is hot during and after operation. Allow the product to cool down before cleaning and maintenance.

Cleaning

- Wipe the exterior of the product with a soft, slightly moist cloth after each use.
- Clean the filter (A), filter holder (B) and container (H) with hot soapy water after each use. These parts are dishwasher safe.
- Wipe off the water droplets from the inside of the water tank lid (C) after each use to prevent water from dripping into the base of the product.
- Wipe the warm plate (G) with a slightly moist cloth. Never use abrasive cleaner to clean it.
- Dry the product after cleaning.

NOTICE

- Never use corrosive detergent, wire brushes, abrasive scourers, metal or sharp utensils to clean the product
- For optimal performance, it is recommended to clean the product once a week or more depending on the frequency of use.

Descaling

1. Fill the water tank (D) with water mixed with 5-15% vinegar solution or house hold descaler.
2. Operate the product as described in chapter 5.1: Brewing coffee, but without coffee.
3. As soon as the brewing process is finished, dispose of the water with descaling agent. Do not dispose of in enameled sinks. Do not use the same solution for a second time. If the results are not satisfactory repeat the process.
4. Residues of the descaling agent can affect the coffee taste. Let the coffee maker complete 2 or 3 brewing cycles with clear water to remove all residues.
5. Clean the product afterwards.

NOTICE Descale the product regularly. The intervals depend mainly on your household's water hardness and the frequency of use. Only use commercially available descaling agents and follow the manufacturer's instructions.

Storage

- Store the product in its original packaging in a dry area. Keep away from children and pets.
- Clean and dry all parts before storage.

Maintenance

Any other servicing than mentioned in this manual should be performed by an authorized service facility.

Troubleshooting

Problem	Solution
The product does not switch on.	Check if the power plug (F) is connected to the outlet. Check if the outlet works.
The brewing process takes longer than usual.	Mineral deposits can build up after a period of use. Clean the product. Refer to chapter 6.2: Descaling .
Leakage occurs during brewing.	<ul style="list-style-type: none"> ▶ Check if the filter holder (B) and filter (A) are installed correctly. Check if the water tank lid (C) can be closed securely. ▶ Check if the water level does not exceed the MAX marking on the water level gauge (E). ▶ Check if the container (H) has been placed correctly onto the warm plate (G). ▶ Check if filter (A) has not been overfilled with coffee. ▶ The container (H) may not be properly positioned under the anti-leak valve (K). Make sure it is center and aligned with the anti-leak valve (K). ▶ Coffee which has been too finely grounded can cause a blockage. Use only coffee that is ground for automatic drip coffee makers. ▶ When using a paper filter, make sure it is not folded and causing a blockage.
Problem	Solution
The display is on but the brewing does not start.	<ul style="list-style-type: none"> ▶ Press the ON/OFF button (P). The on/off indicator (Q) should light up. ▶ Check if the water tank (D) is filled with water beyond the 2 marking on the water level gauge (E). ▶ Clean your product. Mineral deposits maybe clogging the system. Refer to chapter 6.2: Descaling.
Coffee taste abnormal.	<ul style="list-style-type: none"> ▶ Use fresh coffee or coffee beans each time you brew coffee. ▶ Use fresh water each time you brew coffee. ▶ Clean the product. Refer to chapter 6.1: Cleaning and 6.2: Descaling.

Specifications

- **Model number:** CM 9409T-UL
- **Rated voltage:** 120 V~, 60 Hz
- **Power consumption:** 900W
- **Capacity:** 12cups(1.8L)

Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.

Scan QR Code below with your phone camera or QR reader:



If you need help with your Amazon Basics product, please use the website or number below.


amazon.com/gp/help/customer/contact-us

+1 877-485-0385

amazon.com/AmazonBasics

MADE IN CHINA

Documents / Resources

 <p>amazon basics</p> <p>12-Cup Digital Coffee Maker with Reusable Filter Cafetière Numérique 12 Tasses avec Filtre Réutilisable Cafetiera Digital para 12 Tazas con Filtro Reutilizable amazon basics</p> <p>Page 1 Page 2 Page 3 Page 4 Page 5 Page 6 Page 7 Page 8 Page 9 Page 10 Page 11 Page 12 Page 13 Page 14 Page 15 Page 16 Page 17 Page 18 Page 19 Page 20 Page 21 Page 22 Page 23 Page 24 Page 25 Page 26 Page 27</p>	<p>amazon basics B084ZGMX1K 12 Cup Digital Coffee Maker with Reusable Filter [pdf] User Manual</p> <p>B084ZGMX1K 12 Cup Digital Coffee Maker with Reusable Filter, B084ZGMX1K, 12 Cup Digital Coffee Maker with Reusable Filter, Maker with Reusable Filter, Reusable Filter</p>
---	--

References

- [User Manual](#)