 




amazon basics B09S1GBSL3 Grocery Store Checkout Counter Instruction Manual

[Home](#) » [amazon basics](#) » amazon basics B09S1GBSL3 Grocery Store Checkout Counter Instruction Manual 

amazon basics B09S1GBSL3 Grocery Store Checkout Counter

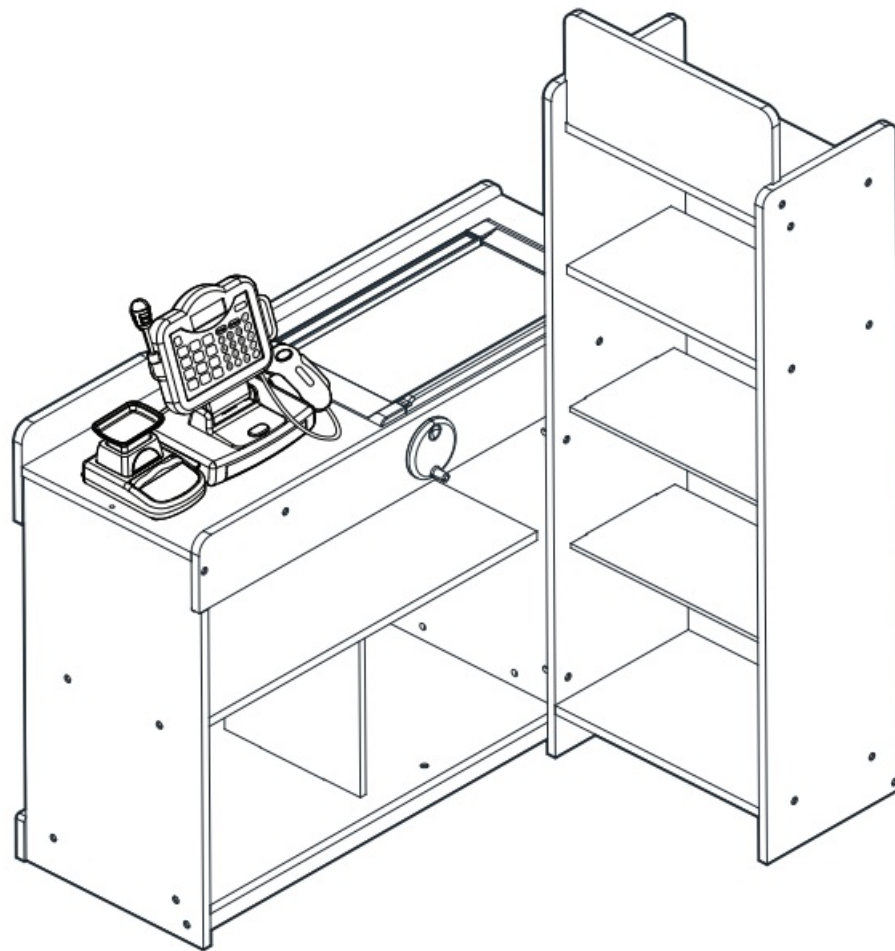

Contents

- 1 Important Safeguards
- 2 Battery Warnings
- 3 Before First Use
- 4 Specifications
- 5 FCC – Supplier's Declaration of Conformity
 - 5.1 FCC Compliance Statement
 - 5.2 FCC Interference Statement
- 6 Tools Needed
- 7 Delivery Content
- 8 Assembly
- 9 Canada IC Notice
- 10 Battery Disposal
- 11 Feedback and Help
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

Important Safeguards



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using the product, basic safety precautions should always be followed to reduce the risk of injury including

the following:

⚠ DANGER CHOKING HAZARD – Small parts!



Not for children under 3 years.

⚠ WARNING Risk of injury!

- Unassembled state contains small parts, sharp edges and sharp points.
- To be assembled by an adult.

⚠ CAUTION

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- For indoor use only.
- Keep children and pets away while assembling the product.
- Do not stand on the product. Do not use the product as a stepladder.
- Always use the product on a firm, level ground.
- Do not use this product if any parts are missing, damaged, or worn.
- To avoid scratching the floor, assemble the product on a soft surface, such as a carpet.
- Do not over-tighten the fasteners.

SAVE THESE INSTRUCTIONS

Battery Warnings

NOTICE The batteries are not included.

- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Batteries are to be inserted with the correct polarity(+ and –).
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.



Before First Use

⚠ DANGER Risk of suffocation!

Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. suffocation.

- Check the product for transport damages.
- Remove all the packing materials.

Specifications

Model number	HAP-841861
Net weight	approx. 39.68 lbs (18 kg)
Dimensions (Wx Hx D)	approx. 31.2 x 39.1 x 25" (79.2 x 99.4 x 63.4 cm)
Batteries	
Toy cashier	3 V  , 2 x 1.5 V Alkaline battery (AA, LR6)
Toy scales	3 V  , 2 x 1.5 V Alkaline battery (AA, LR6)

FCC – Supplier's Declaration of Conformity

Unique Identifier	B0951 GBSL3 – Grocery Store Counter
Responsible Party	Amazon.com Services LLC
U.S. Contact Information	410 Terry Ave N. Seattle, WA 98109 USA
Telephone Number	(206) 266-1000

FCC Compliance Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. this device may not cause harmful interference, and
 2. this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Tools Needed



Delivery Content



A (x 1)



B (x 1)



C (x 1)



D (x 1)



 
E (x 1)




F (x 2)




G (x 1)

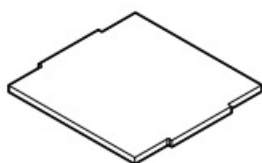

H (x 1)

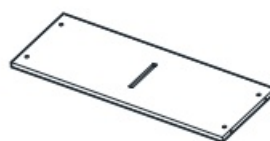 


I (x 1)

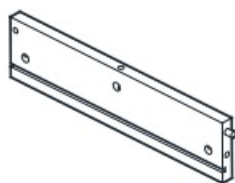 


J (x 1)



 
K (x 1)

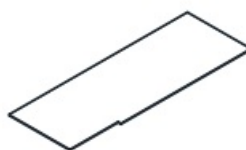


L (x 1)

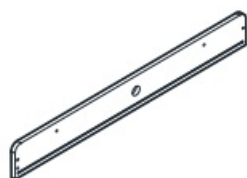 


M (x 1)

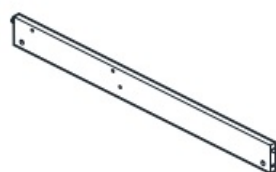 


N (x 1)

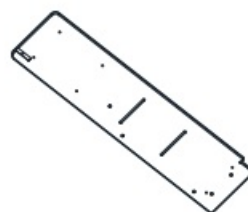 

O (x 1)

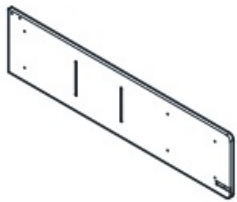 


P (x 1)

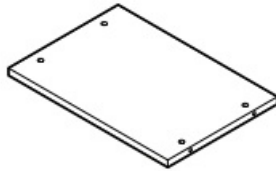 

Q (x 1)



 
R (x 2)

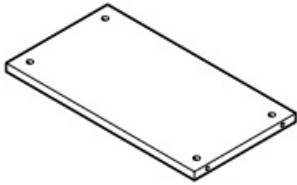


S (x 2)



 T (x 1)

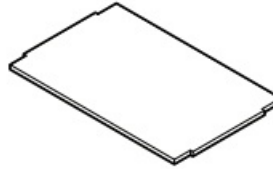

U (x 1)

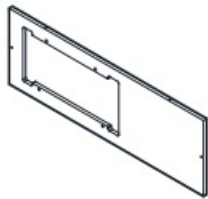 

V (x 1)



W (x 1)



X (x 1)



1 (x 48)



2 (x 2)



3 (x 4)



4 (x 1)



5 (x 1)



 
 
 
6 (x 1)

Also contains (not depicted):

- 12 toy banknotes
- 6 toy coins
- 2 toy credit card
- 14 toy shopping items

- 1 toy basket
- 1 lane closed sign
- 1 shopping bag

Assembly

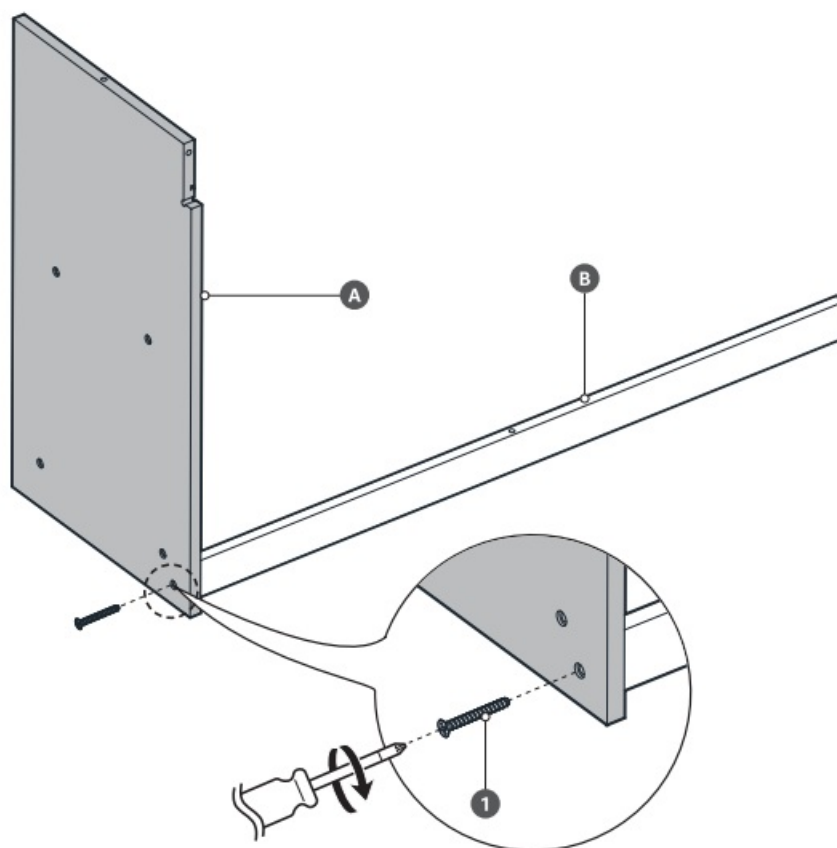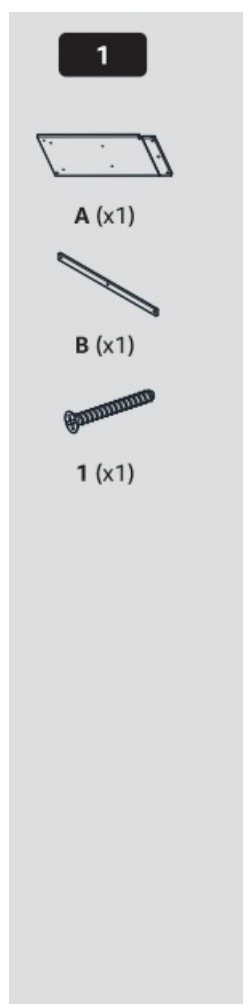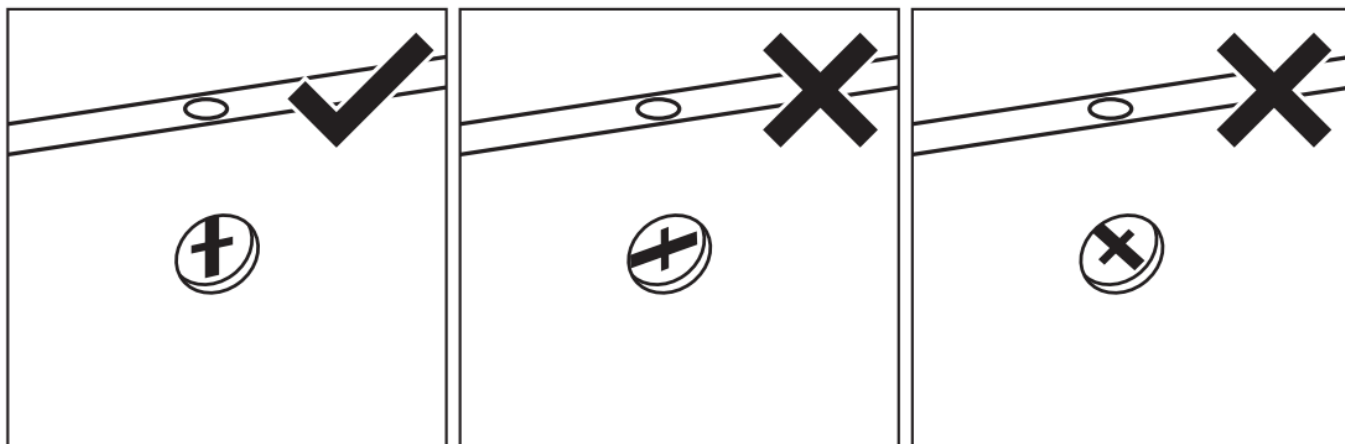

2



 
C (x1)



D (x1)




1 (x2)

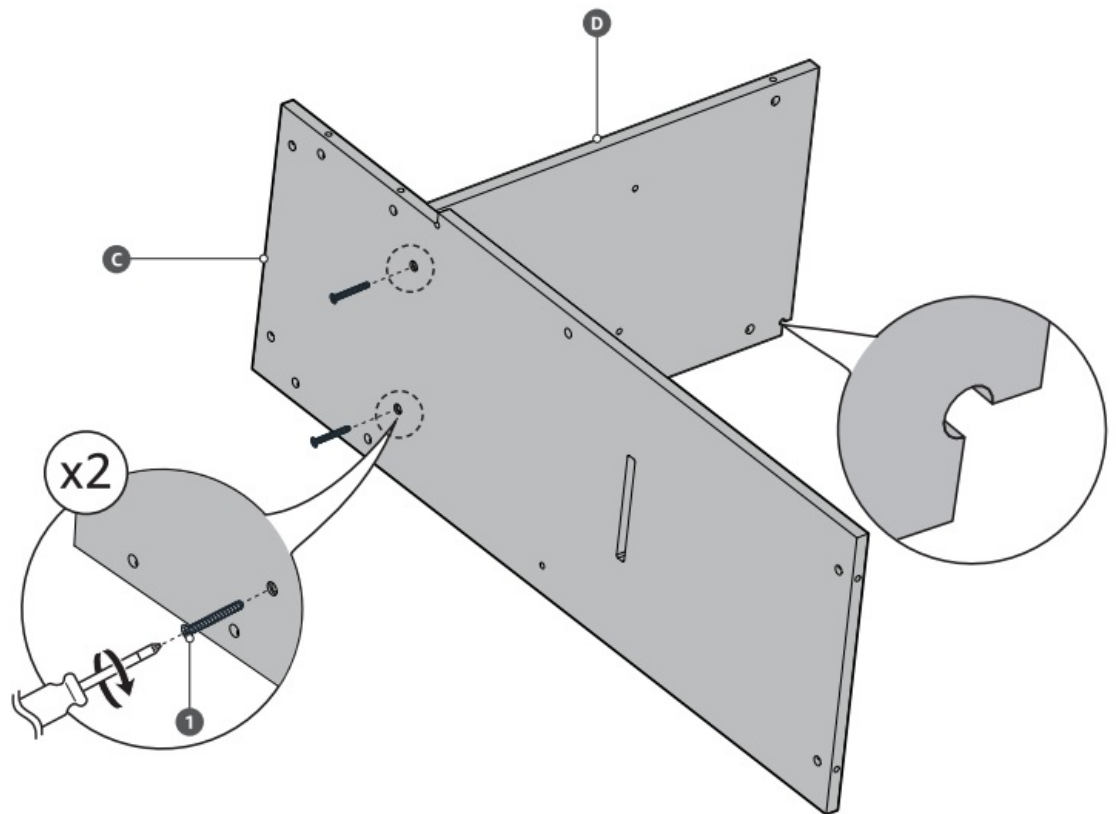


3



 1 (x3)

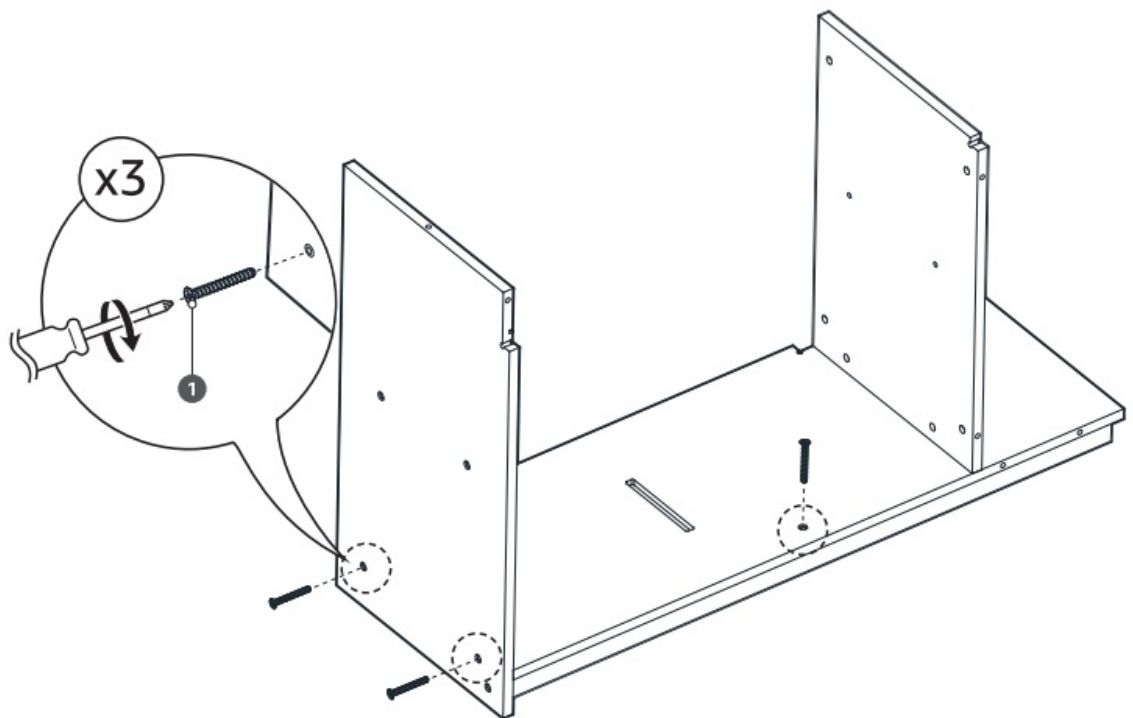


4

 

E (x1)



 1 (x4)

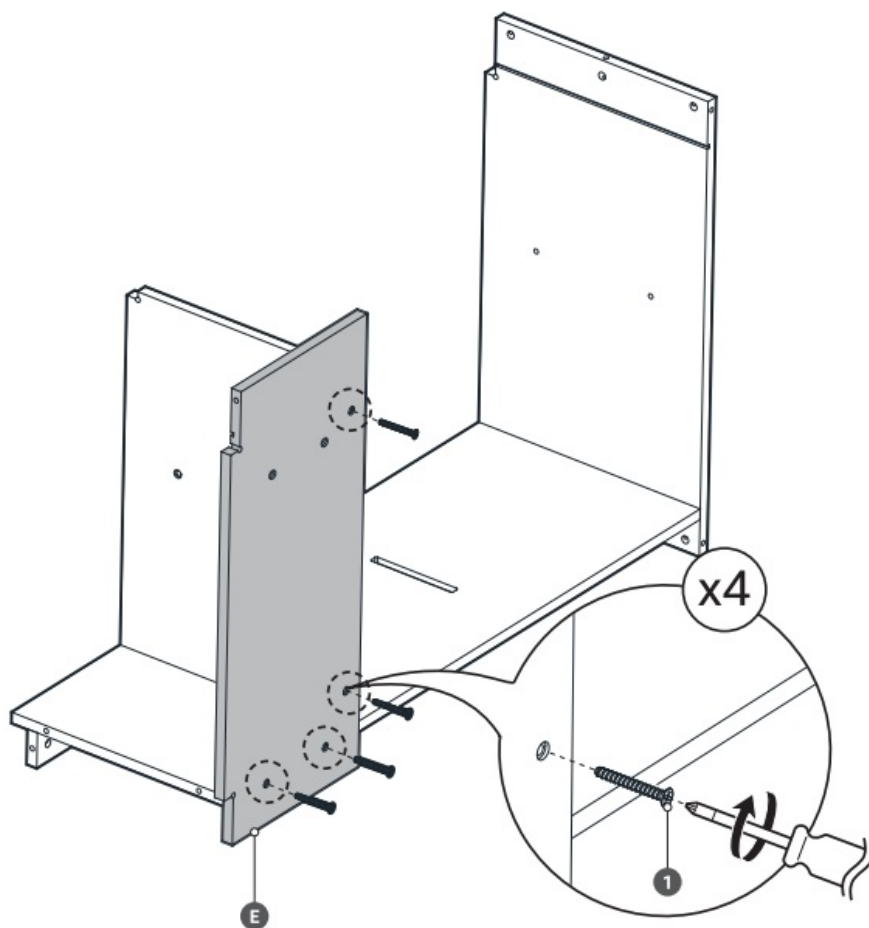


5



F (x2)



 2 (x2)

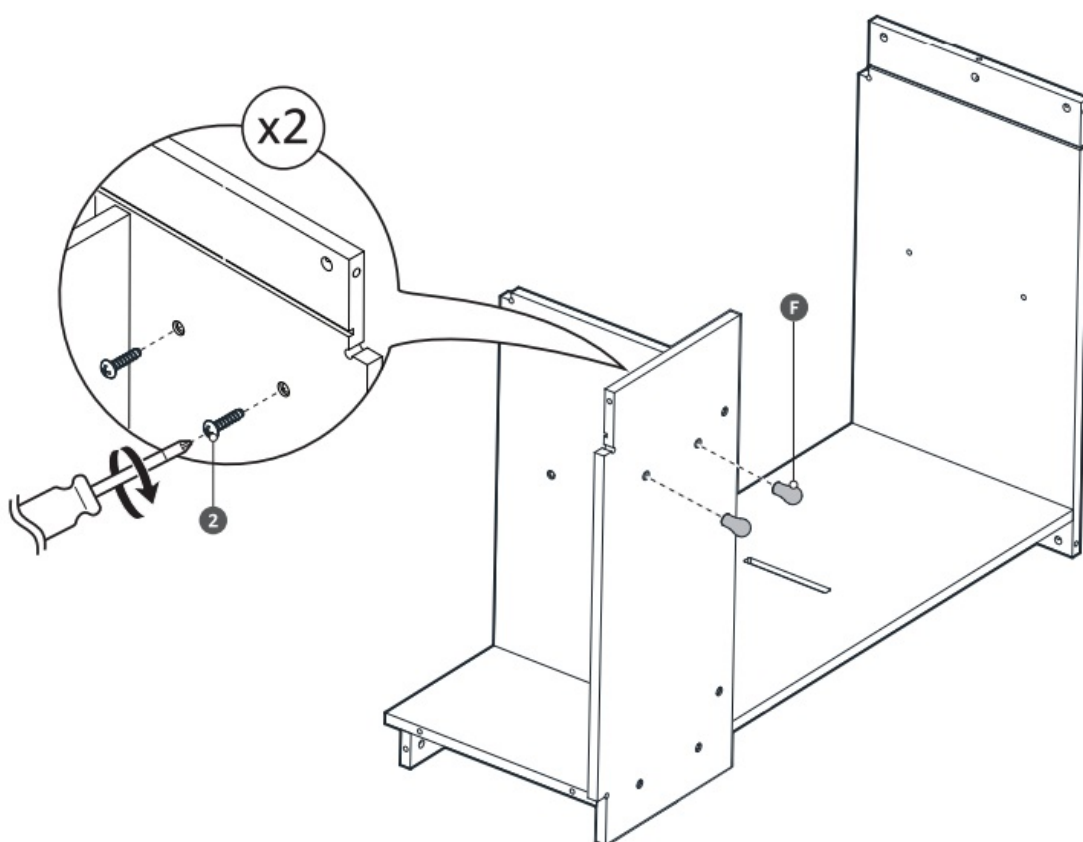


6



G (x1)



 
1 (x2)

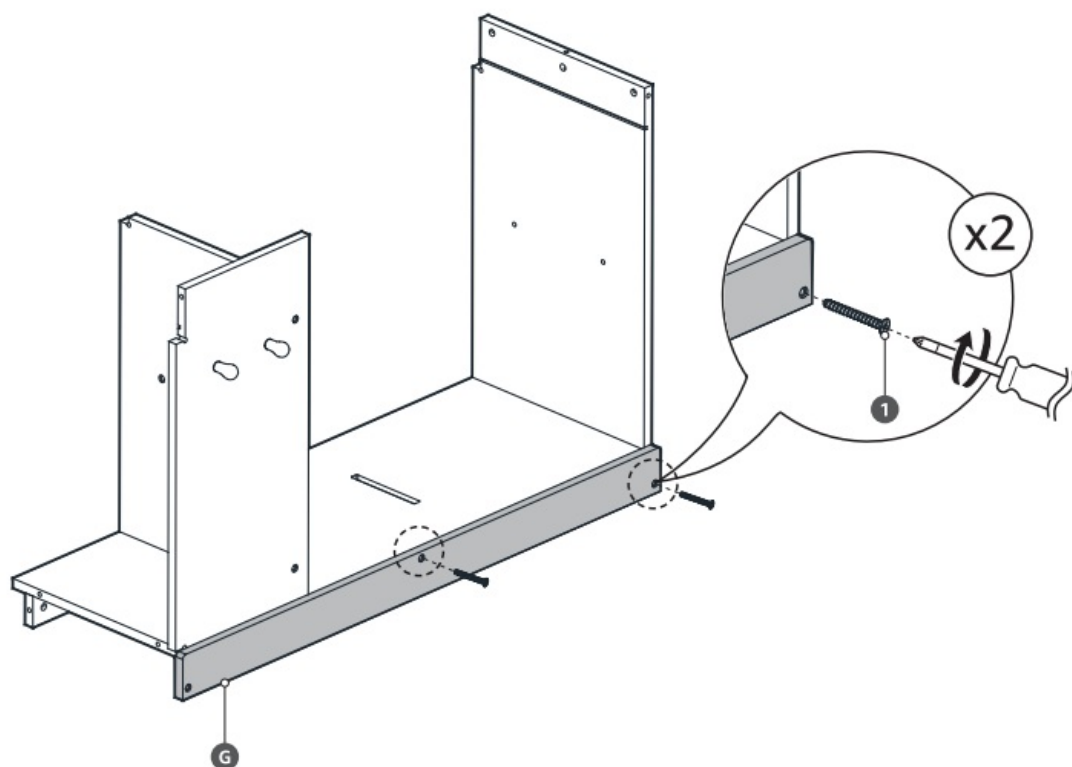

7



 
H (x1)

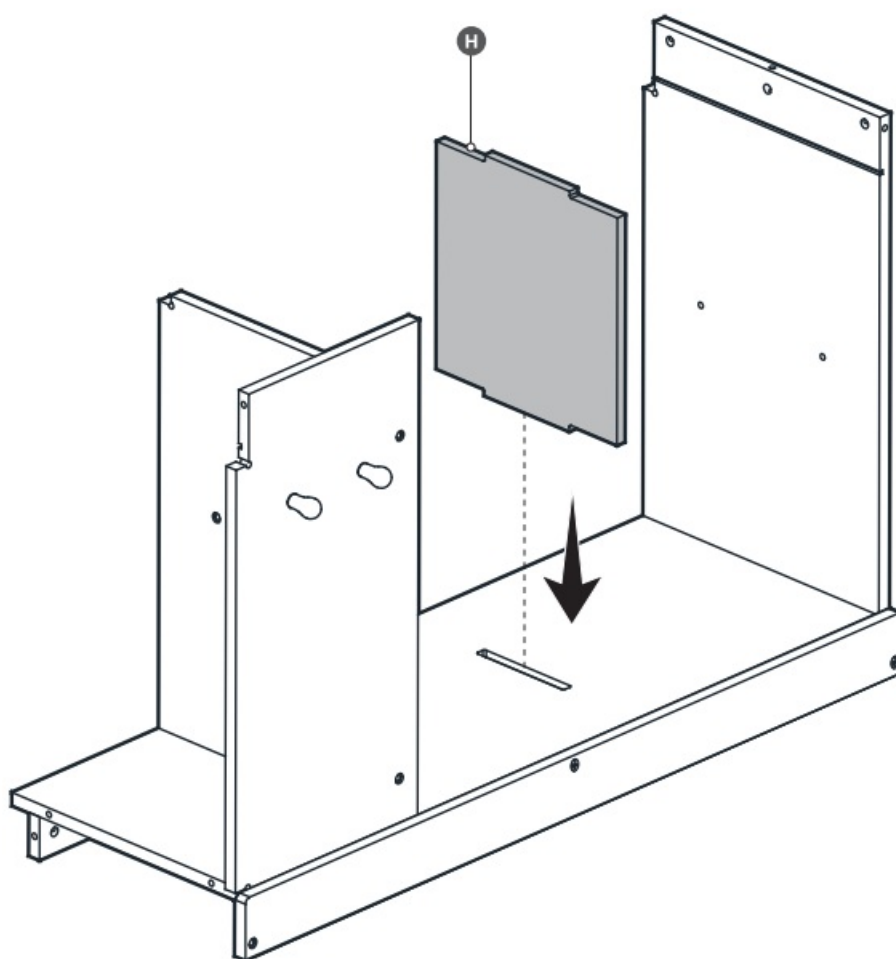

8



 
1 (x1)

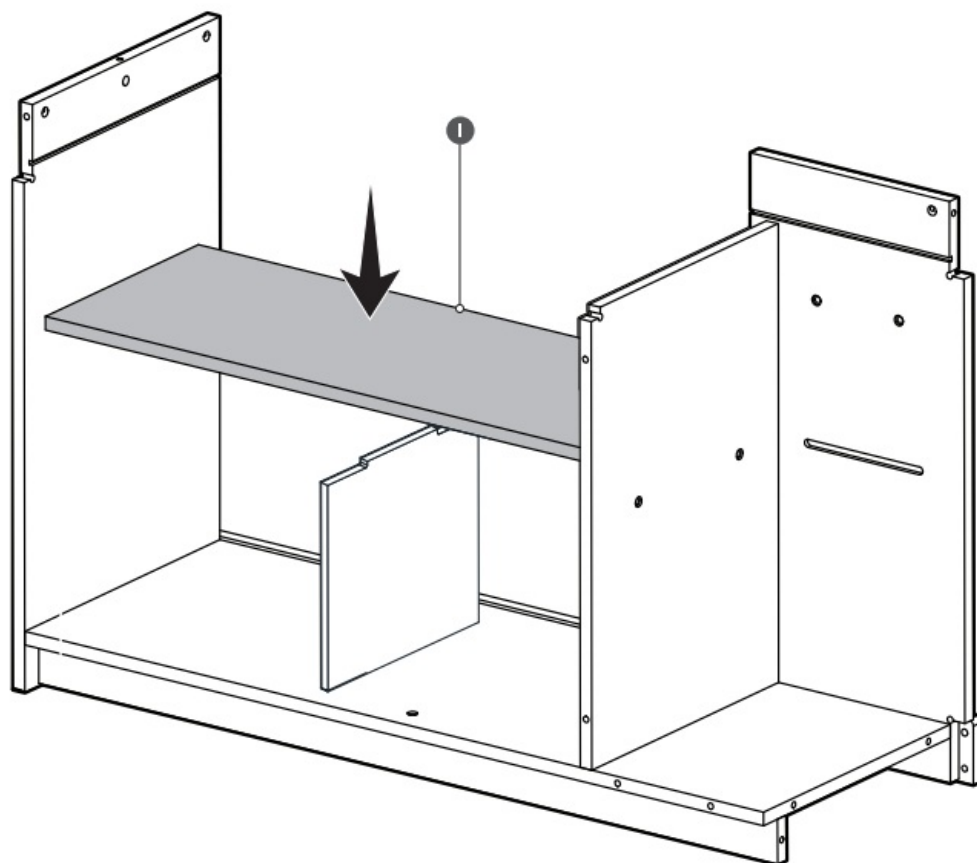


9



 1 (x4)

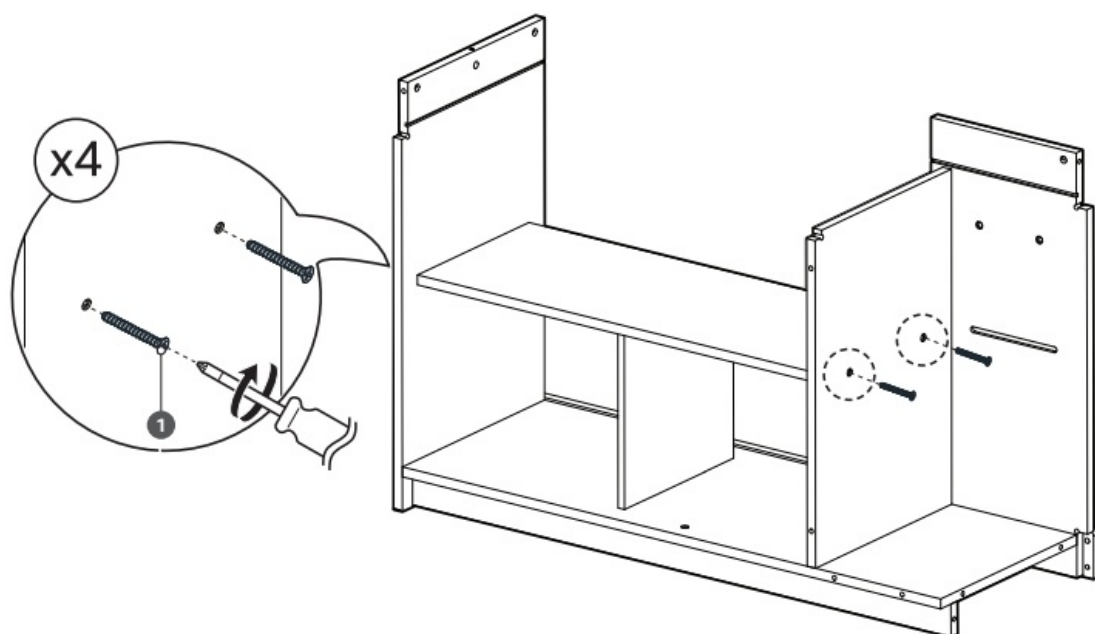


10

 

J (x1)



 1 (x1)

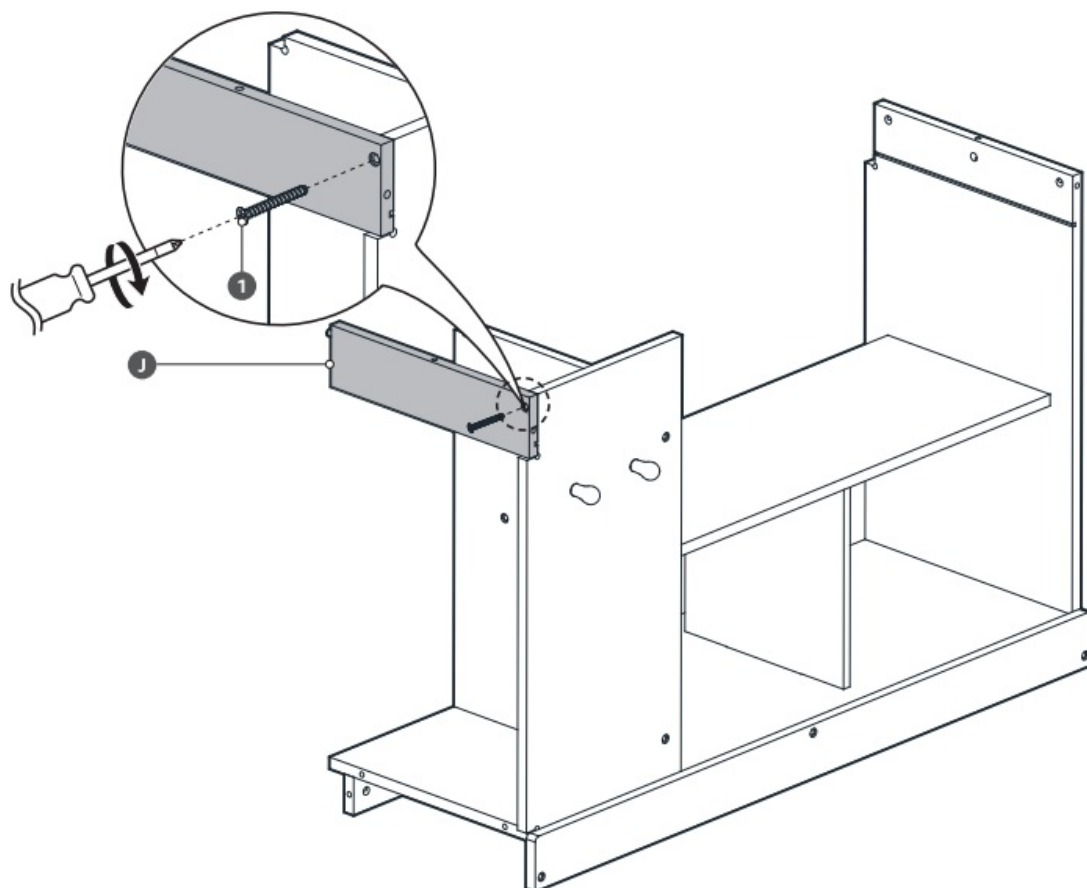


11



K (x1)



 
1 (x2)

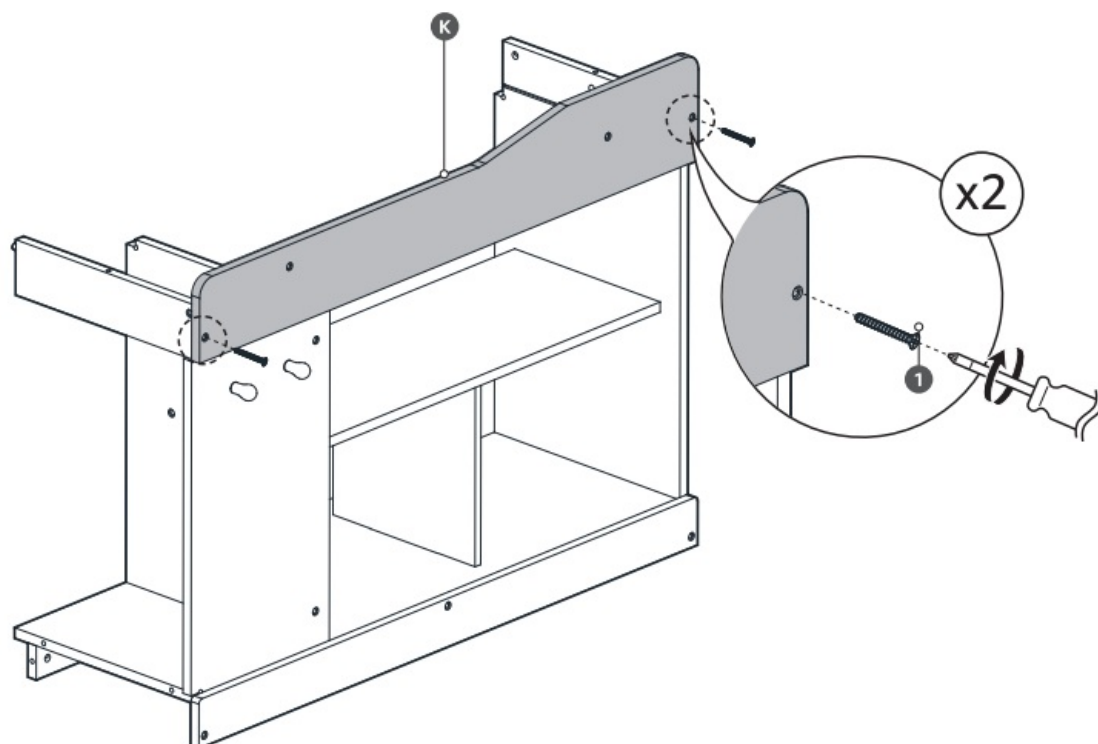

12



 L (x1)

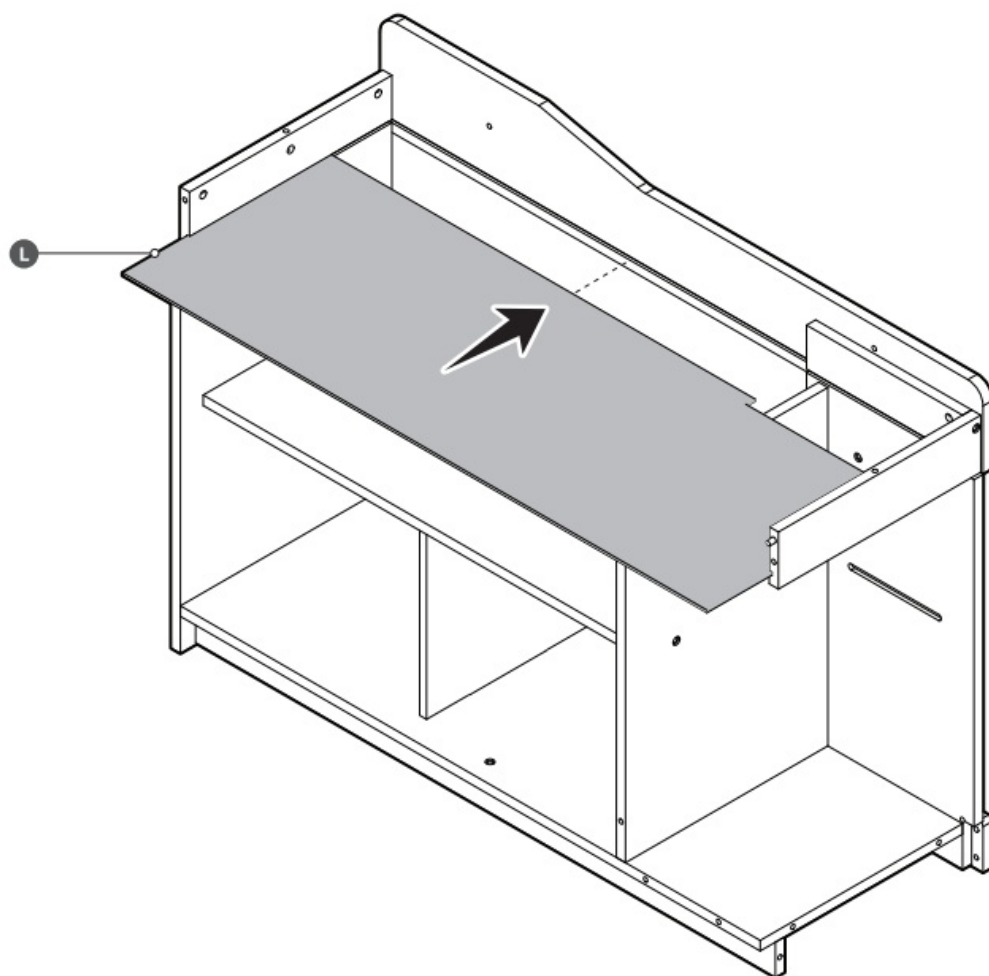


13



M (x1)



 1 (x2)

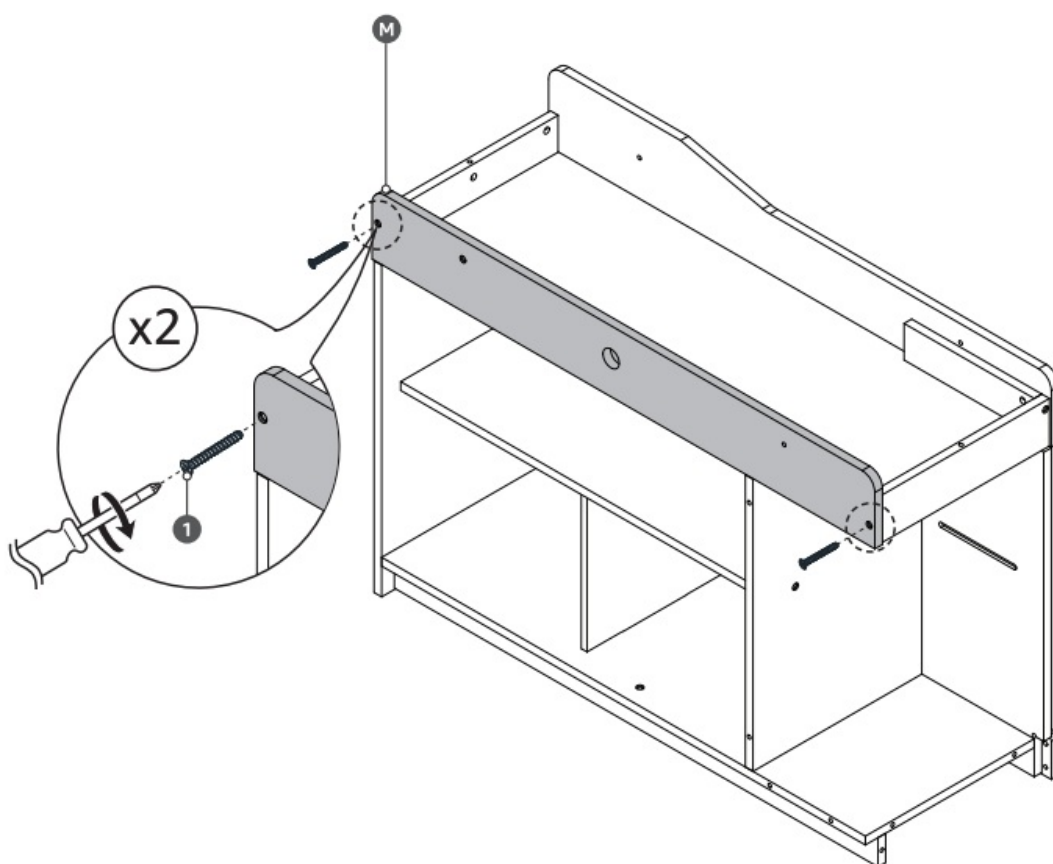


14




N (x1)



 1 (x4)

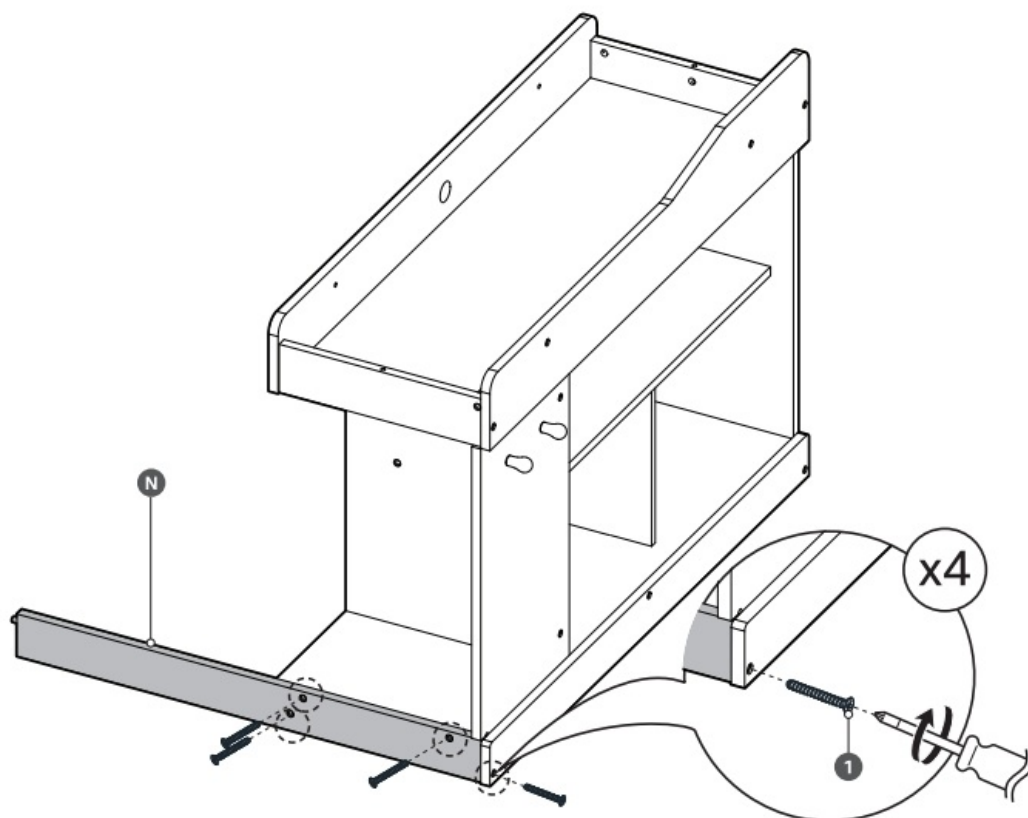


15

 

O (x1)



 Q (x1)




R (x2)




S (x2)



 1 (x6)

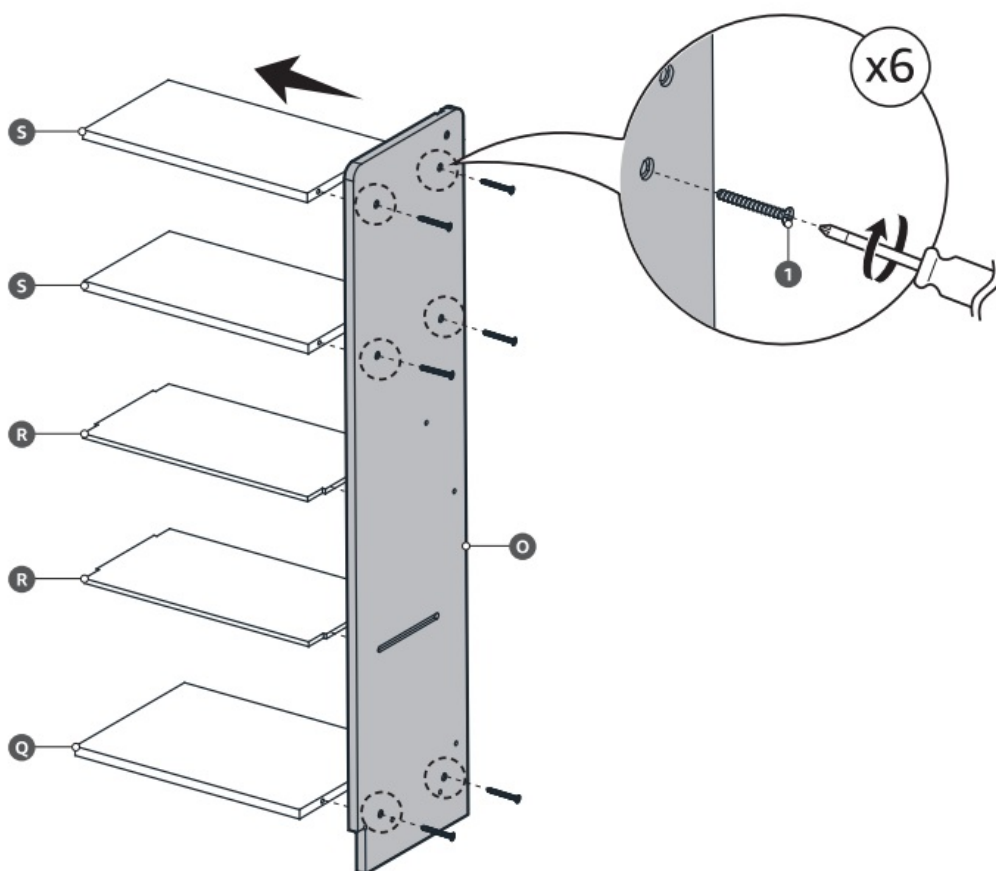


16

 

P (x1)



 1 (x6)

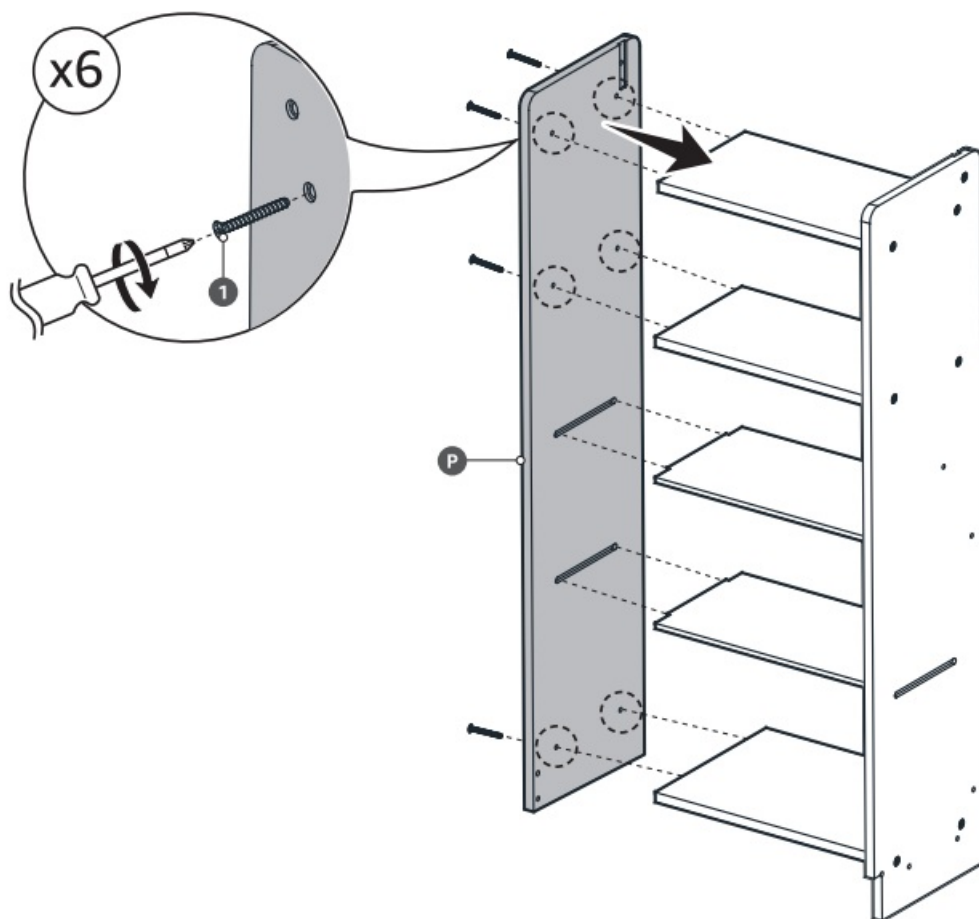


17





T (x1)



 
1 (x2)

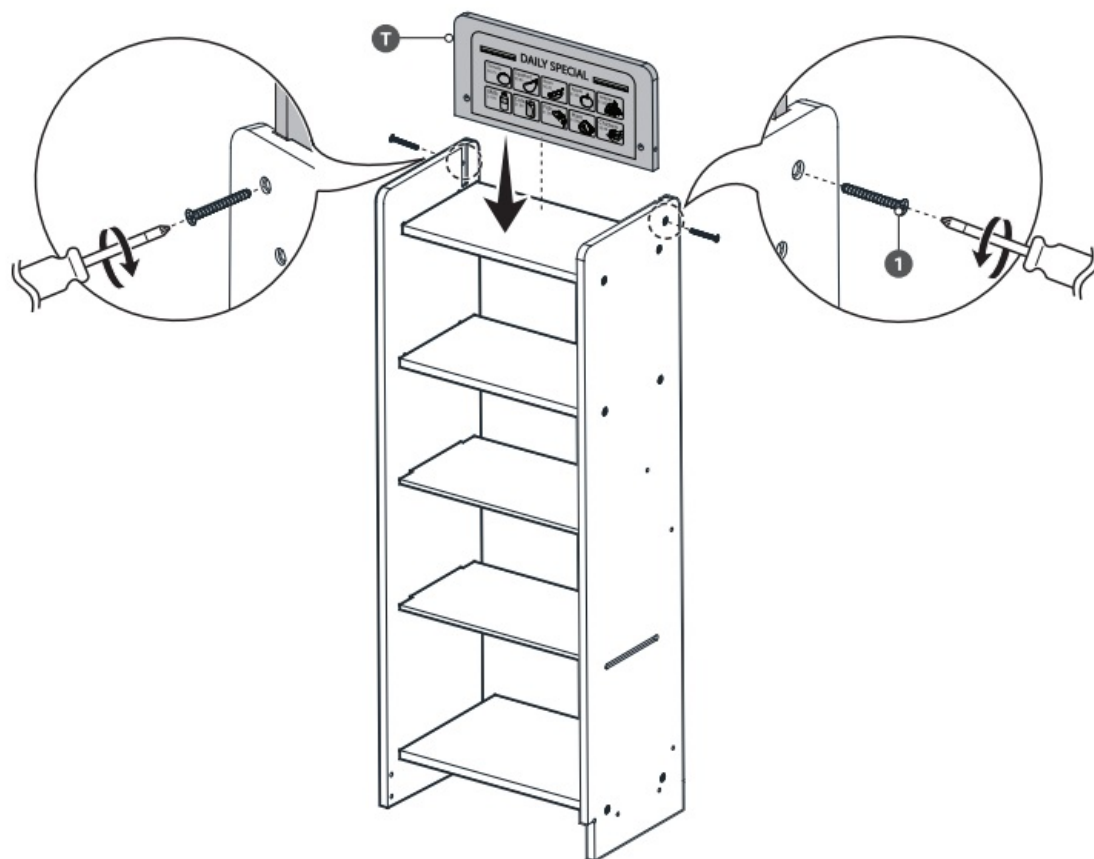


18

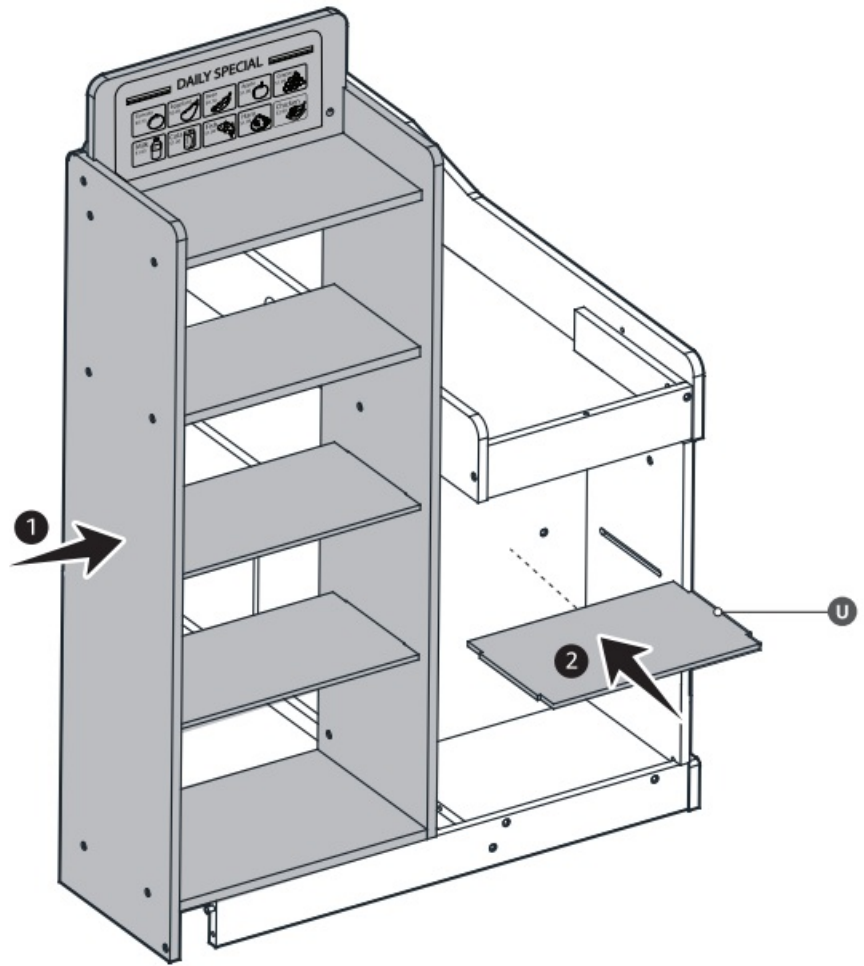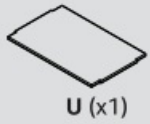  

19

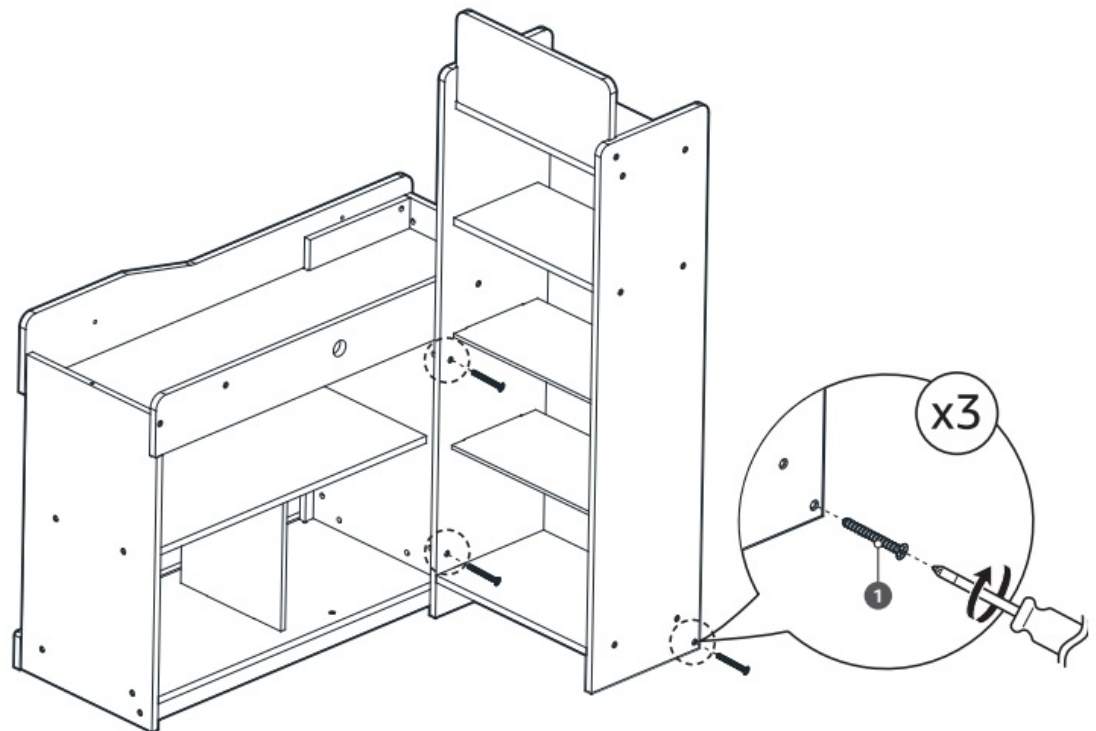 

20

 


V (x1)



W (x1)



 
3 (x4)

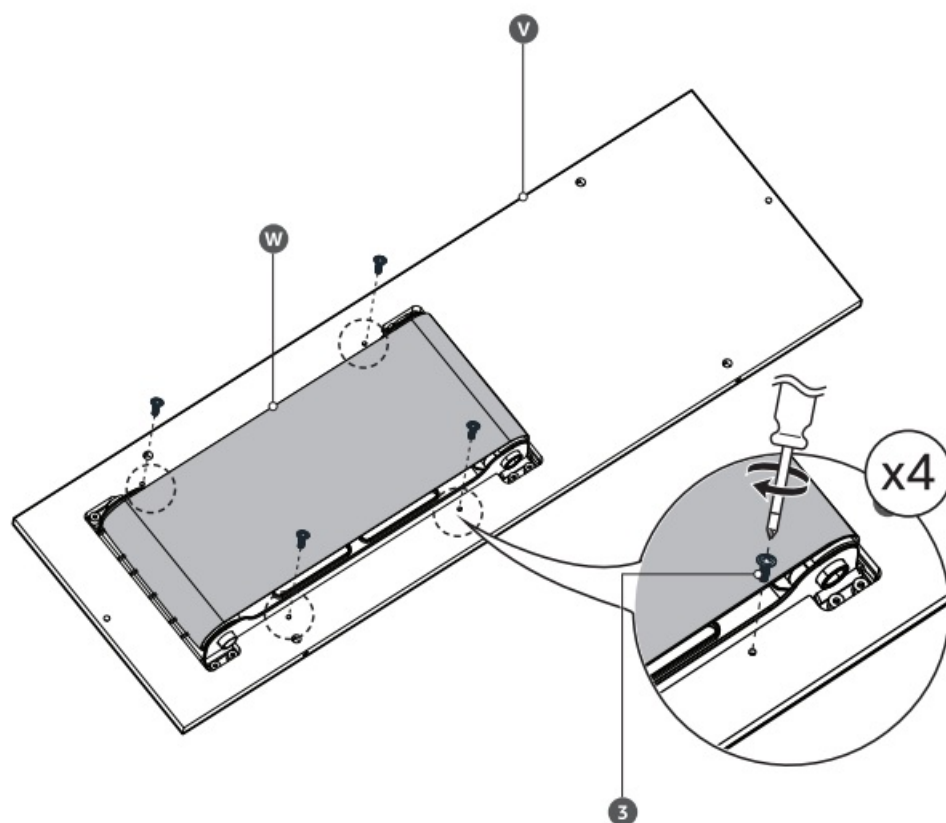

21



 1 (x6)

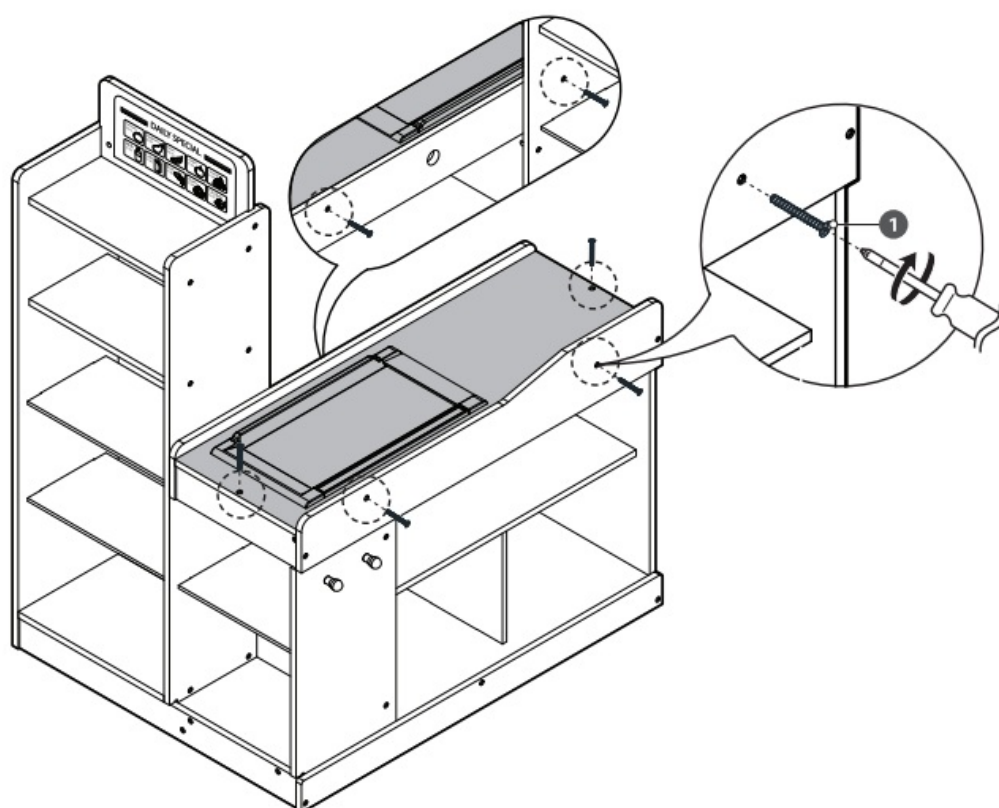


22




X (x1)

 EN Insert the conveyor crank (X) into the hole in the side of the countertop until it clicks into place.

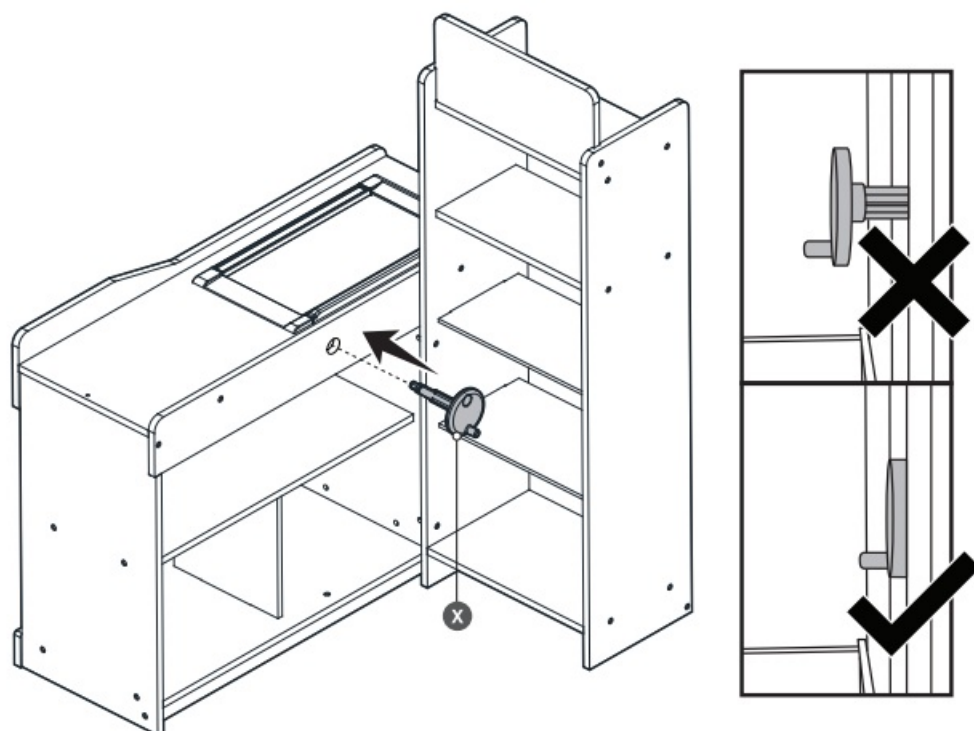

23

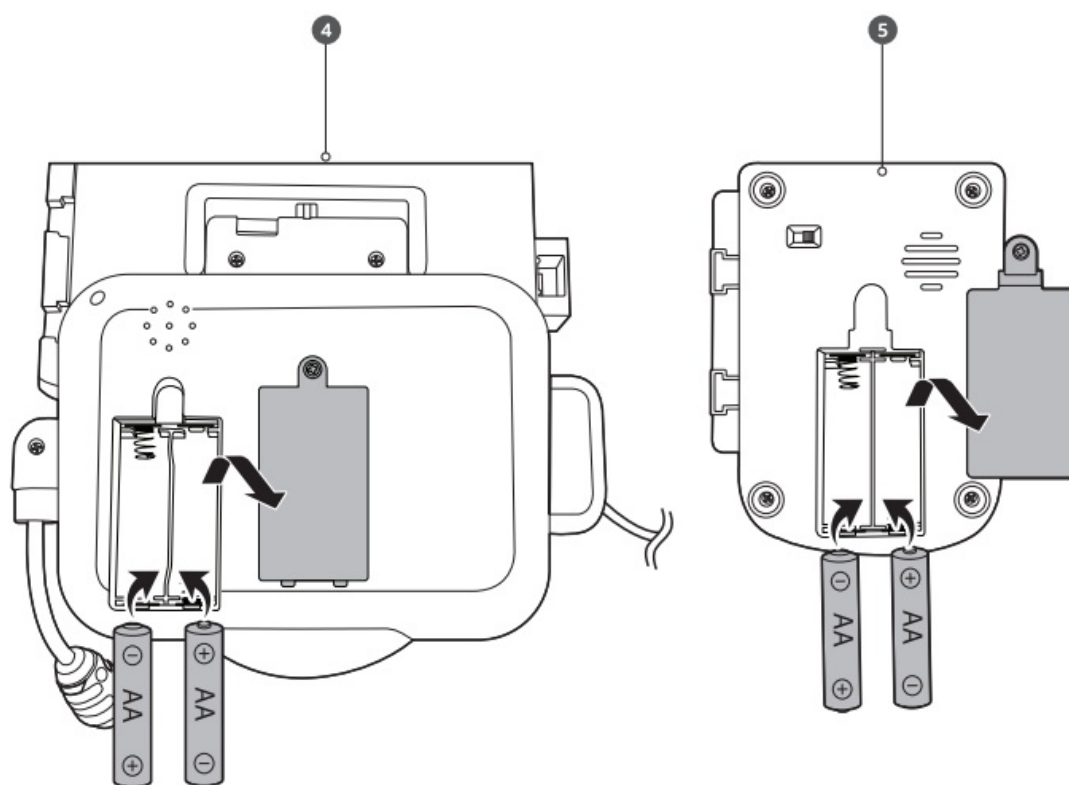 


24




4 (x1)



 6 (x1)

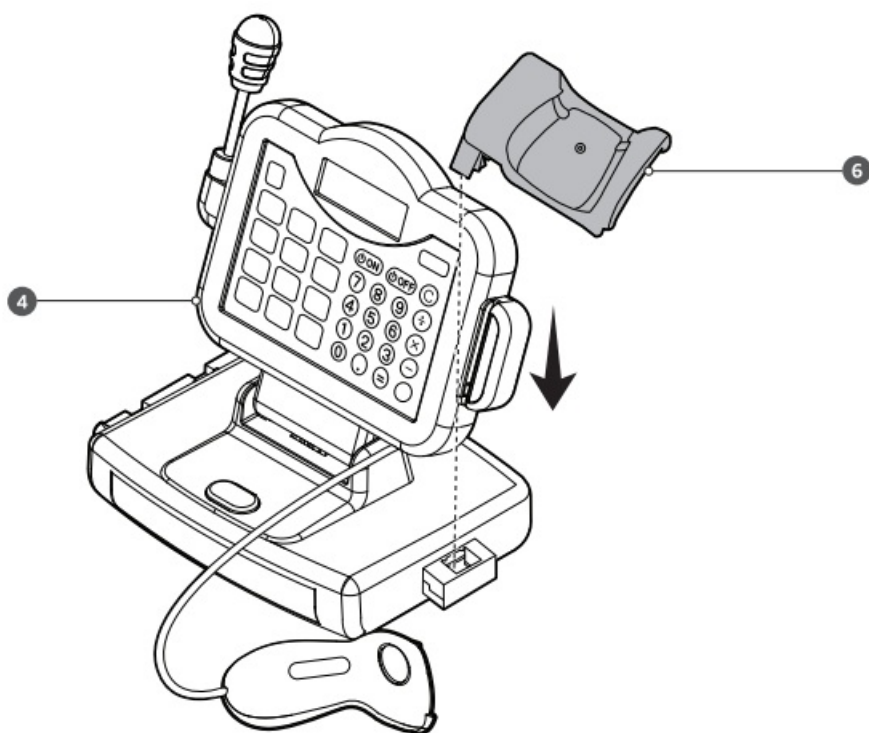


25

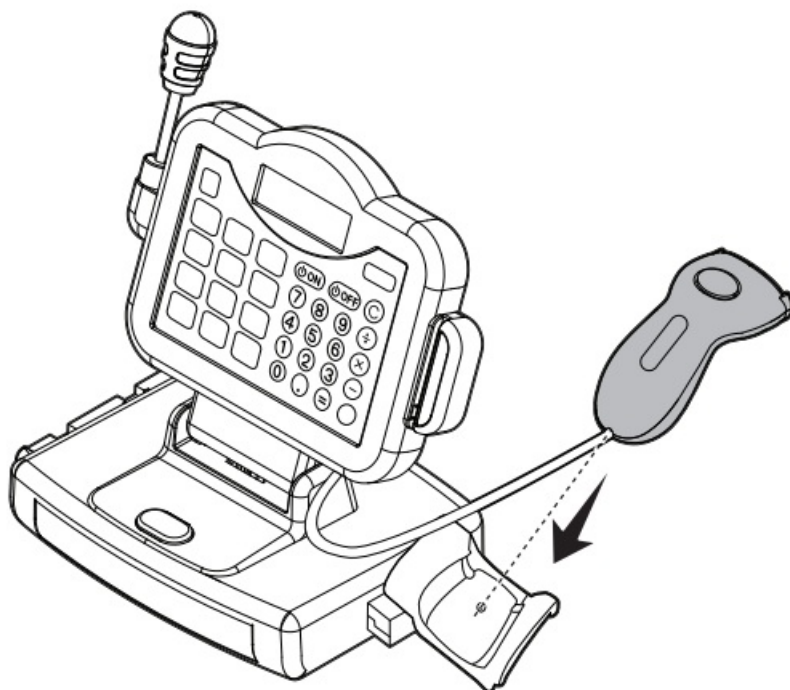 


26



 5 (x1)

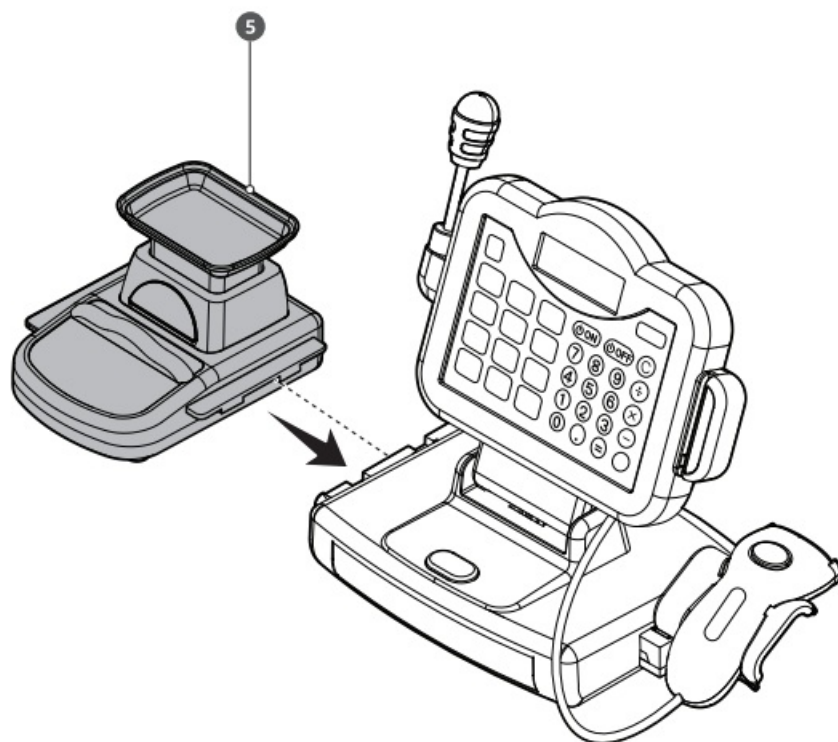



27

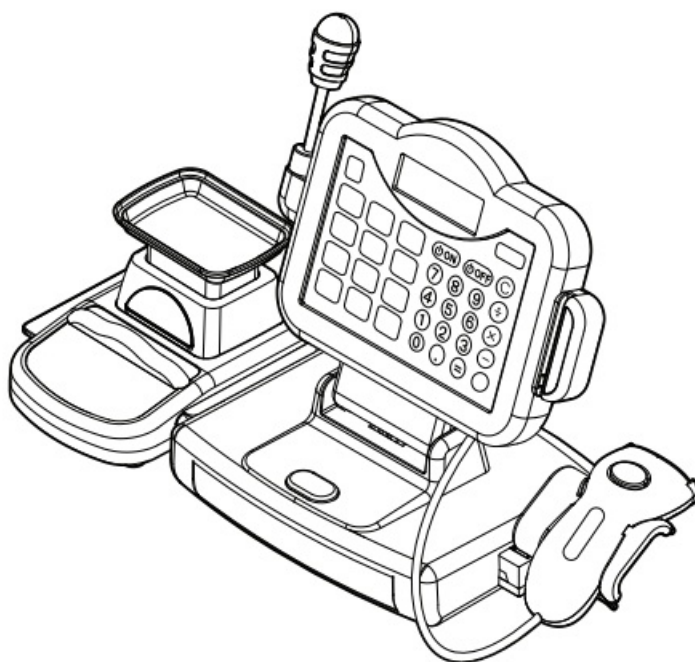 







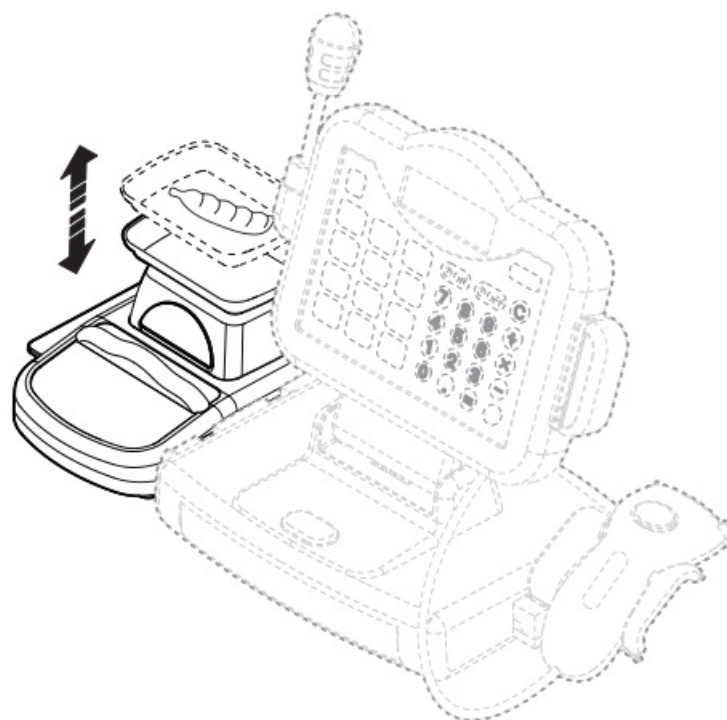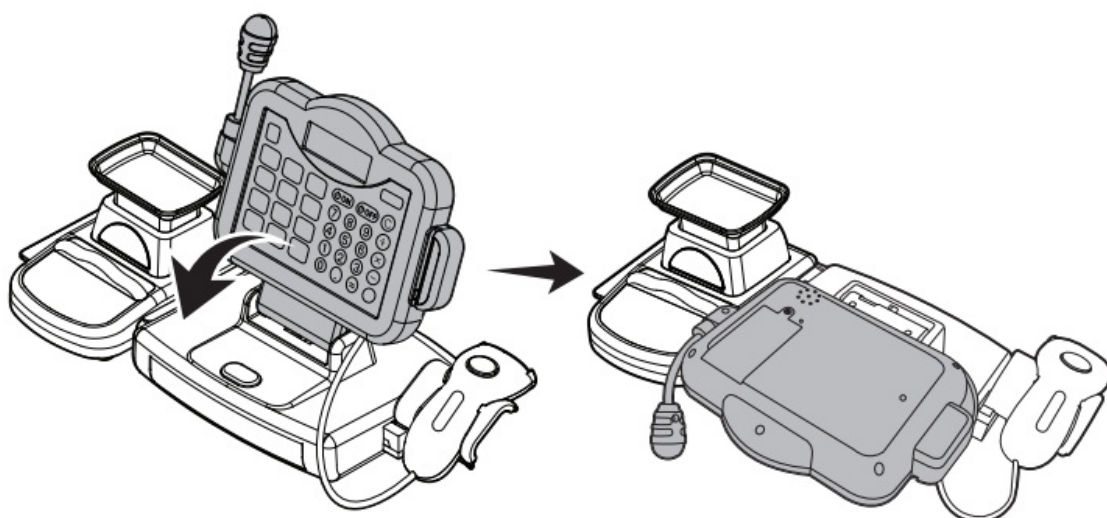  



EN











ON



OFF



DAILY SPECIAL

Tomato \$0.75 	Eggplant \$0.95 	Bean \$0.70 	Apple \$1.00 	Grapes \$1.99 
Milk \$1.05 	Cola \$1.00 	Fish \$1.00 	Ham \$1.99 	Chicken \$2.99 

	Tomato
	Eggplant
	Bean
	Apple
	Grapes
	Milk
	Cola
	Fish
	Ham
	Chicken

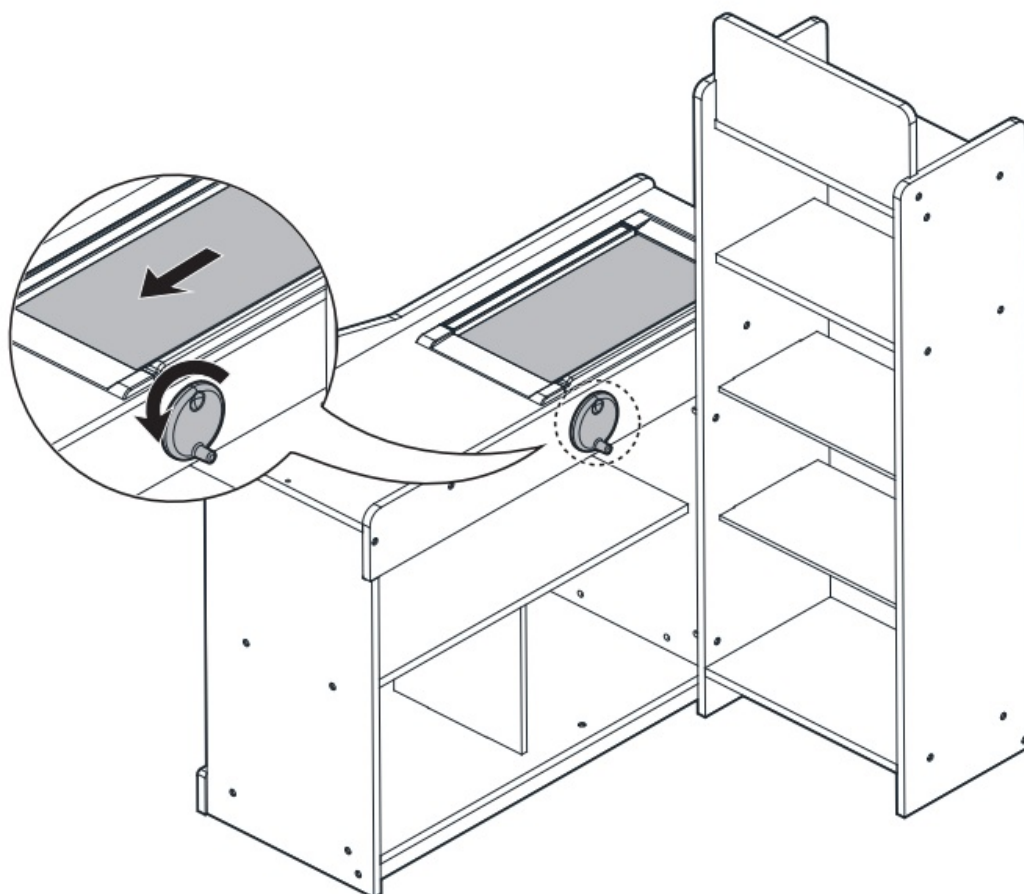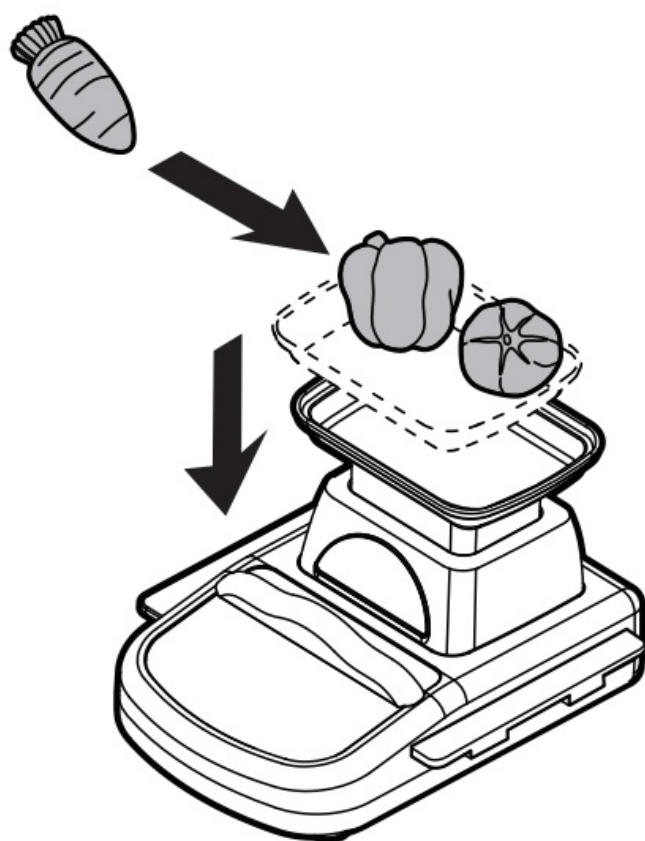  

Canada IC Notice

- This Class B digital apparatus complies with Canadian CAN ICES-003(B) / NMB-003(B) standard.

Battery Disposal



Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.



To learn more about recycling batteries, visit: call2recycle.org/what-can-i-recycle

Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.

Scan QR Code below with your phone camera or QR reader:



If you need help with your Amazon Basics product, please use the website or number below.



amazon.com/gp/help/customer/contact-us

 


+1 877-485-0385 (US Phone Number)

amazon.com/AmazonBasics

amazon basics

Documents / Resources

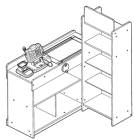 <p>amazon basics</p> <p>B09S1GBSL3 Grocery Store Checkout Counter</p> <p>Assembly - Portuguese - Portuguese - B09S1GBSL3</p>	<p>amazon basics B09S1GBSL3 Grocery Store Checkout Counter [pdf] Instruction Manual B09S1GBSL3 Grocery Store Checkout Counter, B09S1GBSL3, Grocery Store Checkout Counter, Store Checkout Counter, Checkout Counter, Counter</p>
--	--

References

- [Amazon.co.jp](#)
- [Amazon Iniciar sesión](#)
- [User Manual](#)