



amazon basics B0B15CKBM8 Push Reel Lawn Mower User Manual

[Home](#) » [amazon basics](#) » amazon basics B0B15CKBM8 Push Reel Lawn Mower User Manual 

Contents

- [1 amazon basics B0B15CKBM8 Push Reel Lawn Mower](#)
- [2 Important Safety Instructions](#)
- [3 Intended Use](#)
- [4 Assembly](#)
- [5 Product Description](#)
- [6 Blade Reel and Cutter Blade Adjustment](#)
- [7 Height Adjustment](#)
- [8 Use](#)
 - [8.1 Before each use](#)
 - [8.2 Mowing Tips](#)
- [9 Cleaning and Maintenance](#)
- [10 Specifications](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



amazon basics B0B15CKBM8 Push Reel Lawn Mower



Important Safety Instructions

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

CAUTION

When using hand-operated lawn mowers, basic safety precautions should always be followed to reduce the risk of personal injury, including the following:

- Keep children away – All visitors should be kept at a distance from work area.
- Do not operate the product while under the influence of alcohol or drugs.
- Dress properly- Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of protective gloves and substantial footwear is recommended when working outdoors.
- Use right product – Do not use the product for any job except that for which it is intended.
- Do not force the product – The product will do the job better and with less likelihood of a risk of injury at the rate for which it was designed for.
- Do not overreach – Keep proper footing and balance at all times.
- Stay alert – Watch what you are doing. Use common sense. Do not use the product when tired.
- Store the product indoors – When not in use, the product should be stored indoors in dry, and in a high or locked-up place – out of reach of children.
- Maintain the product with care – Keep blades sharp and clean for best and safest performance.
 - Follow instructions for lubricating.
 - Keep handles dry, clean, and free from oil and grease.
- Keep hands and feet away from cutting area.
- Objects struck by the blade can cause severe injuries to persons. The lawn should always be carefully checked

and cleared of all objects prior to each mowing.

- If the product strikes a foreign object, follow these steps:
 - Stop mowing.
 - Inspect for damage.
 - Repair any damage before restarting and using the product.
- Only use the product in daylight or good artificial light.
- Avoid holes, ruts, bumps, rocks, or other hidden hazards. Uneven terrain could overturn the product, or cause operator to lose their balance or footing.
- Do not direct discharge material toward anyone. Avoid discharging material against a wall or obstruction. Material may ricochet back toward the operator. Tilt the blade(s) when crossing gravel surfaces.
- Do not leave the product unattended. Always park on level ground.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Slopes are a major factor related to accidents. Operation on slopes requires extra caution.
- Travel in the manufacturer recommended direction on slopes. Use caution while operating near dropoffs.
- Avoid mowing wet grass. Poor footing could cause a slip and fall accident.
- Do not use the product under any condition where traction, steering, or stability is in question.
- Avoid making sudden changes in speed or direction. Make turns slowly and gradually.
- Do not modify or attempt to repair the product except as indicated in the instructions for use and care.
- This product must be assembled by an adult.
- Do not over-tighten the fasteners.
- Keep children and pets away while assembling the product.

CAUTION Risk of injury!

- Only accessories and attachments determined by manufacturer are acceptable for use with the product. Usage of any other accessory or attachment may increase the risk of injury!
- For BOB 1 SCKBM8 model only: The grass catcher under normal usage is subject to deterioration and wear and should, therefore, be frequently checked for replacement. A replacement grass catcher should be checked for compliance with the original manufacturer's recommendations or specifications.

 
Intended Use

- This product is intended for mowing grass in home and gardening environments. It is primarily used to maintain small-scale, residential lawns and home/hobby gardens. t This product is not intended to be used on rough or brush-covered terrain.
- This product is intended for private use only.

Assembly

- For assembly instructions, refer to the provided assembly manual.

Tools Needed

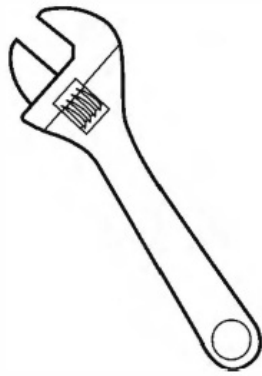


Before First Use

Risk of suffocation!

Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. suffocation.

- Remove all the packing materials.
- Remove and review all components before use.
- Check the product for transport damages.
- Do not use the product if it appears damaged.

 Product Description

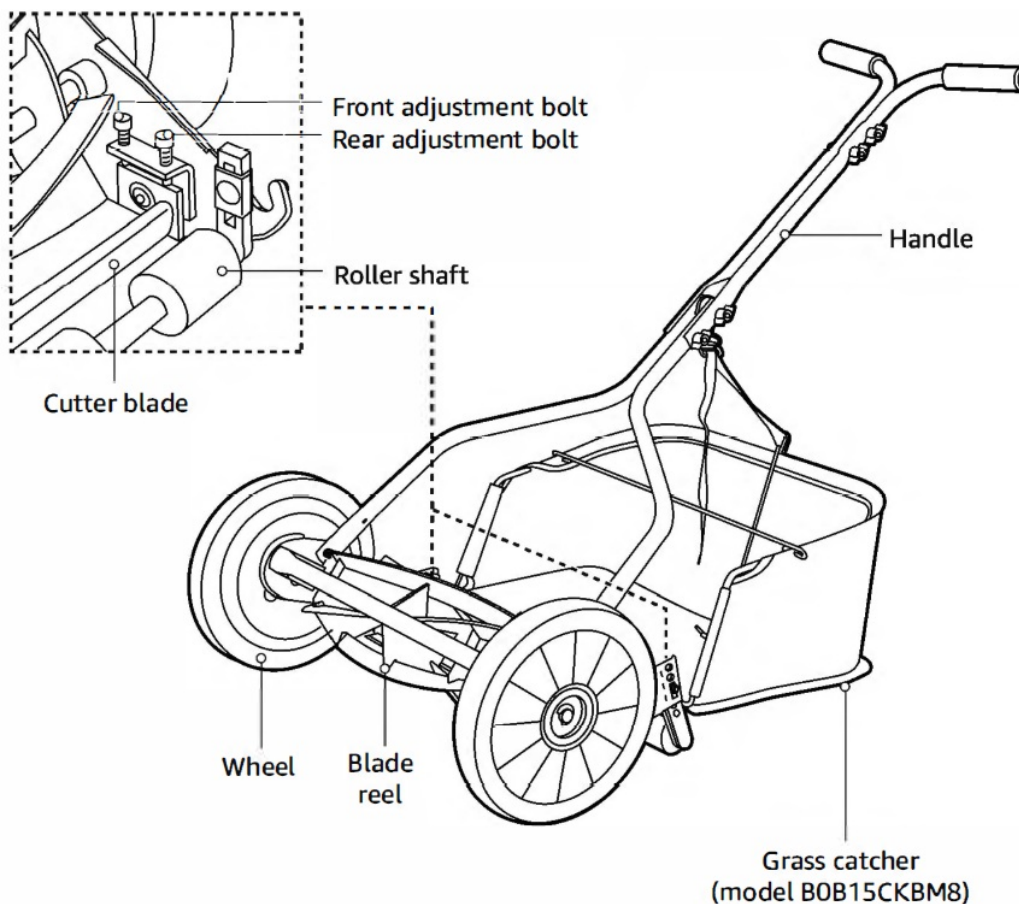


Blade Reel and Cutter Blade Adjustment

CAUTION Risk of injury!


Always wear protective gloves when performing any cleaning or maintenance on the product, where the blade is

located.

 
- Misalignment can occur resulting in blade reel being too loose or too tight. If this happens, you will notice a rough, uneven cut or that the product is hard to push.
- All adjustments are made from the rear of the product.
- To adjust the cutter blade, tighten or loosen the screws on the sides.

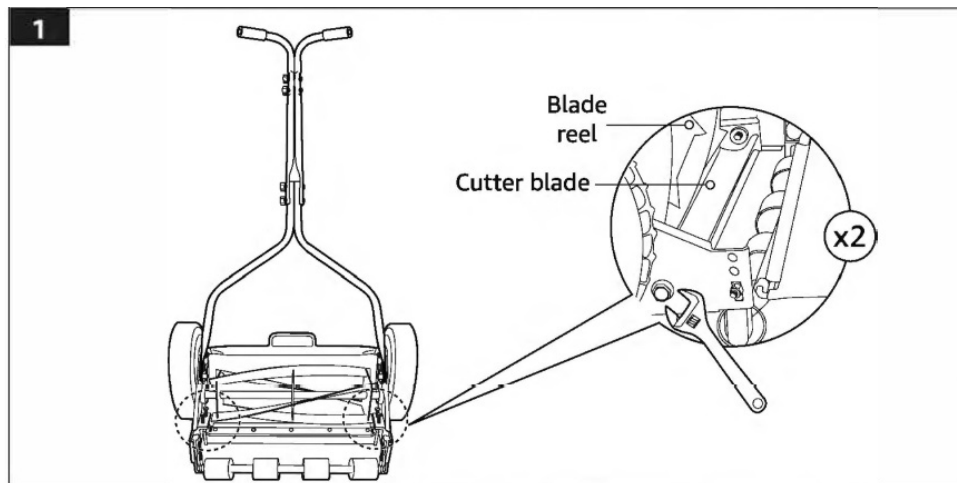

 
- To loosen the blade reel, loosen rear adjustment bolts on both sides equally by turning them counter-clockwise and tighten front adjustment bolts on both sides equally by turning them clockwise. The cutter blade moves away from the blade reel.

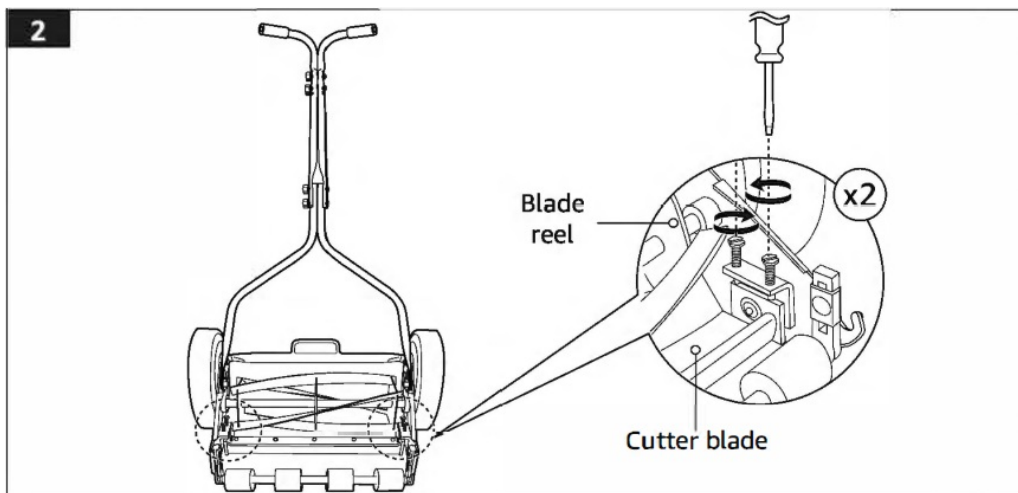

 - To tighten the blade reel, loosen front adjustment bolts on both sides equally by turning them counter-clockwise and tighten rear adjustment bolts on both sides equally by turning them clockwise. The cutter blade moves closer to the blade reel.

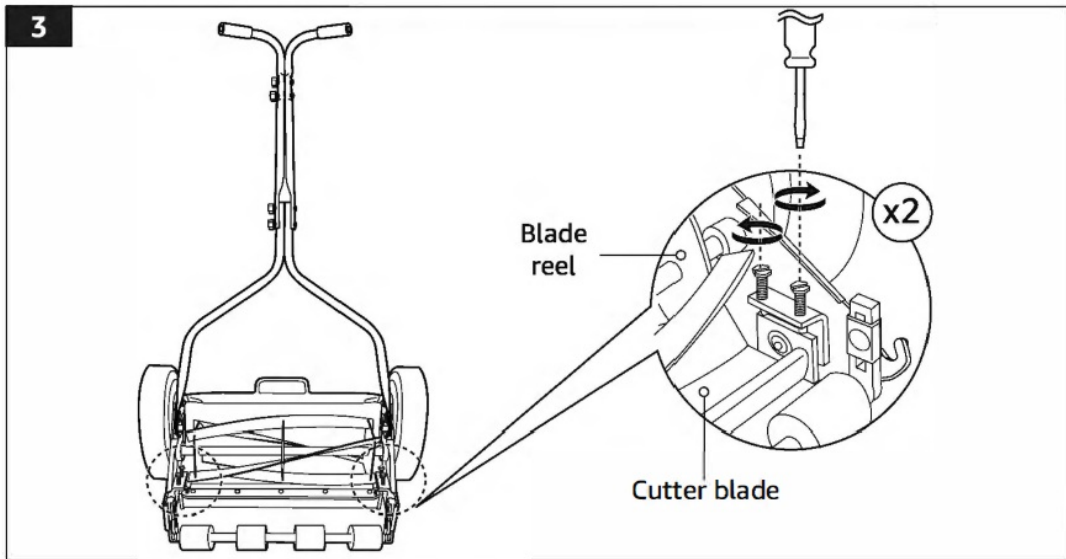

 
- To check the adjustment, turn the lawn mower upside down. Wearing gloves, take a strip of paper and carefully turn the blade reel so that a blade cuts a small portion of the paper. Repeat for all blades. Each blade should slice the paper evenly across the entire length of the cutter blade while the reel turns smoothly.

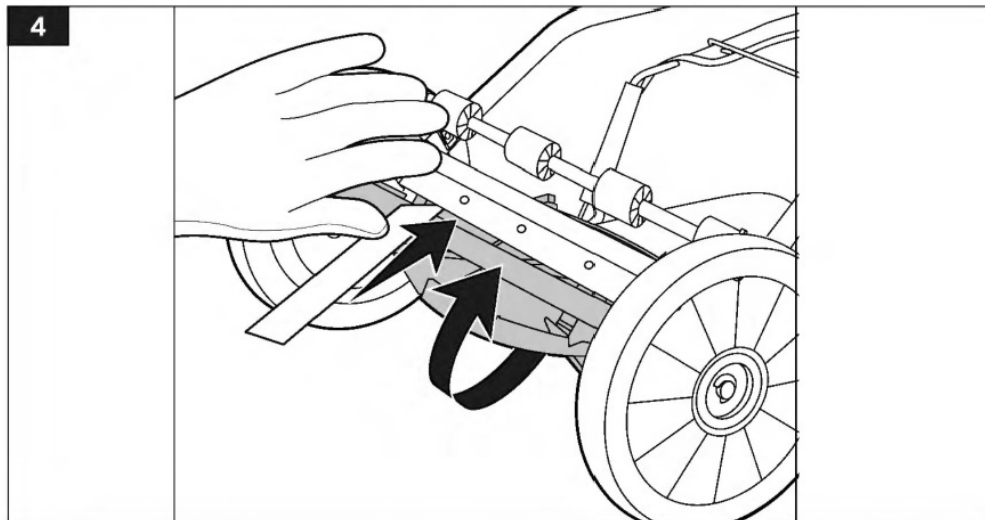


- If the product has an intermittent cut, adjustment should be made to the appropriate side of the blade reel to attain proper cutting action.

Height Adjustment

 
1. With a wrench, loosen and remove the bolts, nuts and spacers on both sides of the roller shaft. Remove the roller shaft .

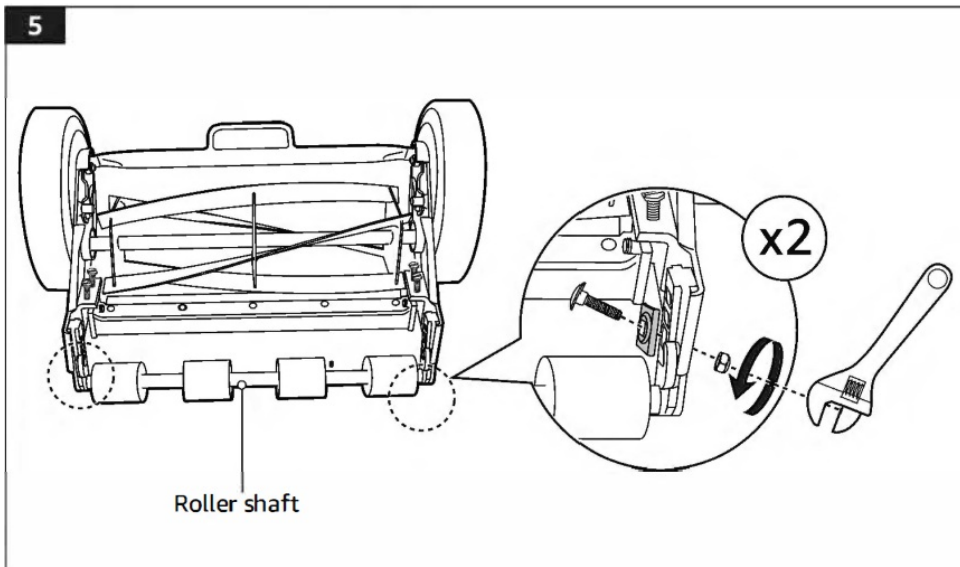

 2. Tilt the mower blade forward. Reinsert the roller shaft at an 45° angle .

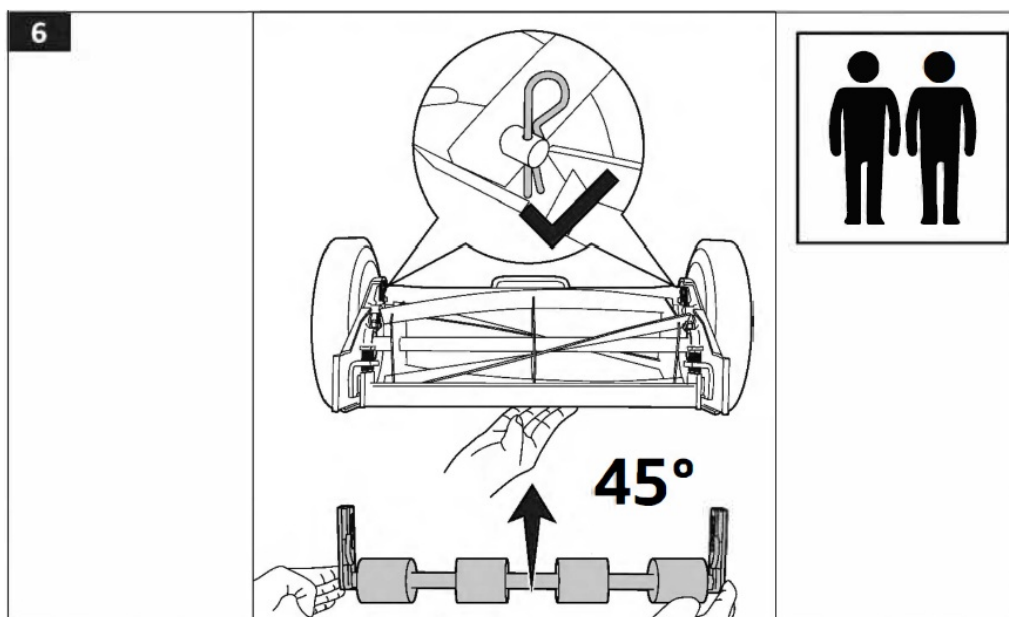

 3. Align the roller shaft to the desired adjustment level, then refit the bolts, nuts and spacers .

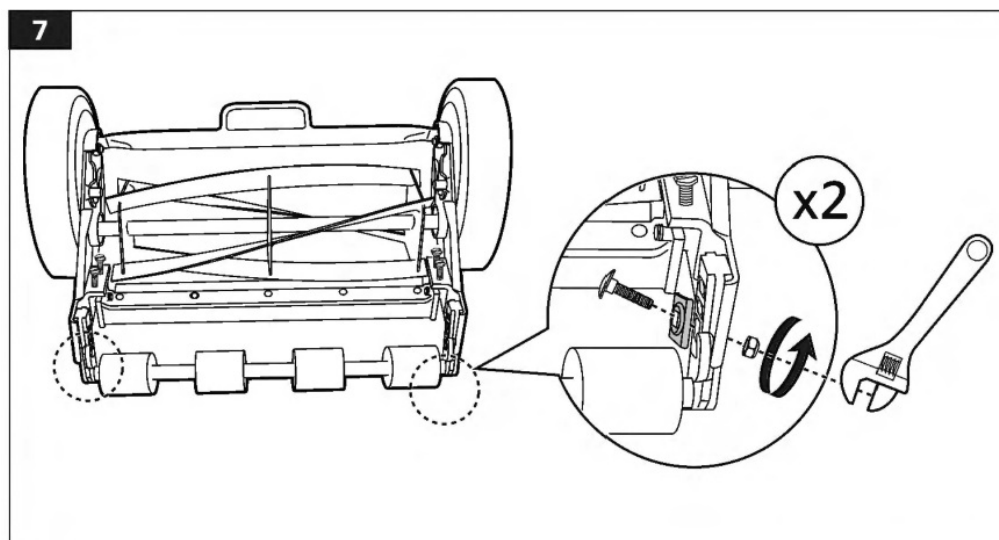

Use

Before each use

- First time operator should have practical instruction in the use of the lawn mower from an experienced

operator.

 
- Check the lawn mower and its accessories for damage. Do not use the lawn mower if it is damaged or worn out.
- Check for loose bolts, misalignment or binding of moving parts, or any other condition that may affect the use. If abnormal vibration or noise occurs, stop using the lawn mower immediately and have the problem corrected before further use.
- Check that the blade is clear of debris. Brush or rinse away any built-up grass debris on the blade and on the underside of the lawn mower.
- Check the sharpness of the blade before mowing. A sharp blade can enhance the performance of the lawn mower, especially when cutting tall grass.

NOTICE


For B0B1 SCKBMB model only: Installation of the grass catcher is optional. Without the grass catcher installed you can have the clippings redistributed into the yard via mulching.

Mowing Tips


- Walk at a steady pace. The mower blade rotation relies on the wheels turning at a quick walking pace for best results.
- Do not mow in circles. Move the product back and forth across the lawn.
- Do not mow when the soil or grass is wet. Wet soil and grass can stick on the blade and the underside of the product.
- Avoid spraying chemicals on the lawn prior to mowing.
- When cutting thick grass, reduce your walking speed in order to allow for a more effective cut and a proper discharge of the grass clippings.
- Avoid letting the grass get too tall . It is harder to push the lawn mower in tall grass. It is recommended to mow your lawn on a weekly basis.

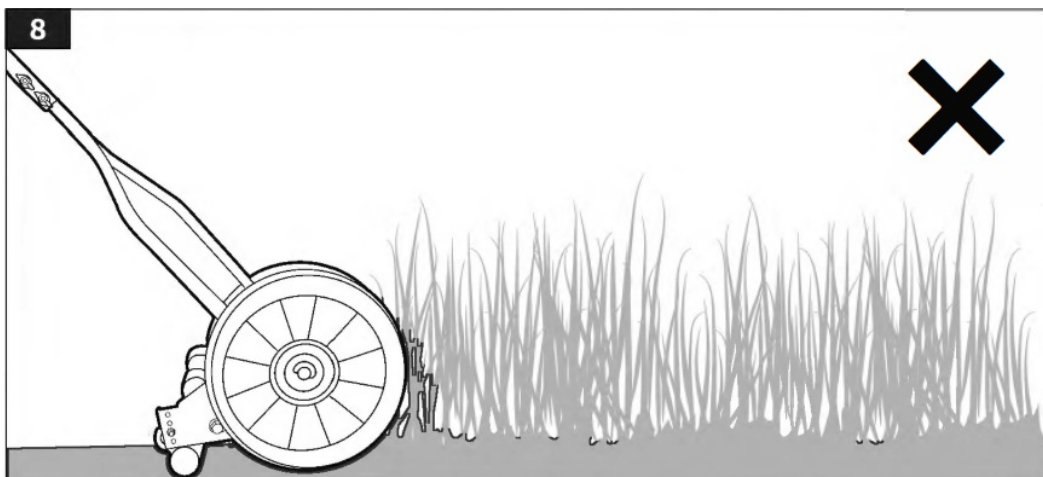

 - Do not mow tall weeds . If you have a weed infestation, clear all the weeds first or contact your local lawn service.

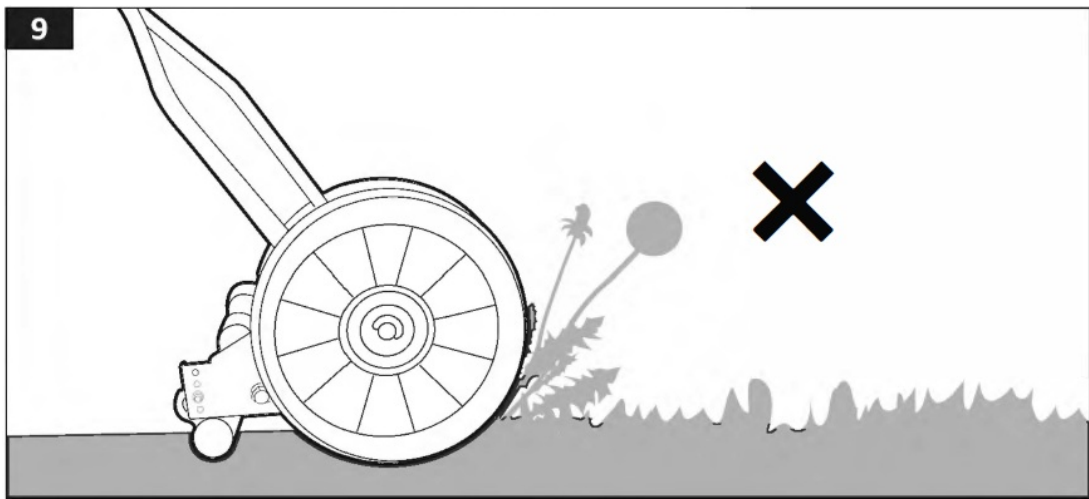

- Set the product to the maximum cutting height when mowing on uneven ground or in tall growth.
- Mow based on the height of the grass. Do not mow down more than a third of the total height of your grass each mowing. The average lawn should be approximately 1-1/2 to 2" (38 – 50 mm) long during cool months, and between 2 to 3-1/4" (SO – 83 mm) long during hot months.
- It is recommended to mow in the middle of the morning or in the late afternoon after a dry day. This reduces clumping, lawn damage, and heat stress on the grass.
- Mowing around the perimeter first can help square off the lawn and gives room to turn when mowing back in forth in rows.
- Mow back and forth in straight lines with a slight overlap . Continue this process until the entire section is mowed.

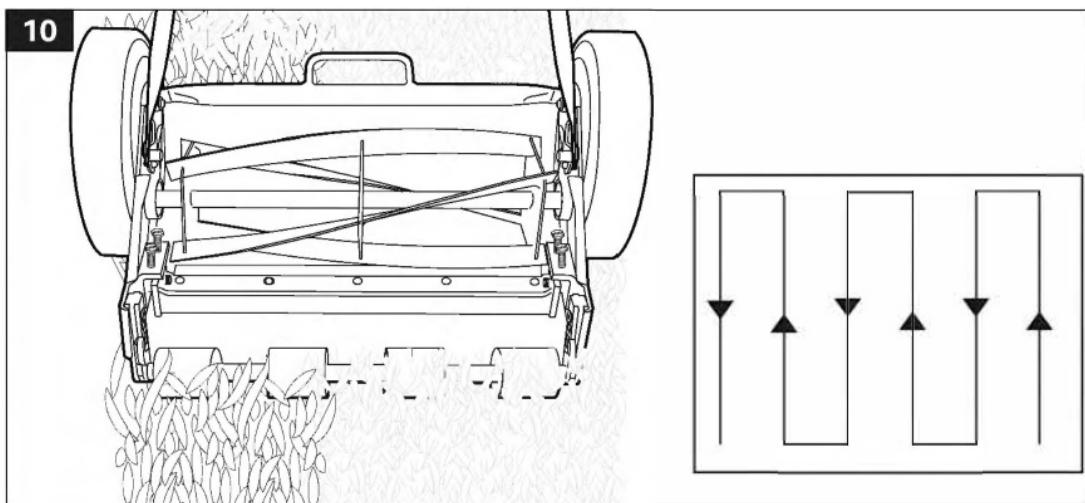 

Cleaning and Maintenance

CAUTION Risk of injury!

Always wear protective gloves when performing any cleaning or maintenance on the product, where the blade is located.

Quick clean

- Clean the outer housing with damp, lint-free cloth. Wipe dry after cleaning.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the lawn mower.

Deep clean

NOTICE

Clean grass clippings, leaves, dirt and other debris off the product after each use.

1. Turn the product on its side.
2. Scrape the grass residue off from the underside using a plastic paint scraper (not included) or a similar non-metallic tool.
3. Scrub away any remaining grass clippings and debris on the underside, and the front and wheels using a soft brush.
4. Use a garden hose to hose down the product.
5. Wipe the parts with a dry cloth.
6. To reduce grass clippings buildup, lightly spray some vegetable oil onto the parts of the lawn mower after cleaning.
7. Set the product to upright position after cleaning.

Cleaning the grass catcher (model B0B15CKBM8)

1. Detach the grass catcher from the lawn mower.
2. Empty the grass catcher.
3. Hose the outside and inside of the grass catcher down and gently scrub the debris off using a soft brush.
4. Let the grass catcher dry completely before attaching it to the lawn mower.

Maintenance and Storage

- Check the components regularly to make sure all bolts are tightened.
- Clean the lawn mower before storage.
- Store the lawn mower away from corrosive materials, such as fertilizer or rock salt.
- Store in a cool and dry place away from children and pets, ideally in original packaging.

Transporting in a vehicle

- When lifting the lawn mower, grab the small handle above the blades and the lawn mower handle. Use both hands.
- Secure the lawn mower when transporting in a vehicle to prevent turnover and damage to the lawn mower. Use a line or ratchet tie-down if necessary.
- If a suitable loading ramp is not available, ask another person for assistance when loading the lawn mower on a vehicle.

Lubrication

- Lubricate the moving parts and pivot points with light oil at least once each mowing season to prevent rusting.
- Lubricate the wheel axle with light oil when the wheels do not move smoothly during operation.

 
Sharpening the blade reel

CAUTION Risk of injury!


- Always wear protective gloves and eye protection when sharpening the blade reel.
- Inspect the blade reel regularly and do not operate the product with a worn or damaged blade. If the blade is excessively worn, bent, cracked, or otherwise damaged, do not sharpen it but have it repaired by a professional repair center.

NOTICE


- Sharpen the blade when it is dull. Keep the blade sharp so that it cuts grass properly.
- It is recommended to sharpen the blade twice during a mowing season under normal circumstances. If the lawn has sandy soil, more frequent sharpening may be required.
 - Prop the mower on a stable surface so that the blade reel can be rotated in a balanced manner.
 - Prepare a 10-inch metal file and wear protective gloves.
 - Hold the blade reel in place with one hand on the side. With even strokes, push the file on the top blade away from the edge. Slightly turn the blade reel to follow the curve along its entire length .

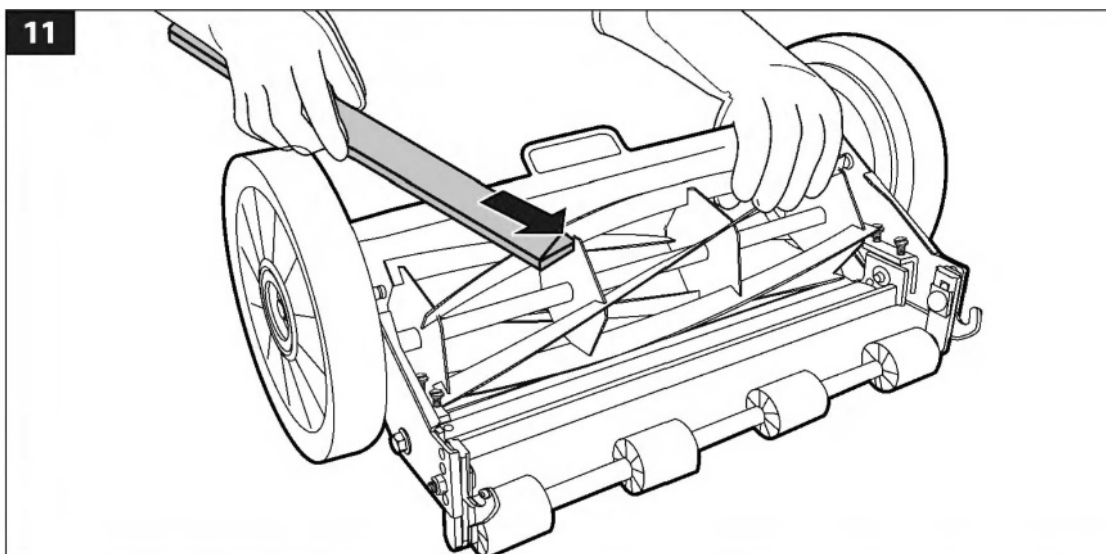

 - Rotate the blade reel so that the next blade is in the top position . Sharpen the remaining blades.

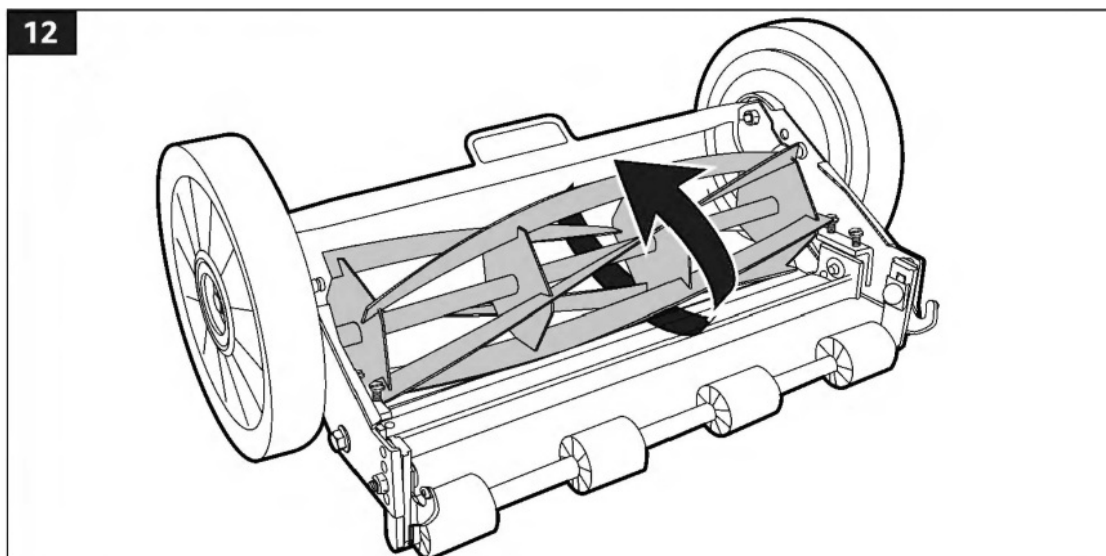

 - To test for sharpness, turn the lawn mower upside down. Wearing gloves, take a strip of paper and carefully turn the blade reel so that a blade cuts a small portion of the paper. Repeat for all blades. Each blade should slice the paper evenly across the entire length of the cutter blade while the reel turns smoothly.

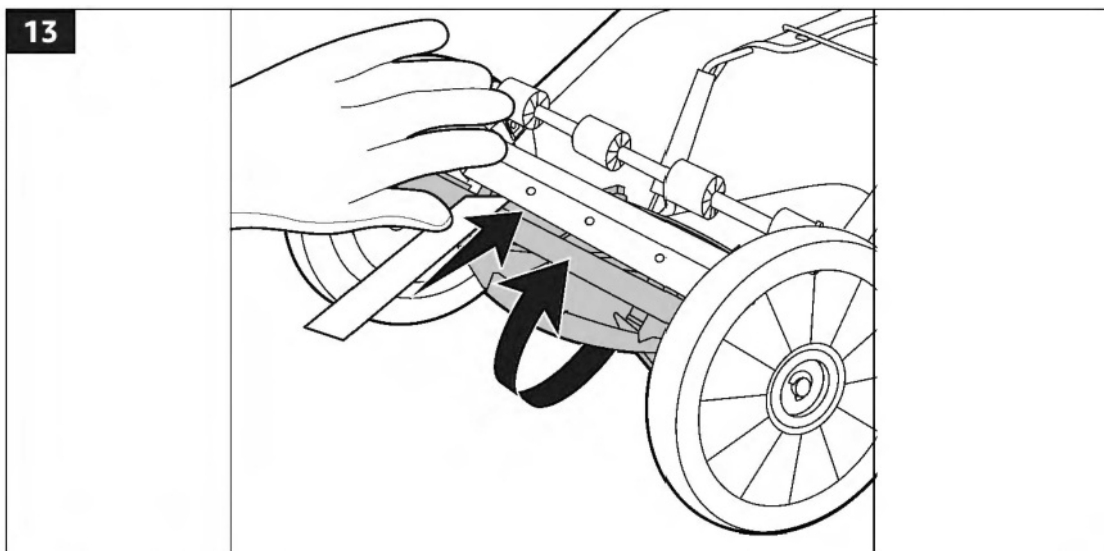

Disposal

Dispose of the product according to local regulations. If in doubt, consult your '9V local authorities.

Specifications

- **Net weight**

BOB 1 SCKBM8: approx. 22.6 lbs (10.25 kg)

BOB15BSRY9: approx. 17.4 lbs (7.95 kg)

- **Dimensions (W x H x D)**

BOB 1 SCKBM8: approx. 45.9 x 28.9 x 23.6" (116.5 x 73.5 x 60 cm)

BOB1 SBSRY9: approx. 19.7 x 44.5 x 13.4" (113 x 113 x 34 cm)

Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.

Scan QR Code below with your phone camera or QR reader:

US:



UK: amazon.co.uk/review/review-your-purchases#


If you need help with your Amazon Basics product, please use the website or number below.

US: amazon.com/gp/help/customer/contact-us

UK: amazon.co.uk/gp/help/customer/contact-us

0 +1 877-485-0385 (US Phone Number)

Documents / Resources

	<p>amazon basics B0B15CKBM8 Push Reel Lawn Mower [pdf] User Manual</p> <p>B0B15CKBM8 Push Reel Lawn Mower, B0B15CKBM8, Push Reel Lawn Mower, Reel Lawn Mower, Lawn Mower, Mower</p>
---	---

References

- [User Manual](#)