


amazon basics B0B5DF7HKV Rectangular Projection Alarm Clock Instruction Manual

[Home](#) » [amazon basics](#) » amazon basics B0B5DF7HKV Rectangular Projection Alarm Clock Instruction Manual




amazon basics B0B5DF7HKV Rectangular Projection Alarm Clock

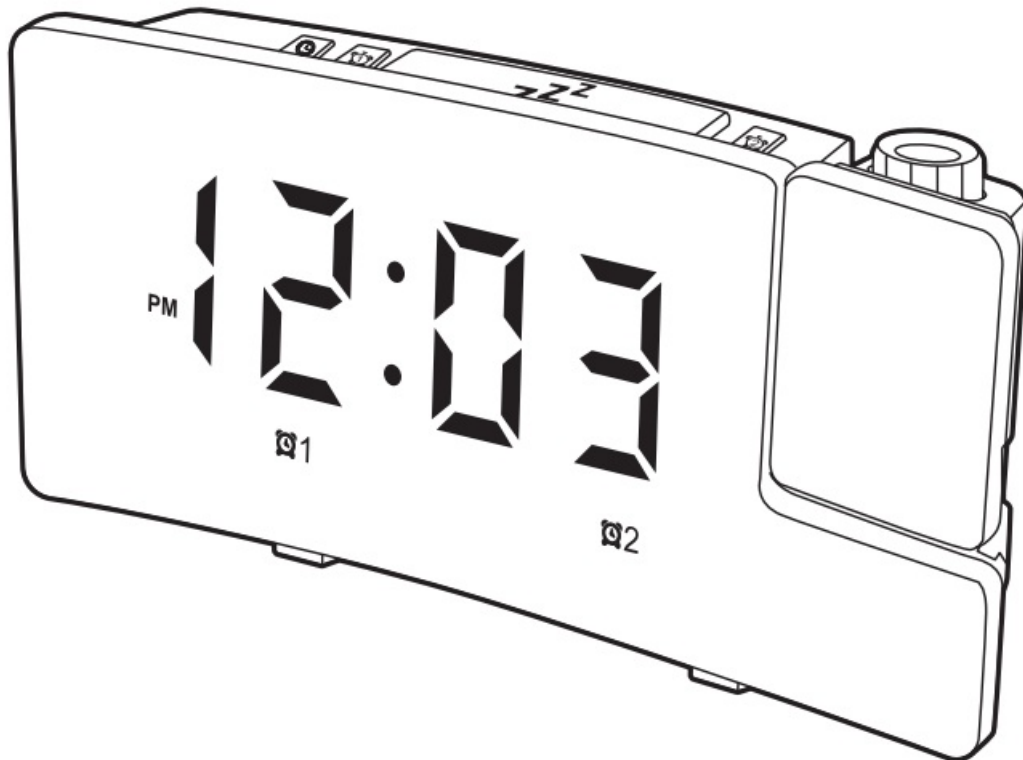


Contents

- [1 Connecting to a power supply](#)
- [2 Adjusting the projection](#)
- [3 Setting clock time](#)
- [4 Setting alarm time](#)
- [5 FM radio](#)
- [6 Setting a sleep timer](#)
- [7 Changing memory back-up battery](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Connecting to a power supply


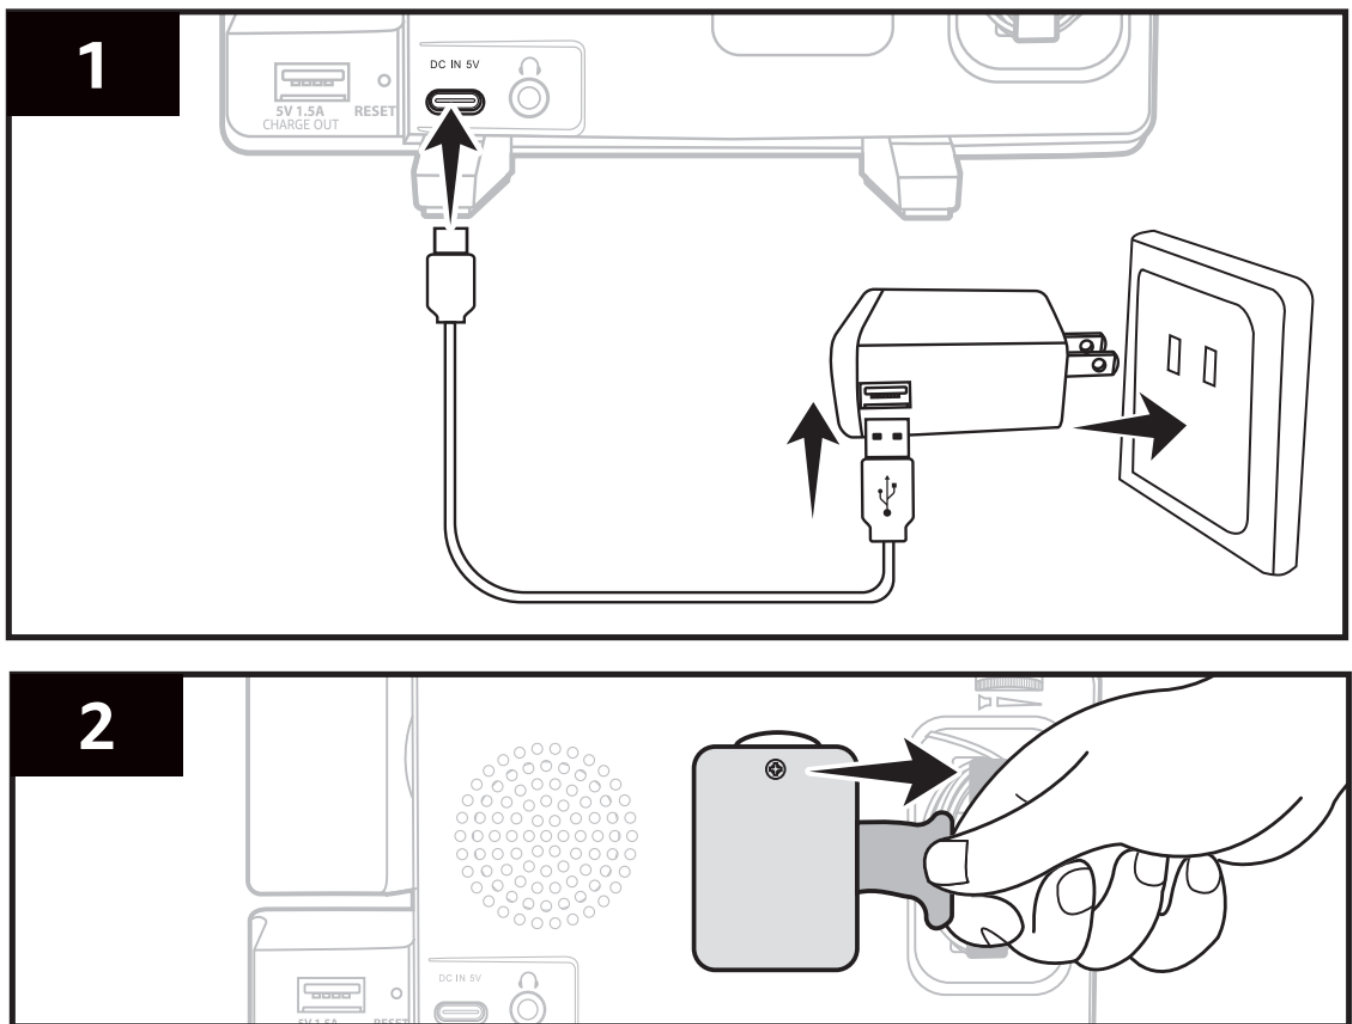


Adjusting the projection



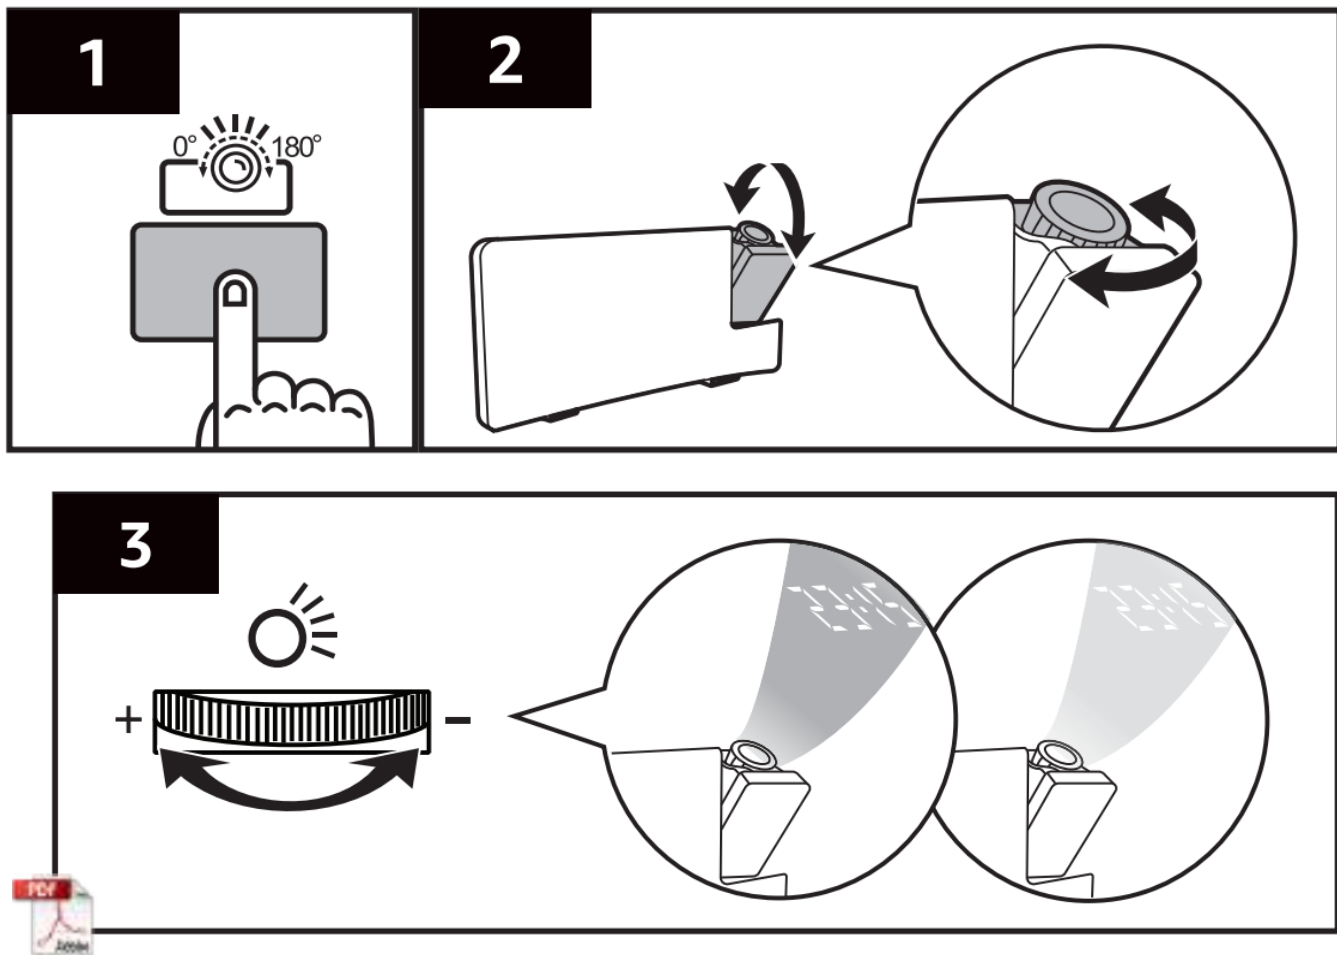


Setting clock time




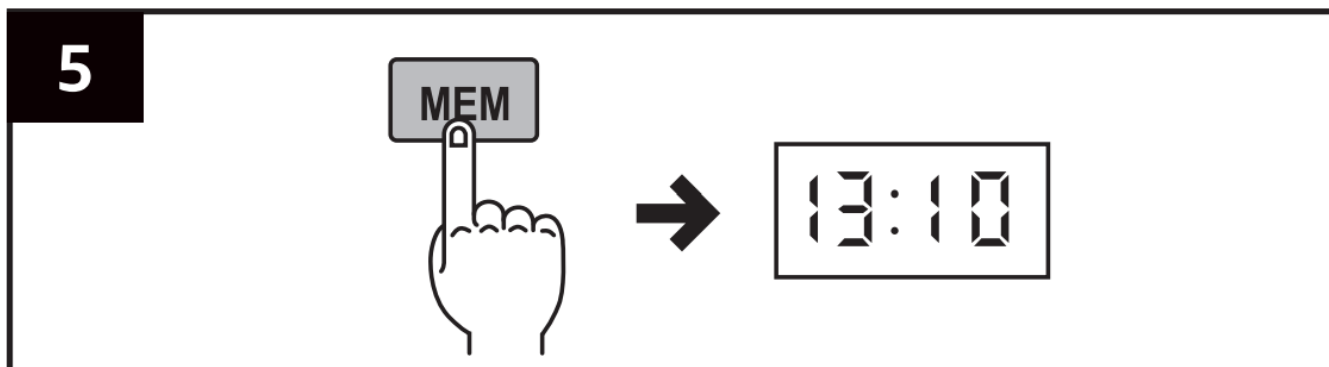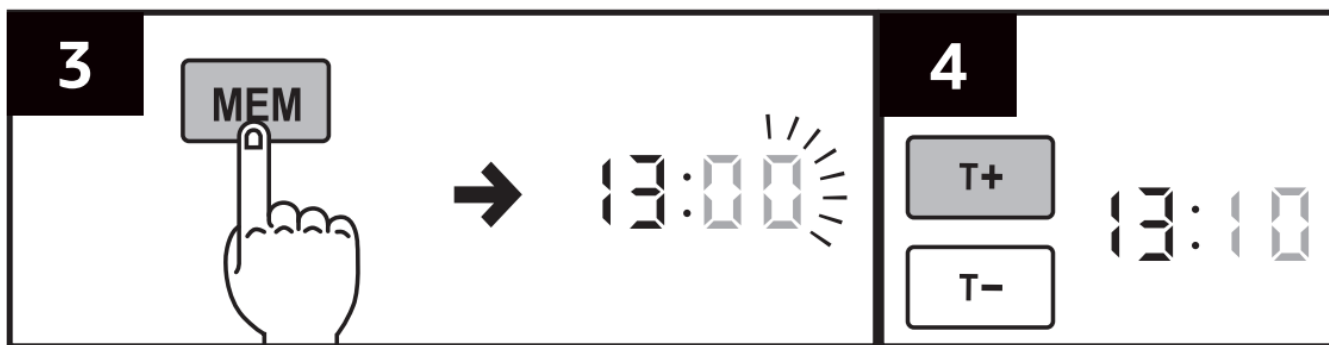


Setting alarm time

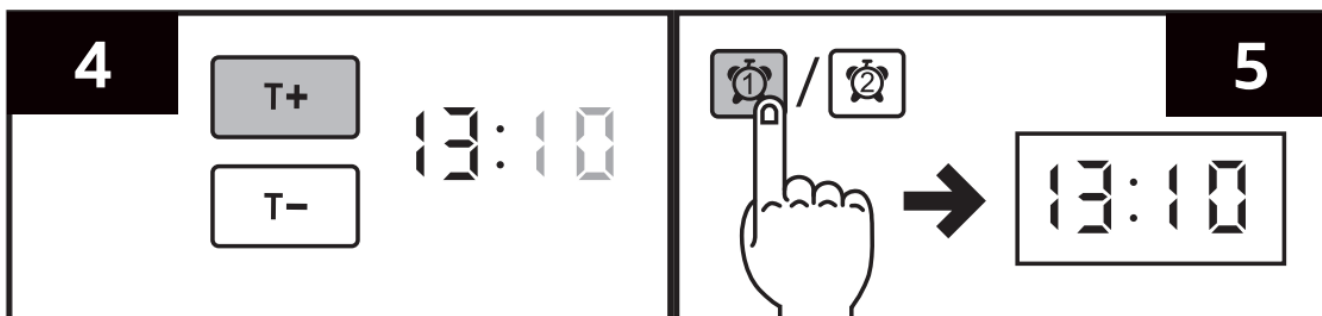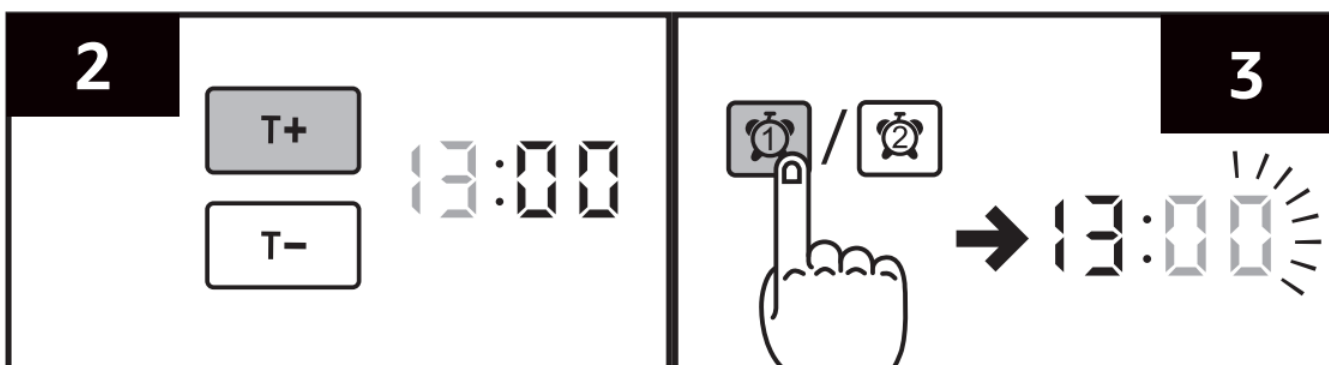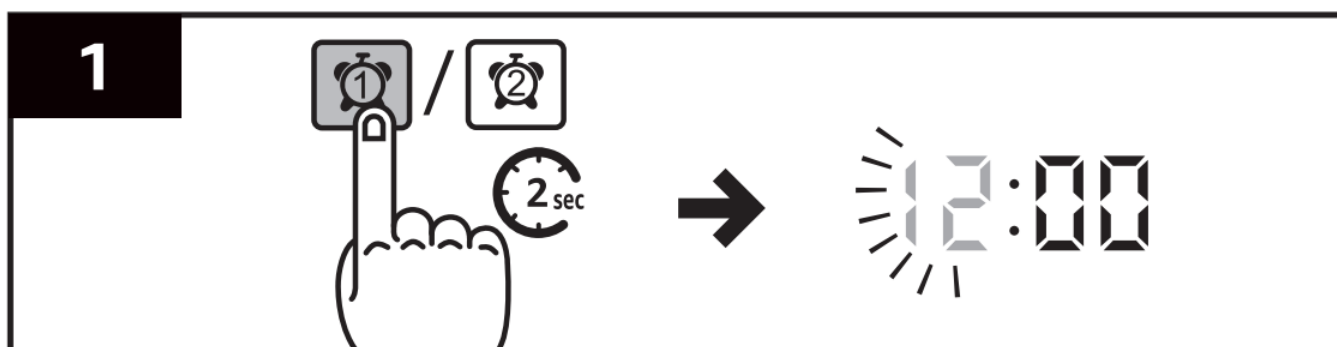

6

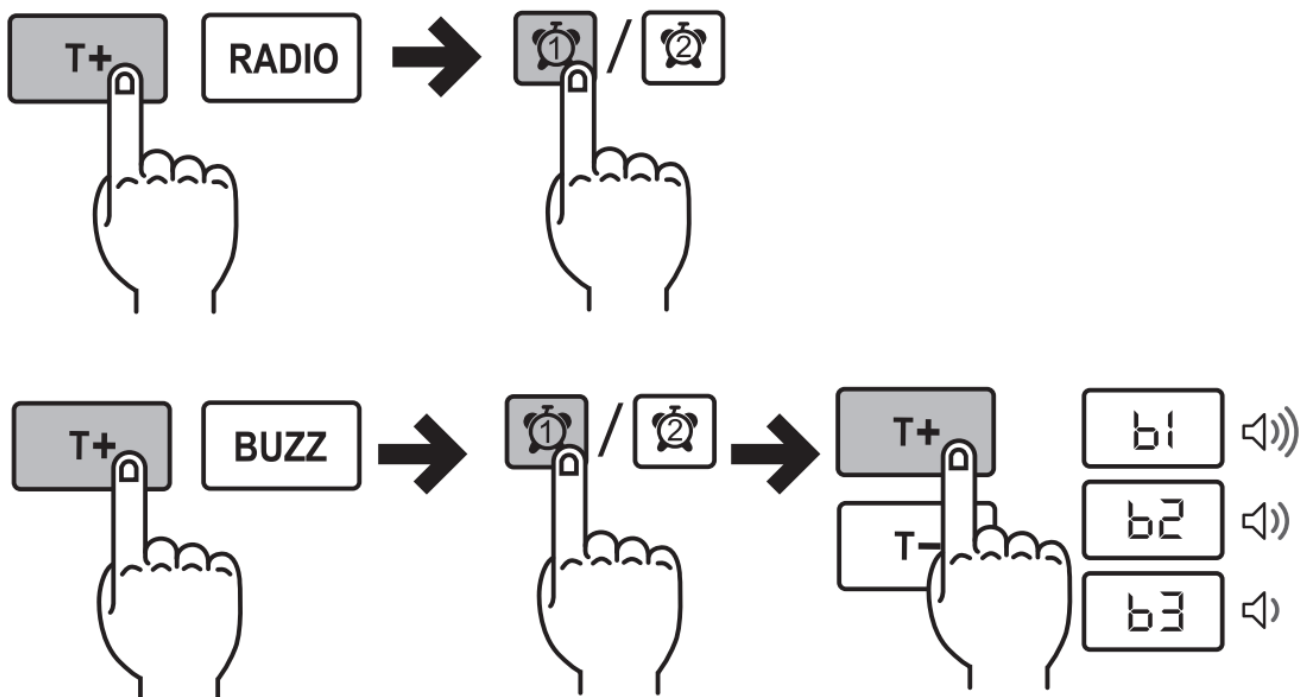


7

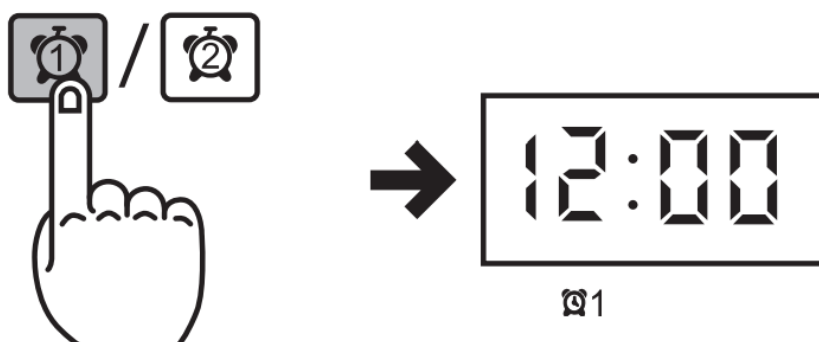



FM radio

1

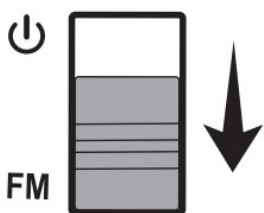


2

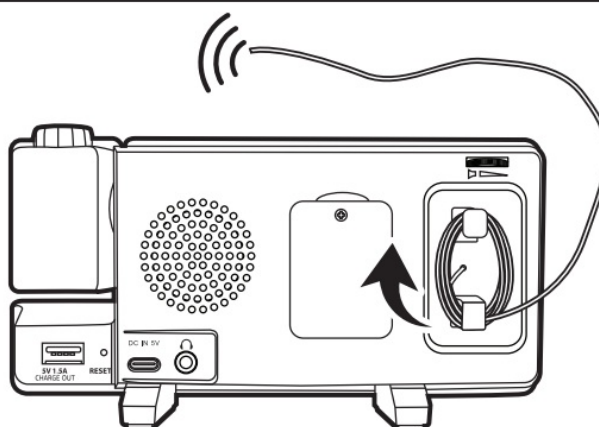

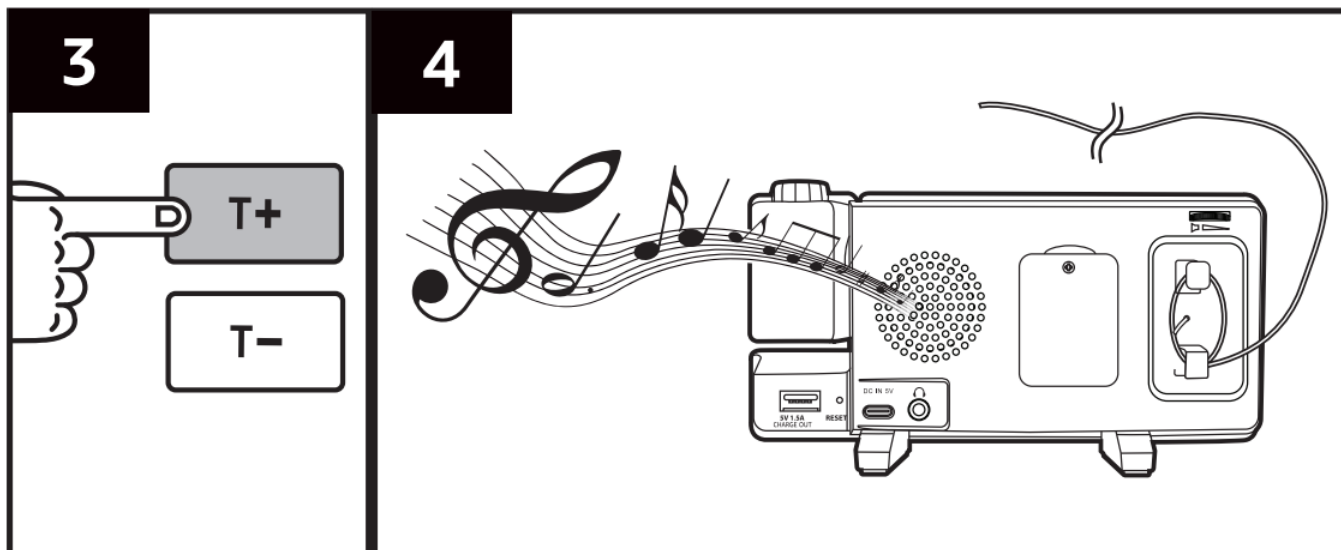


Setting a sleep timer

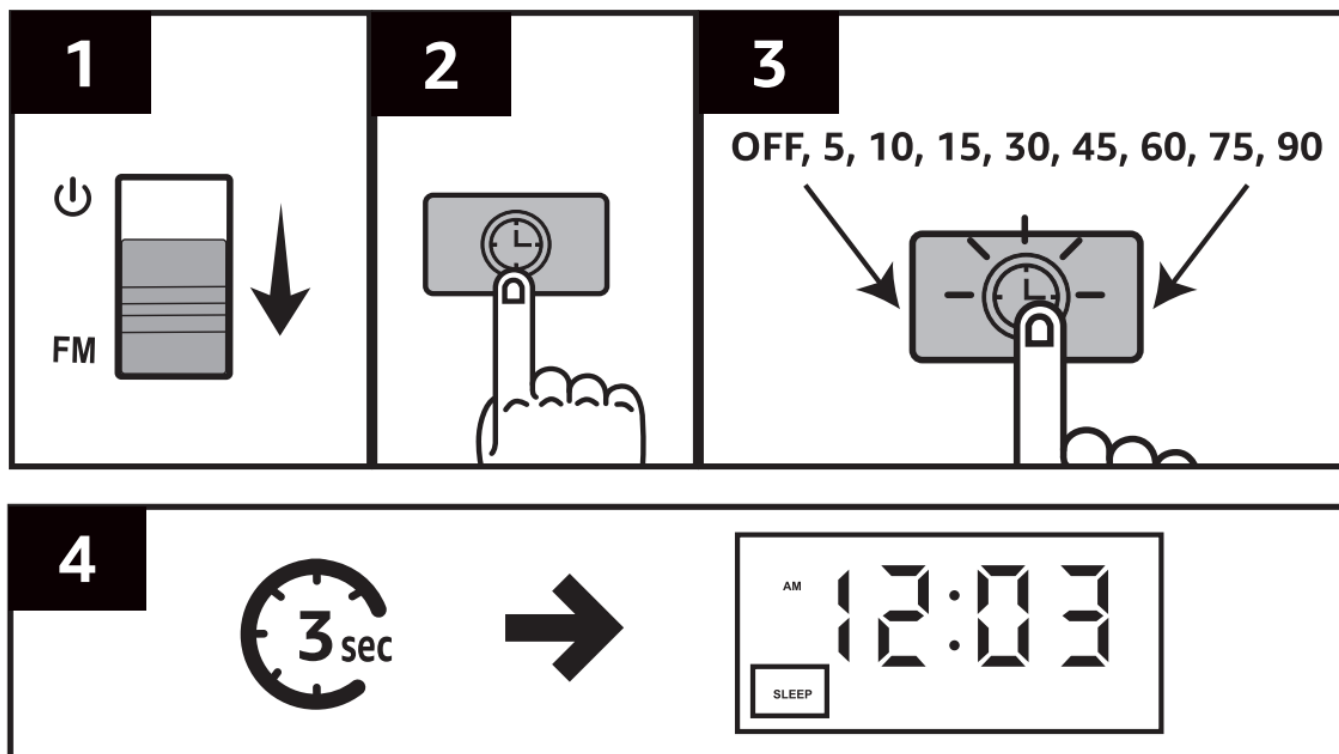


Changing memory back-up battery


1

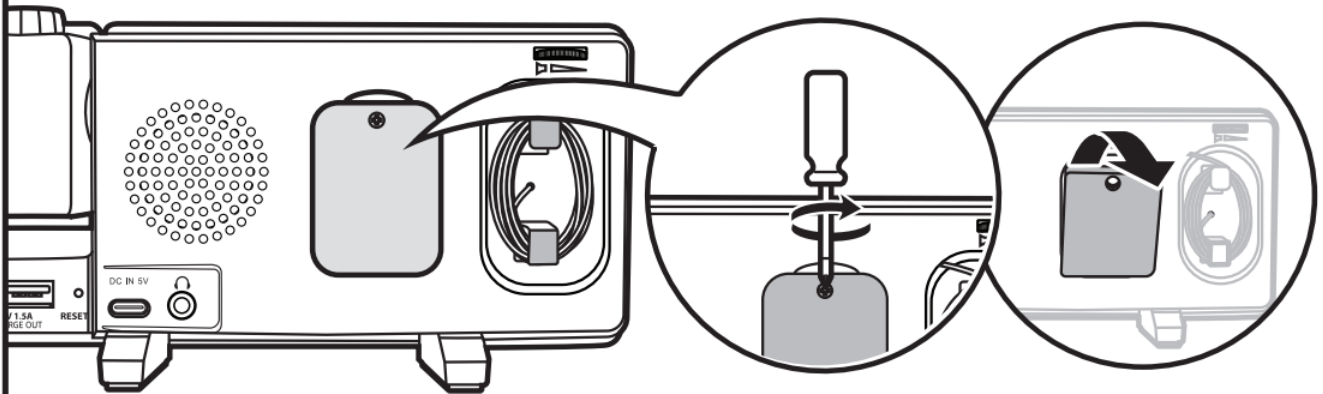


2

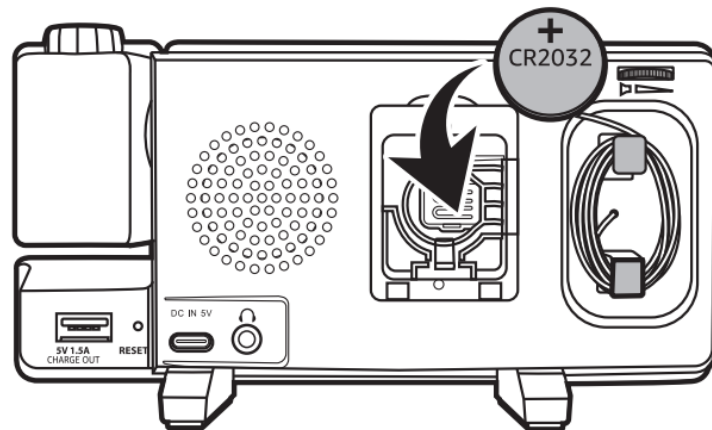

3

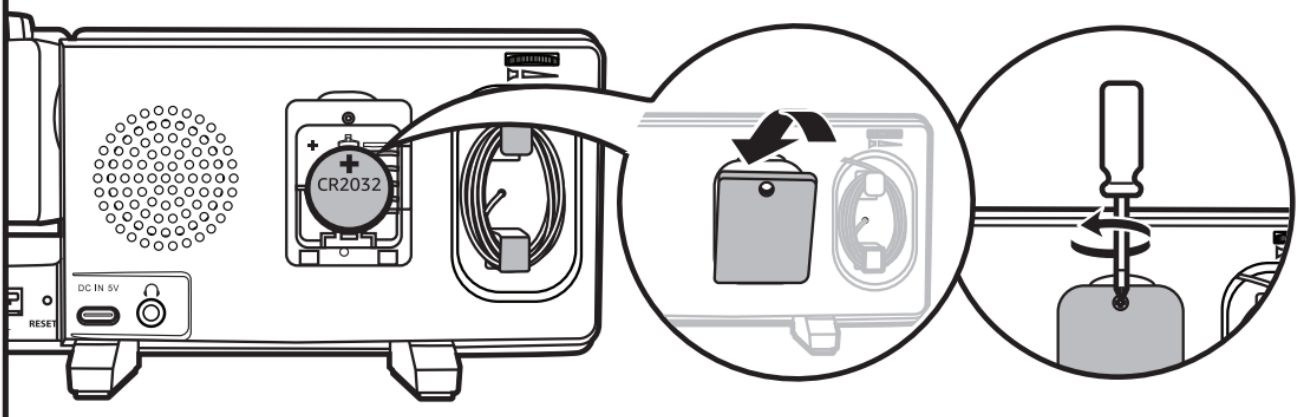

amazon basics

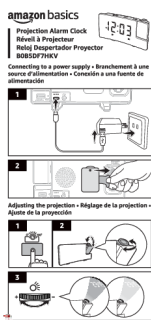

[amazon basics B0B5DF7HKV Rectangular Projection Alarm Clock](#) [pdf] Instruction Manual
MET8831-US, B0B5DF7HKV, B0B5DF7HKV Rectangular Projection Alarm Clock, Rectangular
Projection Alarm Clock, Projection Alarm Clock, Alarm Clock, Clock