

amazon basics B0BCVT2LZ4 Dog Exercise Playpen with Door **Instruction Manual**

Home » amazon basics » amazon basics B0BCVT2LZ4 Dog Exercise Playpen with Door Instruction Manual









Contents

- **1 Delivery Content**
- **2 Important Safeguards**
- 3 Before First Use
- 4 Installation
- 5 Cleaning and
- Maintenance
- 6 Disposal
- **7 Specifications**
- 8 Feedback and Help
- 9 Assembly
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

Delivery Content

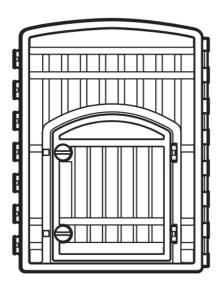

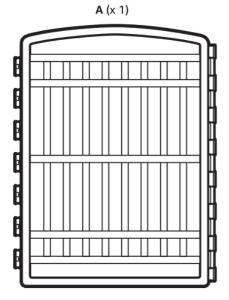



C (x 16)

Important Safeguards

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:

- · For domestic use only.
- Be cautious when opening/closing the product. Keep hands away from the folding mechanisms to prevent fingers from being trapped and pinched.
- This product must be assembled by an adult.
- Keep children and pets away while assembling the product.
- Do not let children climb on or play with the product.
- Always use the product on a firm, level ground.
- Do not use this product if any parts are missing, damaged, or worn.
- Regularly examine the product for wear and tear. Stop using the product at first sign of damage or if parts become detached.
- The product is not suitable for pets whose heads are smaller than the gap between the grids of the panels.
- Due to ages, breeds and sizes, personalities, and other individual differences, it is possible that some pets may get stuck in the gaps in the panels or may be able to escape from the pet pen.
- Do not move the pet pen with your pet inside.
- Extended periods of use may cause discomfort for your pet. Ensure your pet's physical needs are met.
- Some pets may be able to figure out how to open the pet pen door. In this case, use a padlock.

Before First Use



DANGER Risk of suffocation!

Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. suffocation.

- Remove all the packing materials.
- · Remove and review all components before assembly.
- · Check the product for transport damages.

Installation



For additional illustrated assembly steps, refer to the end of the written instructions.

Cleaning and Maintenance

Cleaning

- To clean the product, wipe with a soft, slightly damp cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product

Maintenance

Store in a cool and dry place away from children and pets, ideally in original packaging.

Disposal

Dispose of the product according to local regulations. If in doubt, consult your local authorities.

Specifications

Net weight: approx. 21.5 lbs (9.7 kg)

Dimensions (W x H x D): approx. 63 x 34.5 x 63" (160 x 87.6 x 160 cm)

Material

Panel, Handle: Polypropylene

Rubber Foot: Rubber

Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.

Scan QR Code below with your phone camera or QR reader:





If you need help with your Amazon Basics product, please use the website or number below.



1 877-485-0385

Assembly

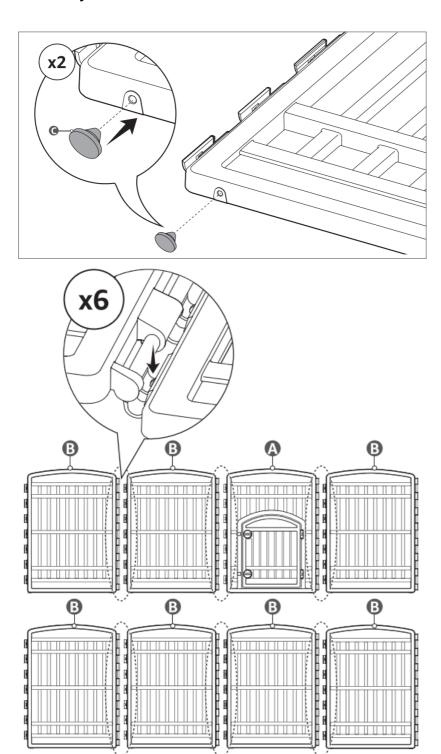

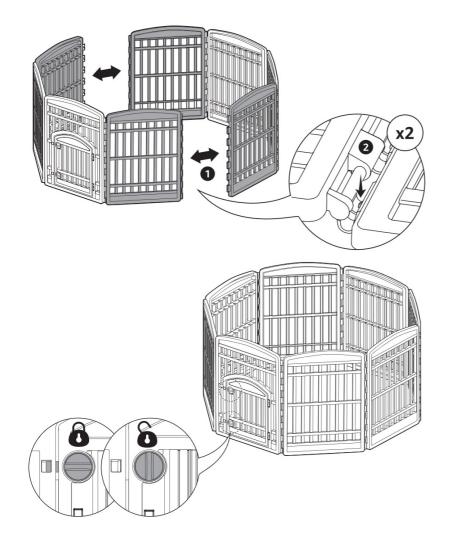

amazon.com/Amazon Basics

MADE IN THE USA WITH GLOBAL MATERIALS FABRIQUÉ AUX ÉTATS-UNIS AVEC DES MATÉRIAUX INTERNATIONAUX HECHO EN EE.UU. CON MATERIALES DE VARIOS PAÍSES V01-11/22

amazon basics

Documents / Resources



amazon basics B0BCVT2LZ4 Dog Exercise Playpen with Door [pdf] Instruction Manual B0BCVT2LZ4 Dog Exercise Playpen with Door, B0BCVT2LZ4, Dog Exercise Playpen with Door, Exercise Playpen with Door, Playpen with Door, Door

References

User Manual

Manuals+,