



Amazon Basics B0BR1QWZ2V 22.9 cm Clear 2 Tier Lazy Susan Turntable Organizer User Manual

[Home](#) » [amazon basics](#) » Amazon Basics B0BR1QWZ2V 22.9 cm Clear 2 Tier Lazy Susan Turntable Organizer User Manual 

Amazon Basics B0BR1QWZ2V 22.9 cm Clear 2 Tier Lazy Susan Turntable Organizer

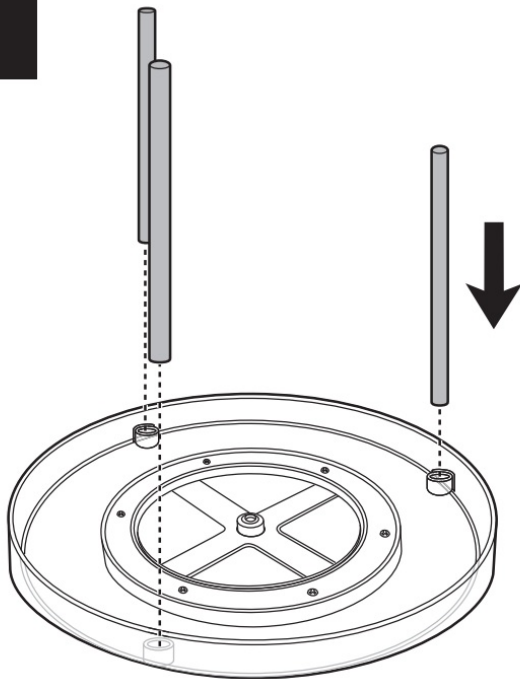
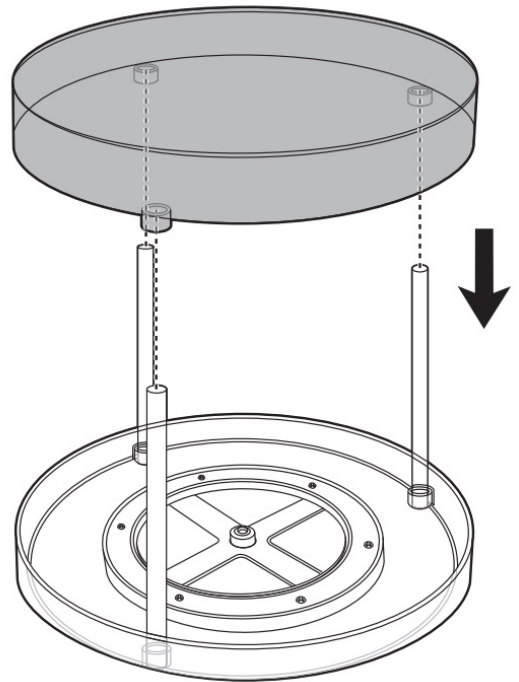


Contents

- [1 Instruction For Use](#)
- [2 Important Safeguards](#)
- [3 Before First Use](#)
 - [3.1 Use](#)
- [4 Cleaning](#)
- [5 Disposal](#)
- [6 Specifications](#)
- [7 Importer Information](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Instruction For Use

Insert the 3 rods into the bottom tier. Position the top tier on top of the rods.

1**2**

Important Safeguards



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

⚠ CAUTION Risk of injury or damage!

If the product is overloaded or unbalanced, it can tip over and spill the contents, which could cause injury or damage. Store heavy items on the bottom tier. Distribute weight evenly on both tiers.

- For domestic use only.
- This product is not a toy. Keep away from children and pets.
- Place the product on a stable and level surface.
- Turn the product gently to avoid items falling off. Use a non-slip mat if necessary.

Before First Use

⚠ DANGER Risk of suffocation!

Keep any packaging materials away from children and pets -these materials are a potential source of danger, e.g. suffocation.

- Remove all the packing materials.
- Remove and review all components before use.
- Check the product for transport damages.

Use

Place the product inside the refrigerator, pantry, cabinet or on a counter top to organize spices, sauces and packaged foods, personal care items, or household cleaning products.

Cleaning

- This product is not dishwasher-safe.
- Hand wash only with warm water and mild dish soap. Let dry completely before use.
- To spot clean the product, wipe with a soft, slightly damp cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Disposal



Dispose of the product according to local regulations. If in doubt, consult your local authorities.

Specifications

| | | |
|------------------------|--------------------------------------------------|------------------------------------------------|
| Model | BOBR1QWZ2V | BOBR1RYYFQ |
| Net weight | approx. 1.2 lbs (0.54 kg) | approx. 1.87lbs (0.85 kg) |
| Dimensions (W x H x D) | approx. 9 x 7.67 x 9" (22.8 x 19.5 x 22.8 cm) | approx.12×7.67x 12" (30.4 x 19.5 x 30.4 cm) |

Importer Information

| | |
|---------------|-------------------------------------------------------------------------------------------|
| | For EU |
| Postal | Amazon EU S.a r.l., 38 avenue John F. Kennedy, L-1855 Luxembourg |
| Business Reg. | 134248 |
| | For UK |
| Postal | Amazon EU SARL, UK Branch, 1 Principal Place, Worship St, London EC2A 2FA, United Kingdom |
| Business Reg. | BR017427 |





[Amazon Basics B0BR1QWZ2V 22.9 cm Clear 2 Tier Lazy Susan Turntable Organizer](#) [pdf]
User Manual
B0BR1QWZ2V 22.9 cm Clear 2 Tier Lazy Susan Turntable Organizer, B0BR1QWZ2V, 22.9 cm
Clear 2 Tier Lazy Susan Turntable Organizer, Susan Turntable Organizer, Turntable Organizer

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.