


amazon basics BOBR1QWZ2V 2 Tier Clear Lazy Susan Turntable Organizer



amazon basics BOBR1QWZ2V 2 Tier Clear Lazy Susan Turntable Organizer Instruction Manual

[Home](#) » [amazon basics](#) » amazon basics BOBR1QWZ2V 2 Tier Clear Lazy Susan Turntable Organizer Instruction Manual 

Contents

- [1 amazon basics BOBR1QWZ2V 2 Tier Clear Lazy Susan Turntable Organizer](#)
- [2 Important Safeguards](#)
- [3 Before First Use](#)
- [4 Cleaning](#)
- [5 Specifications](#)
- [6 Importer Information](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



amazon basics BOBR1QWZ2V 2 Tier Clear Lazy Susan Turntable Organizer



Important Safeguards

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

CAUTION Risk of injury or damage!

- If the product is overloaded or unbalanced, it can tip over and spill the contents, which could cause injury or damage.
- Store heavy items on the bottom tier.
- Distribute weight evenly on both tiers.
- For domestic use only.
- This product is not a toy. Keep away from children and pets.
- Place the product on a stable and level surface.
- Turn the product gently to avoid items falling off. Use a non-slip mat if necessary.

Before First Use

DANGER Risk of suffocation!

- Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. suffocation.
- Remove all the packing materials.
- Remove and review all components before use.
- Check the product for transport damages.

Use

- Place the product inside the refrigerator, pantry, or cabinet or on a countertop to organize spices, sauces packaged foods, personal care items, or household cleaning products.

Cleaning

- This product is not dishwasher-safe.
- Hand wash only with warm water and mild dish soap. Let dry completely before use.
- To spot-clean the product, wipe with a soft, slightly damp cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, or metal or sharp utensils to clean the product.

Disposal

- Dispose of the product according to local regulations.
- If in doubt, consult your local authorities.


Specifications

Model	B0BR1QWZ2V	B0BR1RYYFQ
Net weight	approx. 1.2 lbs (0.54 kg)	approx. 1.72 lbs (0.72 kg)
Dimensions (W x H x D)	approx. 9 x 7.8 x 9" (22.8 x 19.8 x 22.8 cm)	approx. 12 x 7.8 x 12" (30.4 x 19.8 x 30.4 cm)

Importer Information

	For EU
Postal	Amazon EU S.à r.l., 38 avenue John F. Kennedy, L-1855 Luxembourg
Business Reg.	134248
	For UK
Postal	Amazon EU SARL, UK Branch, 1 Principal Place, Worship St, London EC2A 2FA, United Kingdom
Business Reg.	BR017427

Insert the 3 rods into the bottom tier. Position the top tier on top of the rods.

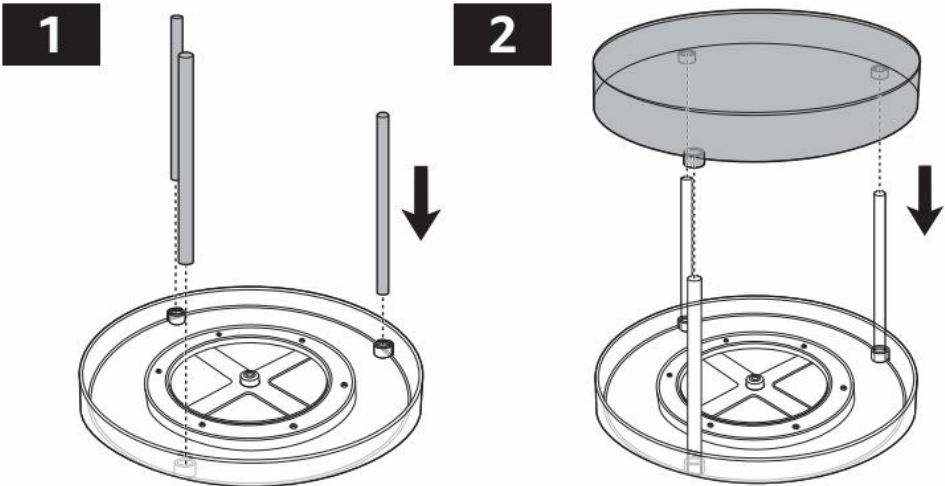

Documents / Resources



[amazon basics BOBR1QWZ2V 2 Tier Clear Lazy Susan Turntable Organizer](#) [pdf] Instruction Manual
BOBR1QWZ2V 2 Tier Clear Lazy Susan Turntable Organizer, BOBR1QWZ2V, 2 Tier Clear Lazy Susan Turntable Organizer, Clear Lazy Susan Turntable Organizer, Lazy Susan Turntable Organizer, Susan Turntable Organizer, Turntable Organizer

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.