



# amazon basics HM8011 Rechargeable Wireless Keyboard Mouse Combo User Guide

[Home](#) » [amazon basics](#) » amazon basics HM8011 Rechargeable Wireless Keyboard Mouse Combo User Guide



## Contents

- 1 [amazon basics HM8011 Rechargeable Wireless Keyboard Mouse Combo](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [Parts List – Mouse](#)
- 5 [Parts List – Keyboard](#)
- 6 [Keyboard & Mouse Charging](#)
- 7 [Connction](#)
- 8 [Keyboard & Mouse LED Indicator](#)
- 9 [Cleaning and Maintenance](#)
- 10 [FCC -Supplier's Declaration of Conformity](#)
- 11 [Canada IC Notice](#)
- 12 [Safety and Compliance](#)
- 13 [Battery Warnings](#)
- 14 [Disposal](#)
- 15 [Specifications](#)
- 16 [Documents / Resources](#)
  - 16.1 [References](#)



**amazon basics HM8011 Rechargeable Wireless Keyboard Mouse Combo**



## Product Information

- **Product Name:** AmazonBasics Rechargeable Wireless Mouse
- **Model Number:** PMN
- **Manufacturer:** AmazonBasics
- **Country of Origin:** Made in China

## Parts List – Mouse

- Left Button
- Scrolling Wheel
- Right Button
- DPI Button
- Low battery Indicator
- ON/OFF Switch
- Sensor
- USB Cover
- Nano Receiver
- Type-C Charging Port

## Parts List – Keyboard

- Media player program button
- Volume decrease button
- Volume increase button
- Mute button
- Previous track button
- Next track button
- Play/pause media playback button
- Stop media playback button
- Default Web browser button
- Default e-mail client button
- 'My Computer' folder button
- 'My favorite' button (inside the browser)
- Fn lock button
- Right click button
- Search button
- Calculator button
- Screen button
- LED indicator for low battery
- LED indicator for Number Lock on
- LED indicator for Caps Lock on
- LED indicator for Scroll Lock
- Second function of Function keys button

- USB cover
- ON/OFF Switch
- Type-C Charging port

## **Keyboard & Mouse Charging**

### **Charging Cable:** Type-C Charging Cable

When the battery is too low, the power red indicator will flash until shut down. Please connect to the power supply to charge in time to ensure that the keyboard and mouse have sufficient power for normal work. If the battery of the keyboard and mouse is too low, there may be delays, freezes, and other typing problems that can affect normal use. The power indicator turns red while charging and then turns green after 2-3 hours when fully charged.

### **Connection**

1. Turn on the power switch to ON.
2. Take out the USB receiver from the keyboard slot (Keyboard and Mouse share one Receiver).
3. Plug the USB receiver into a USB port on your computer.

### **Battery Indicator**

**Keyboard & Mouse LED Indicator:** The LED on the keyboard and mouse lights up for 10 seconds when turned on.

**Battery Indicator:** The low battery LED blinks red light while charging and turns green when charging is completed.

### **Cleaning and Maintenance**

To clean the product, follow the manufacturer's instructions provided in the user manual.

### **FCC – Supplier's Declaration of Conformity**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **Canada IC Notice**

**Intended Use:** This product is a wireless computer peripheral intended for interacting with your desktop/laptop.

### **Safety and Compliance**

**WARNING:** Do not look directly at the LED light.

### **Battery Disposal**

Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.

## **Specifications**

- Mouse Weight:
- Keyboard Weight:
- Mouse Dimensions:
- Keyboard Dimensions:

## **Product Usage Instructions**

Follow the steps below to use the AmazonBasics Rechargeable Wireless Mouse and Keyboard Combo:

### **Mouse Usage**

1. Turn on the mouse using the ON/OFF switch located on the mouse.
2. Connect the USB receiver to a USB port on your computer.
3. The mouse is now ready to use. Left-click, right-click, scroll using the scrolling wheel, adjust DPI using the DPI button, and check the low battery indicator for battery status.
4. To charge the mouse, connect the Type-C charging cable to the Type-C charging port on the mouse and connect the other end to a power supply. The power indicator will turn red while charging and green when fully charged.

### **Keyboard Usage**

 
1. Turn on the keyboard using the ON/OFF switch located on the keyboard.
2. Connect the USB receiver to a USB port on your computer.
3. The keyboard is now ready to use. Use the various function keys for media control, volume adjustment, opening programs, enabling secondary functions, and more. Check the LED indicators for battery status, number lock, caps lock, and scroll lock.
4. To charge the keyboard, connect the Type-C charging cable to the Type-C charging port on the keyboard and connect the other end to a power supply. The power indicator will turn red while charging and green when fully charged.

[amazon.com/AmazonBasics](https://www.amazon.com/AmazonBasics)

PMN:Rechargeable Wireless Mouse

 
 
MADE IN CHINA FABRIQUE EN CHINE HERGESTELLT IN CHINA PRODOTTO IN CINA HECHO EN CHINA  
GEMAAKT IN CHINA



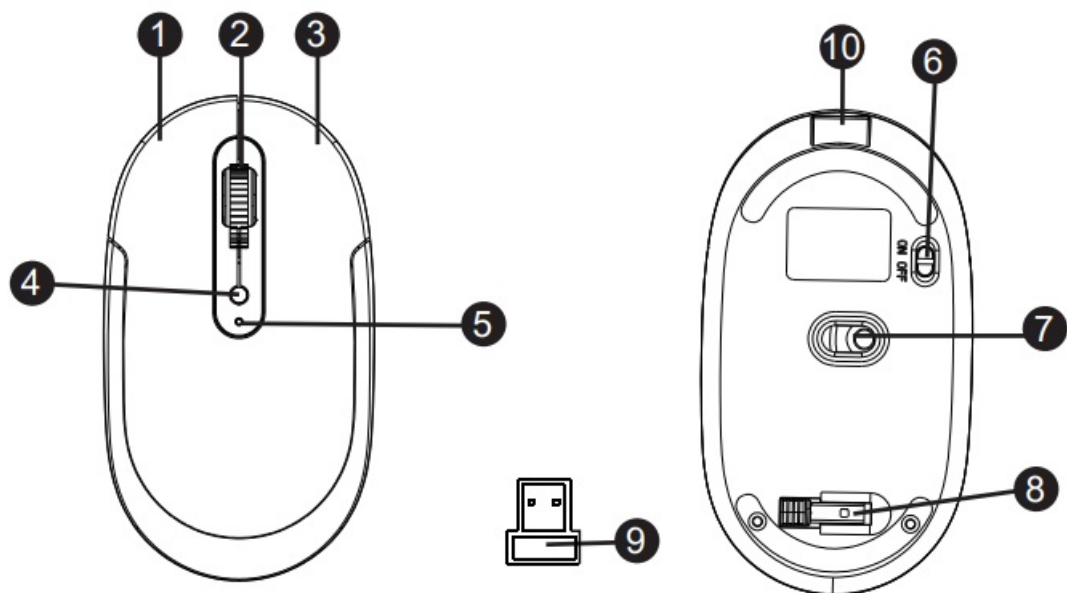





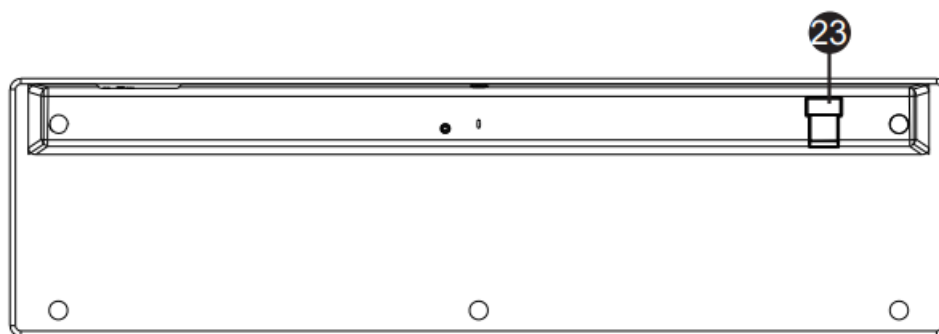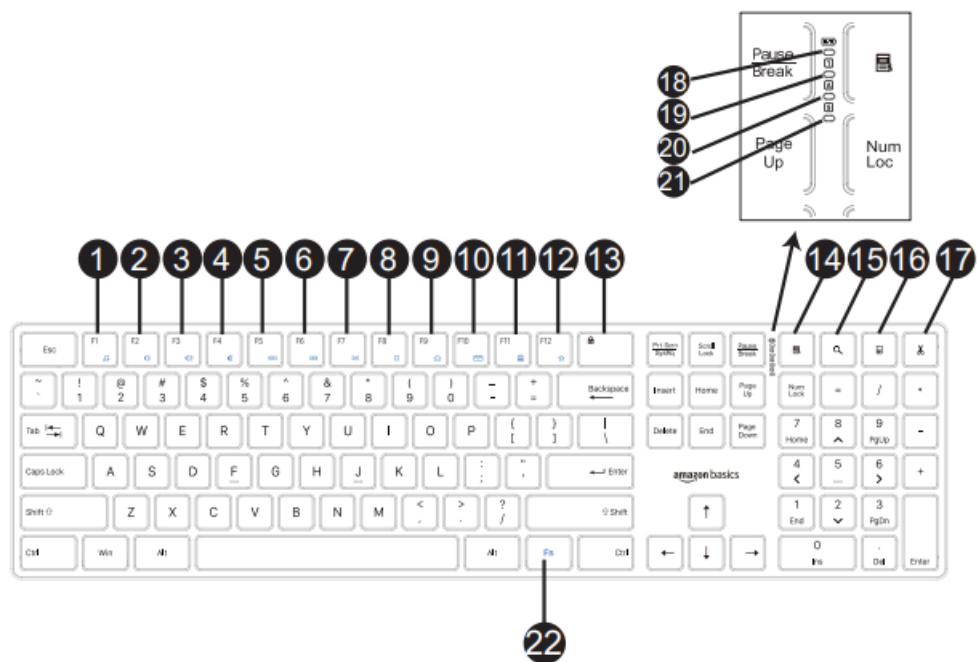



## **Parts List – Mouse**













1. Left Button
2. Scrolling Wheel
3. Right Button
4. DPI Button
5. Low battery Indicator
6. ON/OFF Switch
7. Sensor
8. USB Cover
9. Nano Receiver
10. Type-c charging port

## Parts List – Keyboard



 
1		To turn on the Media player program
2		To decrease volume
3		To increase volume
4		To mute the sound
5		Previous track
6		Next track
7		To play/pause media playback
8		To stop media playback
9		To start the default Web browser and load the home page
10		To start the default e-mail client
11		To open up the folder 'My Computer'
12		To open 'My favorite' when inside the browser

13		Fn lock
14		Right click
15		Search
16		Calculator
17		Screen
18		LED indicator    Low battery
19		LED indicator    Number Lock on
20		LED indicator    Caps Lock on
21		LED indicator    Scroll Lock indicator
22		To enable the second function of the Function keys
23	USB cover	
24	ON/OFF Switch	
25	Typec-C Charging port	

#### NOTE

Press Fn + any function key (1 through 12) to trigger the secondary function of each key.

#### Keyboard & Mouse Charging

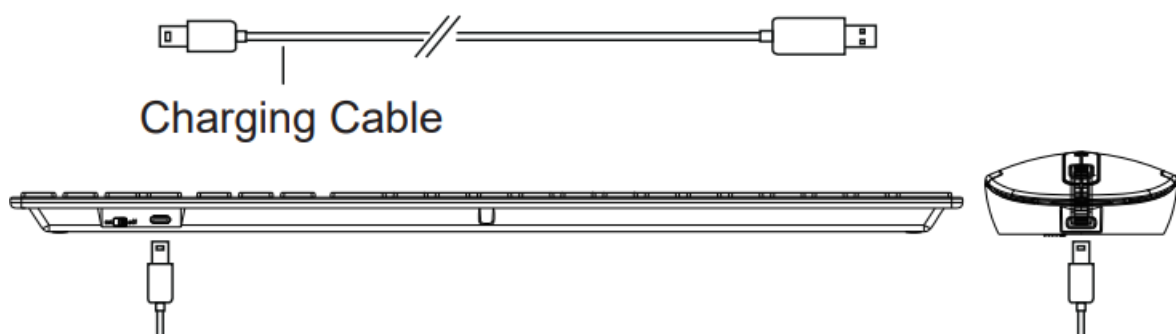





When the battery is too low, The power red Indicator will flash until shut down please connect to the power supply to charge in time to ensure that the keyboard and mouse sufficient power to meet normal work.  
if the battery of the keyboard and mouse is too low, there will have delays and freezes and other problems in typing, which will affect normal use.  
Power indicator turns red while charging then turns to green after 2-3 hours fully charged.

## Connction

 
1. Turn on the power switch to ON.

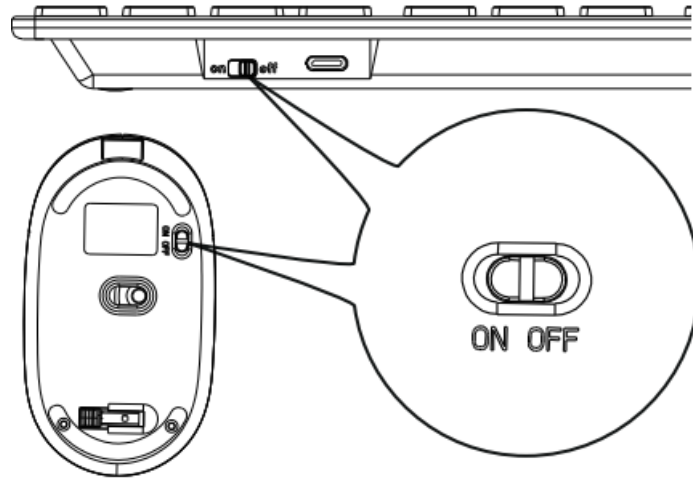

 2. Take out the USB receiver from keyboard slot(Keyboard and Mouse share one Receiver)

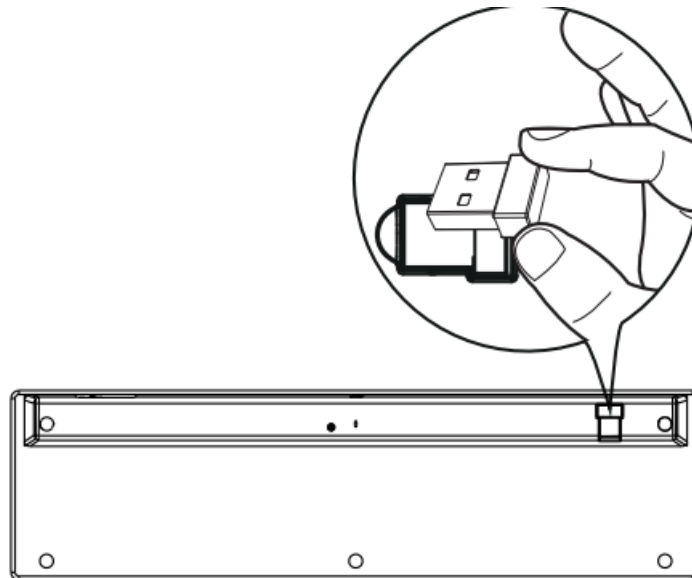

 3. Plug the USB receiver into USB port of your computer.


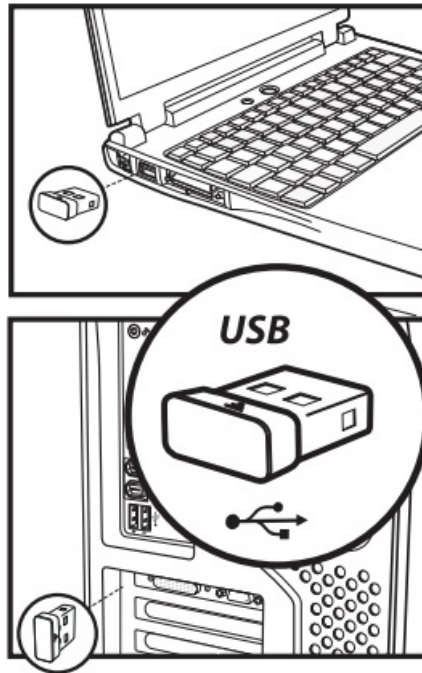


### **Keyboard & Mouse LED Indicator**

Turn on keyboard & mouse LED is lighting 10 sec.

### **Battery Indicator**

  Low battery LED blinks Red light for charging Green light charging completed

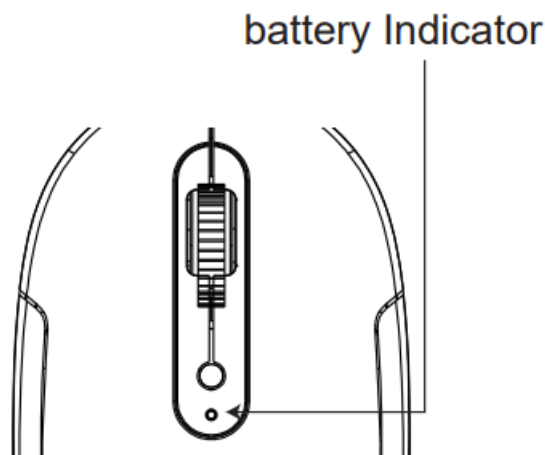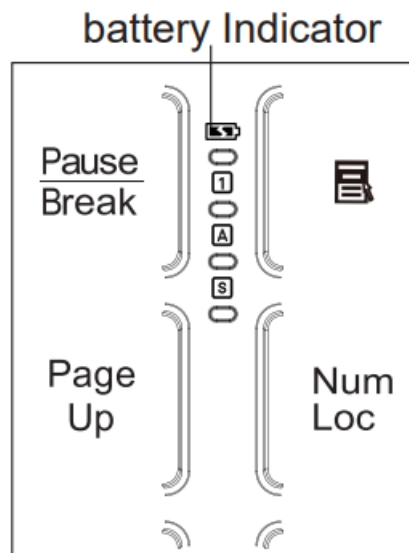

## Cleaning and Maintenance

- Clean the product with a dry lint-free cloth. Do not allow any water or other liquids enter the product's interior.
- Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning.
- Clean the battery contacts and also those of the product prior to battery installation.

## FCC -Supplier's Declaration of Conformity

### FCC Compliance Statement

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
  1. this device may not cause harmful interference, and
  2. this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Canada IC Notice**

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

## **Intended Use**

This product is a wireless computer peripheral intended for interacting with your desktop/laptop.

## **Safety and Compliance**

Read this instruction manual carefully before using the product. It contains important information for your safety as well as operating and maintenance advice. Observe all safety instructions to avoid damage through improper use! Follow all warnings on the product. Keep this instruction manual for future use. Should this product be passed on to a third party, then this instruction manual must be included.

- Never use this product if damaged
- Do not insert any foreign objects into the inside of the casing
- Protect the product from extreme temperatures, hot surfaces open flames, direct sunlight, water, high humidity, moisture, strong jolts, flammable gases, vapours and solvents.
- Keep this product and its packaging out of the reach of children and pets.

## **WARNING**

Do not look directly at the LED light.

## **Battery Warnings**

- Keep batteries out of the reach of children.
- Do not dispose of batteries in fire.
- Store unused batteries in their original packaging away from metal objects. If already unpacked, do not mix or jumble batteries.
- Remove batteries from product if it is not to be used for an extended period of time unless it is for emergency purposes Exhausted batteries should be immediately removed from product and properly disposed

- If the battery leaks avoid contact with skin and eyes. Rinse affected areas immediately with plenty of clean water, then consult a doctor

## Disposal

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimise the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

## Battery Disposal

Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.

## Specifications

Weight - Mouse:	62.8g (0.138 lbs)
Weight - Keyboard:	550g (1.213lbs)
Dimensions- Mouse:	10.78x6.01x2.68 cm ( 4.24x2.37x1.06 in)
Dimensions- Keyboard:	43.18 x 11.88 x 1.83 cm (17.00x4.68x0.72 in)
OS compatibility:	Windows XP; Windows VISTA / 7/8/10
Frequency band:	2.4 GHz (2.402 GHz - 2.480 GHz)


## FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## ISED Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used installed and operated with minimum distance 0mm between the radiator and your body.

## Documents / Resources

 amazon basics amazon.com/amazonbasics HM8011 Rechargeable Wireless Keyboard Mouse	<a href="#">amazon basics HM8011 Rechargeable Wireless Keyboard Mouse Combo</a> [pdf] User Guide HM8011, HM8011 Rechargeable Wireless Keyboard Mouse Combo, Rechargeable Wireless Keyboard Mouse Combo, Wireless Keyboard Mouse Combo, Keyboard Mouse Combo, Mouse Combo, Combo
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## References

-  [Amazon.com: Amazon Basics](https://www.amazon.com/Amazon-Basics)

