



amazon basics L357 Digital Voice Recorder Activated User Manual

[Home](#) » [amazon basics](#) » amazon basics L357 Digital Voice Recorder Activated User Manual 

amazon basics L357 Digital Voice Recorder Activated User Manual

 


Contents

- 1 Packing List
- 2 Button Functions
- 3 Display Details
- 4 System Setting
- 5 Here are some frequently asked questions about L357 voice recorder
- 6 Warranty Statement:
- 7 Documents / Resources
 - 7.1 References
- 8 Related Posts

Packing List

- 1 x Digital Voice Recorder
- 1 x USB Cable
- 1 x User Manual

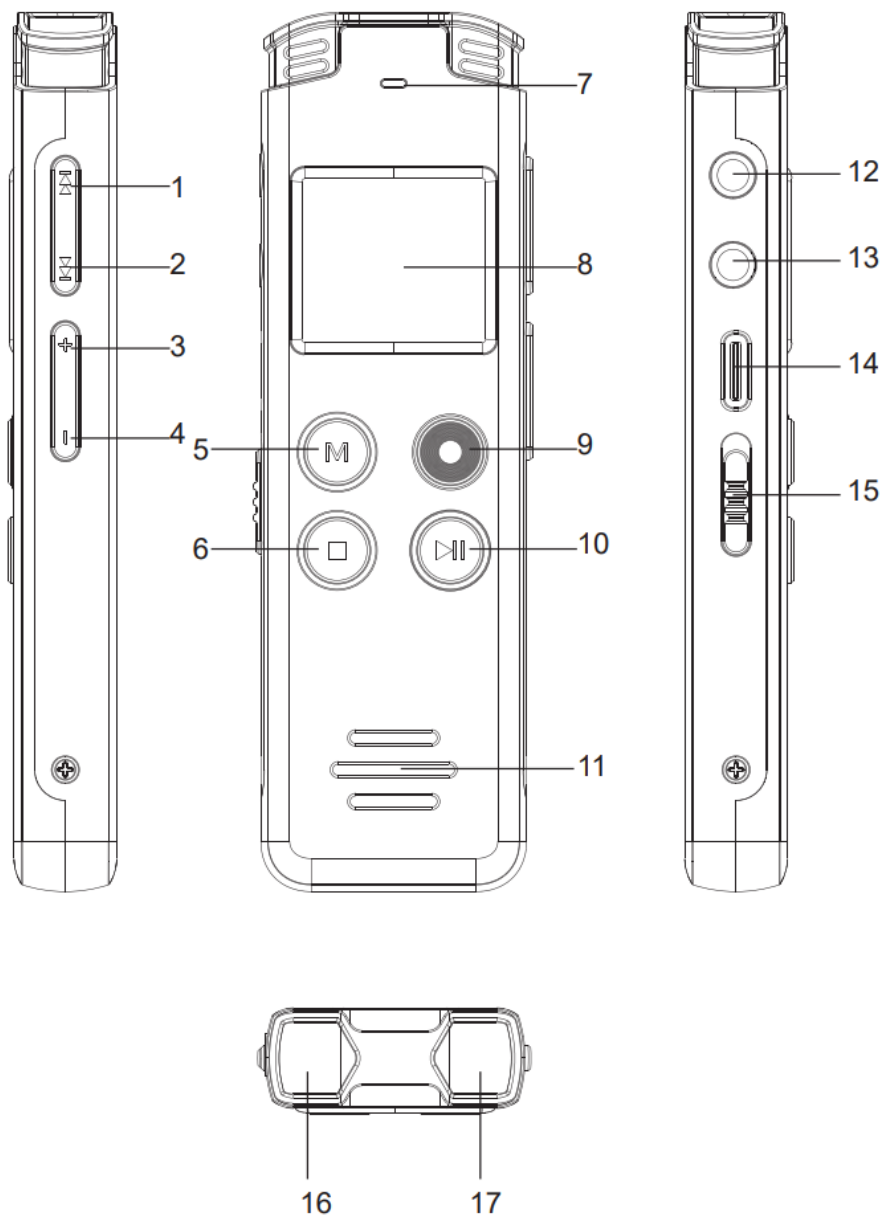

Button Functions


1. **UP:** Prev / Up Select / Hold to Backward
2. **DOWN:** Next / Down Select / Hold to Fast Forward
3. **Vol+:** Volume Increase
4. **Vol-:** Volume Decrease
5. **M:** Menu / OK / Confirm
6. **STOP:** Stop / Save / Return
7. Indicator Light
8. Display
9. **REC:** Recording
10. **PLAY:** Play / Pause
11. Speaker
12. Earphone jack
13. **EXT.** Mic / Line In Jack
14. USB Port
15. Power Button
16. Built-in Mic
17. Built-in Mic

Display Details



1. Total Count Recordings
2. Dynamic Balanced Met
3. Recording Status
4. Remaining Recording Time Space
5. Left Battery
6. Current Recording Time
7. Recording Format | Bit Rate
8. Denoise

 • Power ON/OFF

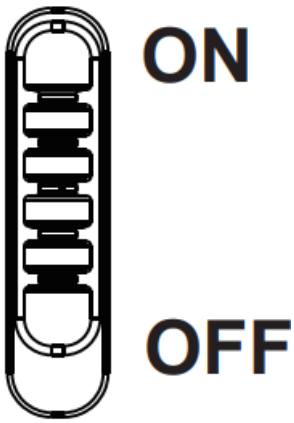

ON: push power button to ON position

OFF: push power button to OFF position

- **Record/Save**

REC

 


Recording: when device is ON, just press REC, it records, indicator light blinks
Pause Recording: when recording, just press PLAY, it will pause. Press PLAY again to resume.

Save Recording: when recording, press STOP, save the recording


- **Play/Pause**

PLAY

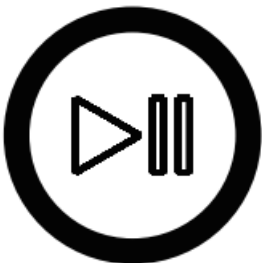


At the status of Record / Music, press PLAY to playback, press PLAY again to pause

 - **Up/Down/Next/Prev./FF/REW**



While playback, press UP/DOWN to change audio track Press and hold UP/DOWN to fast forward/rewind

 
Volume Change



When playback, press VOL+/VOL- to change volume

- **Return**

 STOP

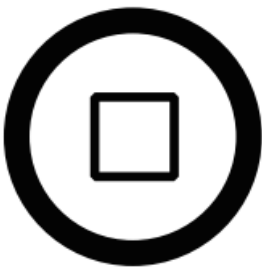


When playing, press STOP, it will stop play. Press STOP again, it will return to menu options. Press STOP, it will back to up level.

- **Recorder**



Select Recorder menu, press M button to enter it. Select Recordings library and press M button to enter the recording files list. Then Press M to play the recording.

 - **Record Set**

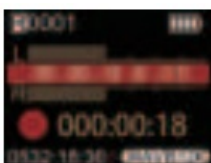

At Menu options, select "RECORD", press M to enter recording set.

Press UP/DOWN to select, and press M to confirm and enter selections.

We can set record from, record format, record bit rate, record gain, monitor record, Voice Activation Mode, Sectional Record, Auto Record, Indicator Light ON/OFF, Noise Cancellation Level

1. Record From

The device has 2 recording resource

1. **Microphone:** record from built-in microphone, or external microphone
2. **Line-in:** recording from line in audio cable

2. Record Format

It can set at WAV or MP3 format

3. **Record Bit Rate** WAV format, support 512Kbps. 768Kbps. 1024Kbps 1536Kbps for choice MP3 format support 32Kbps. 64Kbps 128Kbps for choice

4. Record Gain Record

gain has 7 level, the higher level, the more sensitive, and record further distance.

5. **Monitor Record** Select ON and press M button to turn on the recording monitor, plug in the headphones when you record you can hear very clearly in the headphones you are recording sound.

6. AVR Voice Activated Record

It has 7 level for choice, the higher level, the more sensitive

7. Sectional Record

It can choose from OFF, 30min, 60min, 90min, 120min

8. Auto Record

The device support auto record, set correct system first, and then set start time, end time, repeat cycle.

The device will automatically recording as schedule

Notice: keep power button at ON position, in order to let auto record works properly

9. Indicator Light

The indicator light can turn ON/OFF

10. Denoise Level

Denoise has 4 options: OFF, level 1, level 2, level 3.

The higher level, the better denoise effect

Notice: when denoise function is ON, it records at mono audio

• Playback Settings

When playing, press M button, it can delete one file or all files; enter Play Mode Settings, Repeat Settings, Sound Settings.

1. **Delete One:** Delete current file.

2. Play Mode:

1. **Repeat-Repeat one or all;** (2)Shuffle Play file in random

3. Repeat Settings:

1. **Repeat Model:** Press the MENU key to enter A-B Repeat mode.

A-B Repeat mode.

A-B repeat



 
When playing, Press and hold the MENU button , start A-B repeat, display flashes A-BPress and hold the

MENU button again, set end point of A-B repeat, display shows A-B Now it will play and repeat between point A to point B Press and hold the MENU button again to exit A-B repeat

2. **Replay Times** it can set 1-10 times by pressing VOL+/VOL- button
3. **Replay Interval:** it can set 1-10 seconds by pressing VOL+/VOL- button
4. **Sound Settings:**
 1. **Equalizer:** it can choose from OFF, Rock, Funk, Hip-hop, Jazz, Classical, Electronic
 2. **Variable Speed Playback:** enter this option, press VOL+/VOL- to adjust playback speed. Press M button to confirm settings
5. **Delete All:** Delete all voice recording

• Music Play

Select the Music menu, press the M button to enter, the list will display all songs, artists, albums, genres, playlists, update playlist options

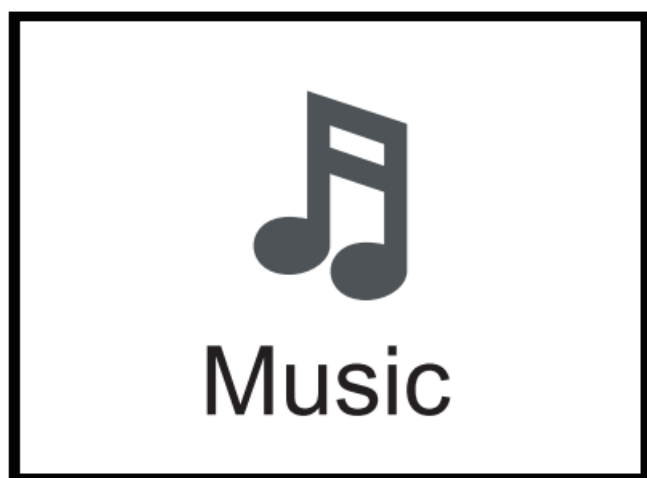

1. Playlists

The recorder comes with three playlists, so you can put the music you listen to often into them.

2. How to play music files in various formats on the recorder:

Firstly, connect your recorder to your computer, then create a new folder on the recorder's disk. Put many formats music files such as MP3, WMA, WAV, APE, FLAC and OGG into it.

Notice: Please do not put these music files in the 'RECORD' folder, as it only supports MP3 and WAV formats. Secondly, open the recorder, select the Music menu, select all songs, you will see your downloaded music files, press M button to play, PLAY button to pause or continue playing.

3. Add music to or remove music from the playlist Select All Songs> Select the song you want> Press M to play> Press M again and select Add to Playlist> Select any one of the three playlists> Press M and select Yes> Press M to add successfully.

If you want to remove the music file from the playlist:

 
Press M while playing a music file > select Remove From Playlist and press M > select one of the three playlists and press M > select Yes and press M. The removal is successful!

Update Playlist

Press M button to refresh your playlist.

System Setting

1. Sleep Timer

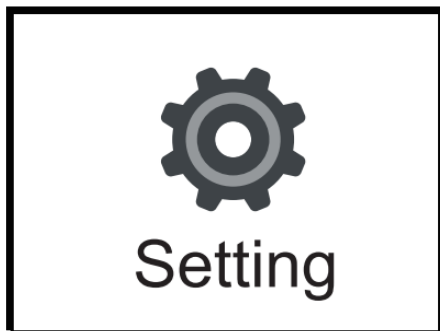

When this is ON, the device will turn off compulsory. It can select from 10min to 120min

Notice: Please do not turn on the sleep timer when there is an important recording, so as not to miss important things

2. Power Off

Power saving shutdown. Set the device to automatically shut down after 1 to 30 minutes of inactivity. Selecting 0 means the device will not shut down due to inactivity.

3. Backlight Timer

It can select 10s, 20s, 30s, or always ON

4. Backlight Brightness

Press VOL+/VOL- to adjust display brightness Then press the MENU key to set successfully

5. Date and Time

Enter "Settings" >> press the UP/DOWN button to find "Date & Time Settings">>Time Setting / Date Setting >> Press UP/DOWN for select, VOL+/VOL- to adjust. >>Press M button to confirm.

6. Language

Support English, Spanish, French, Italian, etc., a total of 28 languages

7. Password

Please turn on the voice recorder, enter into Recorder : enter into Settings>>> user the up/down button to find "password settings">>>password switch>>>password on >>>set password>>> input your password.>>Press the M button to display 'Password Change', indicating that the password is successfully set!

Notice: if password forgot, enter 181818 and press and hold STOP button to cancel password function

8. Information

Shows the player version and disk space

9. Format Device

Press M to enter, and select YES to confirm formatting device. Notice: backup files before formatting. Once file deleted, cannot restore

10. Factory Settings

Select factory settings, press M to confirm, and restore to factory settings


Name	Digital Voice Recorder
Size	3.9×1.2×0.5inch
Screen	1.0inch TFT color screen 128×96
USB Port	TYPE C USB2.0
Memory	64GB/128GB
Battery	3.7V/450mAh Li Polymer
Recording Foramt	WAV/MP3
Bit Rate	WAV: 512Kbps/768kbps/1024kbps/1536kbps
	MP3: 32kbps/64kbps/128kbps
Music Foramt	MP3 WMA WAV APE FLAC
Support Bit Rate	WAV max 24BIT 48KHz
	APE/FLAC max 16BIT 48KHz
Recording Time	20Hours (battery time)
Play time	35Hour
Charging Time	2Hour (input 5V 1A)
S/N Ratio	.93dB
Earphone Jack	Stereo output
Speaker	Yes
Working Tempeature	-5 to 40 Celsius Degree
Weight	0.161b
Compatible	WINDOWS XPNISTA/WINDOWS 10

• Connect to computer

To connect the device to your computer, follow these steps:

1. Locate the USB cable provided with your device.
2. Insert the USB Type-C connector into the correspond ing port on the device.
3. Connect the other end of the cable to an available USBport on your computer.

 Upon connecting, the device will power on automatically.If this is the first time connecting, your computer mayprompt you to install necessary drivers and recognizenew hardware. Once a new disk appears in My Computer, the connection is successful.

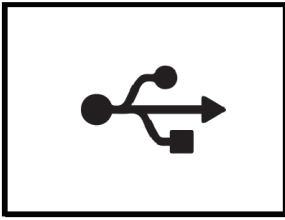

- **Charging**

When  →  →  →  is full, battery was full charged

Notice: choose adapter max output 5V 1A to charge the device

Here are some frequently asked questions about L357 voice recorder

1. How to record and playback recording?

First, please turn on voice recorder, simply push the power button (at left side) to “ON” position, the recorder will boot up. Press REC button to start a new recording. Press “STOP” button to save the recording after we finished recording. Press “PLAY” button to play the recording file, press the “Play” again to pause playing.

2. How to fast forward/rewind when playback

At playback mode, please long press the UP/DOWN button to fast forward or rewind.

3. How to Adjust VOL+/VOL- ? In the playback state, short press the VOL button (don't long press VOL key), and the upper right of the screen will display the current volume value.

4. How to Turn ON Voice Activated Function

Go to Recorder menu, find Record Settings, enter it -> Voice Activation Mode-> Voice Activation Switch -> AVR ON-> Press M button to Confirm. Then press the “REC” button to start recording, you will see the VOR label 15 appear next to the battery icon at the top right of the screen, it means you have successfully turn on voice activated recording function, press the STOP button to save recording.

When AVR mode is ON, the recorder will enter voice activated recording mode, recorder can set voice decibels at 7 different levels, level 7 is the most sensitivity.

5. The voice recorder can connect to a computer, but only charging not read the disk.

I supposed that failed to connect may caused by the following:

A) Firstly, please make sure you are using the included

Type-C USB cable, as other Type-C USB cables may not be compatible. If you have tried to use the supplied Type-C USB cable and are still having problems, it may be broken or the USB socket is loose. so, please change another USB cable to try (like your android phone cable) or connect by another USB socket, or simply reboot your computer

B) Please check if the recorder switch OFF when connecting with computer.

C) Maybe something wrong with the device, if it is a quality problem, we can provide replacement during the warranty period.

6.) The recording from the recorder cannot be played on the computer.

It seems that there is something wrong with the media player. Please use another media player to have a try,

1. For Mac user, please download the free VLC Media Player to playback the recordings. (**Website:**

<http://www.videolan.org/>)

2. For Windows user, please download the free VLC Media Player, or just choose “Windows Media Player”

to playback.

7. Memory is full

The voice recorder has a limited storage ,when space is full, you can connect it to your computer and back up all the files, then delete all the recordings .

8. How to Fix Disk Errors

Disk error usually caused by following:

1. static shock, like over current charging
2. cut off its power before device formatting finished We suggest you format the device on Windows if you can.Format the device in MAC should be strict accordance with the instruction.

How to Rescue:

Step 1, Turn off the device, connect it with computer

Step 2, Backup all files to your computer and then format the recorder disk.

We made a quick video for your reference https://youtu.be/n2OI_hfq_ac L357 How to Format on MAC Computer <https://youtu.be/HQBzLXAYZFc> L357 How to Format on WIN Computer

If you have tried the above methods but still can not solve the problem of disk error, please feel free to contact our after sales mailbox, we will provide you with further solutions.

Warranty Statement:

The warranty period is within one year from the date of purchase. During the warranty period, if the product fails due to normal use according to the user manual and attached label, the user can receive free repair services.

Enjoy Membership:

By signing up as a member, your order warranty will automatically be extended to 18 months, and you will enjoy a warranty period of 6 months longer than the average customer. **Register :** at www.evistr.com/vip

After-Sales Service:

Please send an email to our after-sales mailbox and tell us your order number and the specific problem about your voice recorder, we will give you a satisfactory solution.

Email : to us support-us@evistr.com

Documents / Resources

	amazon basics L357 Digital Voice Recorder Activated [pdf] User Manual L357 Digital Voice Recorder Activated, L357, Digital Voice Recorder Activated, Voice Recorder Activated, Recorder Activated, Activated
---	---

References

- [🌐 VIP](#)
- [🔊 VLC: Official site - Free multimedia solutions for all OS! - VideoLAN](#)
- [User Manual](#)

