



## amazon basics Rectangular 50L 12L Automatic Stainless Steel Tracsh Can Set User Guide

[Home](#) » [amazon basics](#) » amazon basics Rectangular 50L 12L Automatic Stainless Steel Tracsh Can Set User Guide 

### Contents

- [1 amazon basics Rectangular 50L 12L Automatic Stainless Steel Tracsh Can Set](#)
- [2 Contents:](#)
- [3 IMPORTANT SAFEGUARDS](#)
- [4 Battery Warnings](#)
- [5 Intended Use](#)
- [6 Before First Use](#)
- [7 Inserting batteries](#)
- [8 Inserting trash bag](#)
- [9 Operation](#)
- [10 Cleaning and Maintenance](#)
- [11 Troubleshooting](#)
- [12 FCC – Supplier’s Declaration of Conformity](#)
- [13 FCC Compliance Statement](#)
- [14 Battery Disposal](#)
- [15 Specifications](#)
- [16 Documents / Resources](#)
- [17 Related Posts](#)




amazon basics Rectangular 50L 12L Automatic Stainless Steel Tracsh Can Set



**Contents:**

Before getting started, ensure the package contains the following components:

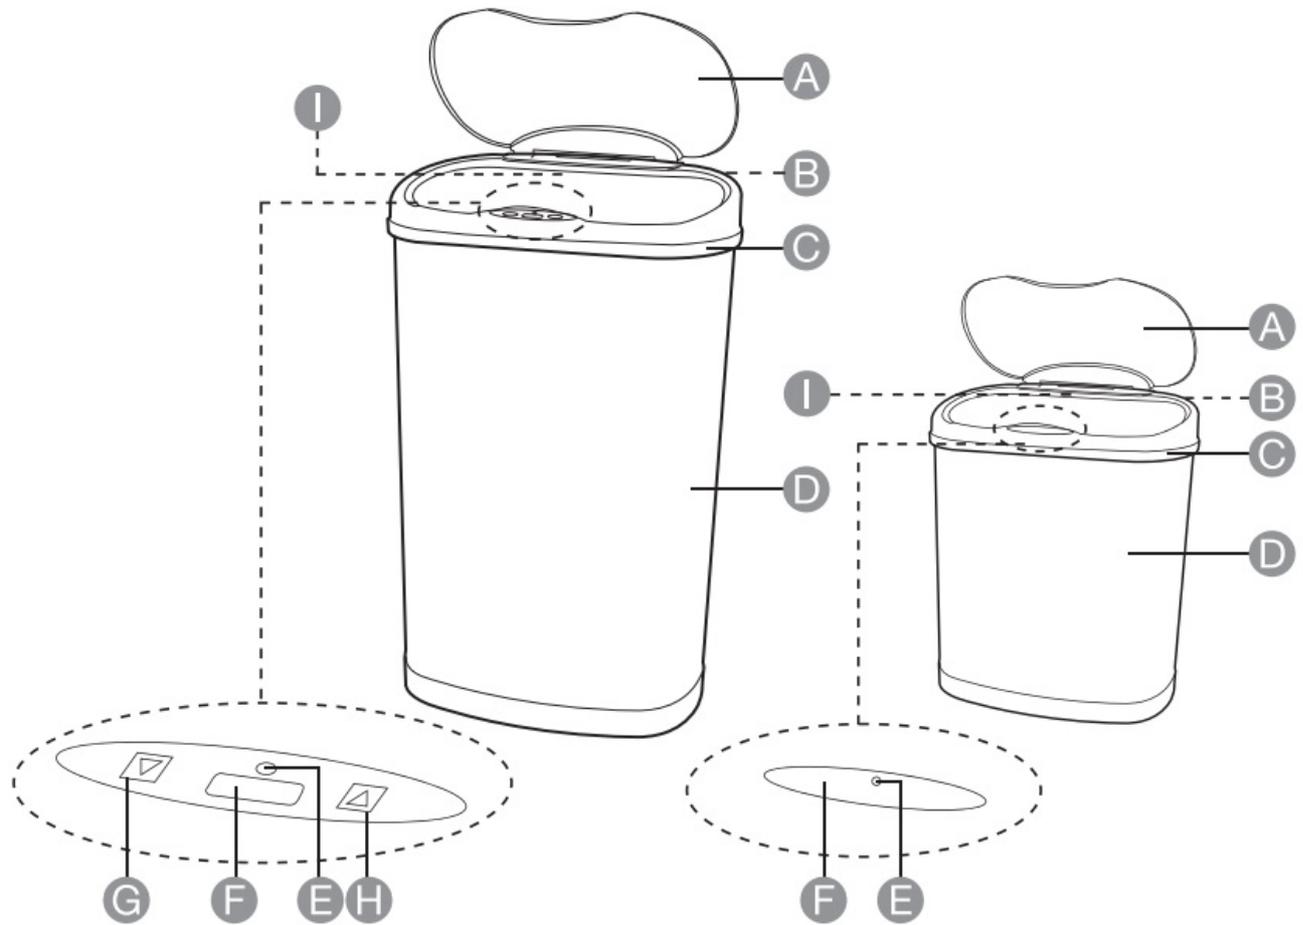

1. Lid
2. Power switch 1/0
3. Retainer ring
4. Trash can
5. Sensor indicator
6. Motion sensor
7. button
8. button
9. Battery compartment

## IMPORTANT SAFEGUARDS

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

- Read all instructions.
- Only use this product for its intended use.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not place the product in a direct sunlight.
- For hygienic reasons, empty the product regularly, especially when collecting organic waste.

**WARNING:** Keep small children and toddlers away. They might climb on it and fall.

**WARNING! IMPORTANT SAFETY INSTRUCTION.**

Failure to read and follow these safety instructions could result in fire, explosion, electrical shock or other hazard, causing serious and/or fatal injury and/or property damage.

## **Battery Warnings**

- Alkaline cells are primary batteries and are NOT designed to be recharged.
- Attempts to recharge these batteries can lead to leakage and possibly an explosion.
- No responsibility is accepted by AMAZON.COM and its affiliates for injury or damage resulting from the cells having been recharged or otherwise abused.
- Ensure that anyone who uses this battery reads these warnings.
- Do not modify, disassemble, open, drop, crush, damage, puncture, incinerate or shred the battery.
- Misuse of the battery may increase the risk of fire or chemical burn.
- Do not expose the product to rain or water.
- Keep away from open flame, sunlight or high temperatures as the battery may ignite, explode, leak or become hot.
- Keep away from high voltage devices.
- Do not burn or expose to high temperatures. Do not short-circuit.
- Handle damaged or leaking batteries with extreme care. Damaged batteries may leak and cause personal injury or equipment damage.
- This product is not a toy. Keep away from children.
- Use only in designated equipment. Using a battery with incompatible equipment may increase the risk of fire or explosion.
- Must be recycled or disposed of properly.
- Never store or use the battery in an unventilated area where excessive internal temperatures may be encountered.
- Do not recharge the battery as this may result in burns, fire, leakage or explosion.
- The use of a mixture of different types or brands of battery, or of used and new batteries even of the same brand or type, may result in burns, leakage, explosion, or fire. When replacing the batteries, use new batteries of the same types and brands.
- Remove the batteries as soon as they become run down. Otherwise, the batteries may leak and damage the device.
- Do not apply solder directly to the terminals of a battery. Soldering batteries is dangerous, because the heat will melt the insulator, creating an internal short-circuit, and leading to heat generation, explosion, and fire.
- Remove the batteries when the device will not be used for a long time (excluding emergency devices) to prevent leakage. Put the removed battery into a case individually and be careful not to short-circuit.
- If the battery leaks and its electrolyte comes into contact with skin or clothes, wash the contact area with clean water. If battery electrolyte gets into the eye, flush immediately with clean water and consult a doctor immediately.
- Turn off battery-powered devices when not in use to prevent leakage.
- Do not remove or damage the battery label. Removing or damaging the label makes the battery easier to short circuit, and may result in leakage, overheating or explosion.

- Use the battery within the recommended date printed on the label.
- Always insert batteries correctly with regard to polarity (+ and-) marked on the battery and the product.
- Exhausted batteries should be immediately removed from product and properly disposed.

## Intended Use


- This product is intended for collecting trash in a touchless manner that prevents spreading of germs and bacteria.
- This product is intended for household and office use only. It is not intended for commercial use.
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

## Before First Use

- Check for transport damages.
- Remove all packing materials, including those inside the product.

**DANGER:** Risk of suffocation! Keep any packaging materials away from children -these materials are a potential source of danger, e.g. suffocation.

## Inserting batteries

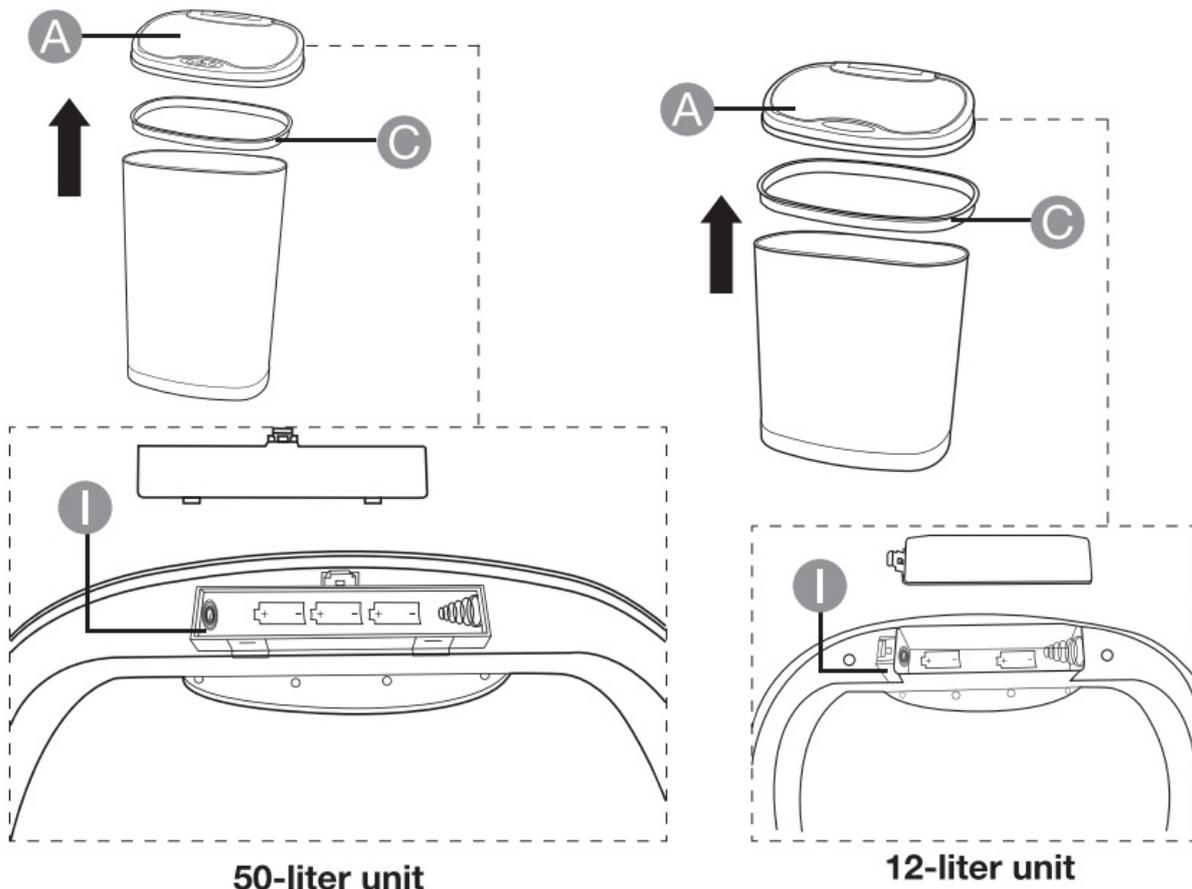

- Remove the lid (A) and the retaining ring (C) .
- Remove the battery compartment cover located on the bottom side of the lid (A).
- Insert 3 (for 50-liter unit) and 2 (for 12-liter unit) type C/LR14 batteries correctly with regard to polarity (+ and-)


marked on the battery and the product.

- Reinstall the battery compartment cover.


**NOTICE:** Always insert batteries correctly with regard to polarity (+ and-) marked on the battery and the product. Replace the batteries, when the sensor indicator (E) lights up yellow.

### Inserting trash bag


- Slide the retainer ring (C) over a trash bag and fold the trash bag over the edges of the ring.
- Place the trash bag with the retainer ring (C) in the trash can (D) and tuck it inside.
- Place the lid (A) onto the trash can (D).

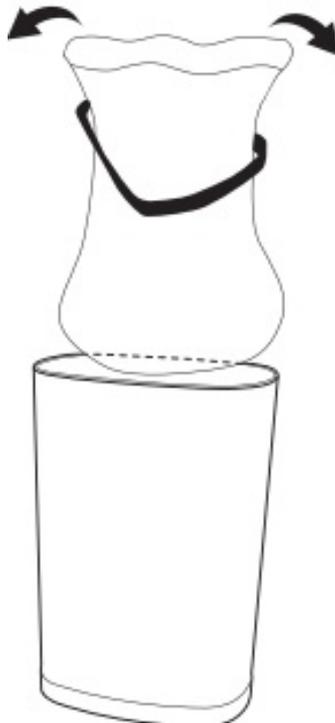

### Operation

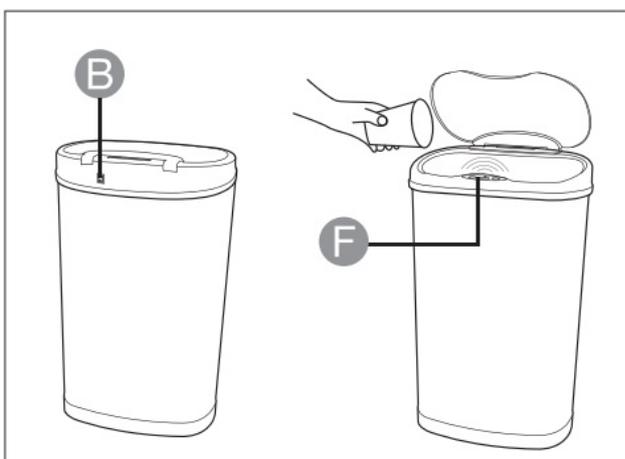

**50-liter unit**

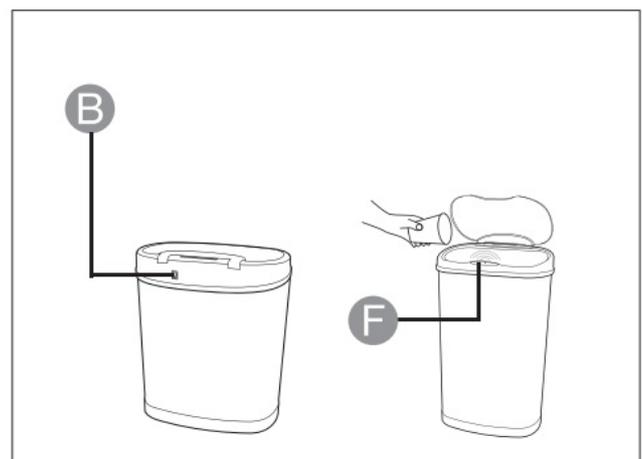

**12-liter unit**

- To switch on the product, set the power switch 1/0 (B) to "I" position. The sensor indicator (E) lights up once.
- To open the lid move your hand or a trash to be disposed within 3-4 inches (8-10 cm) from the motion sensor (F).
- Dispose of the trash and move your hand away. The lid (A) automatically closes within 3- 4 seconds.

## Opening the lid manually

- To open: Press the button (H).
- To close: Press the button (G).

**NOTICE:** The lid (A) does not close automatically once it was opened with the button (H). I A NOTICE I Do not force close the lid (A). Risk of damage to the built-in motor.

## Cleaning and Maintenance

**NOTICE:** Switch the product off before cleaning. Do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.

- Clean the battery contacts and also those of the product prior to battery installation.
- To clean, wipe with a soft, slightly moist cloth.
- Dry the product after cleaning.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.
- If the product is to be stored unused for a long period, the batteries should be removed.

## Troubleshooting

Problem	Solution
The lid does not open.	<ul style="list-style-type: none"><li>• Insert the batteries with correct polarity (+) and (-).</li><li>• Replace batteries with new ones.</li><li>• Set the power switch I/O (B) to "I" position.</li><li>• Wipe the motion sensor (F) with a dry cloth.</li></ul>
The lid does not close while the sensor indicator (E) lights up green or red.	<ul style="list-style-type: none"><li>• The motion sensor (F) is blocked. Move the trash can away to more open space or empty it.</li></ul>

## FCC – Supplier's Declaration of Conformity

<b>Unique Identifier</b>	B07M7CG79W, Automatic Stainless Steel Trash Can Set – Rectangular, 50-Liter, 12-Liter
<b>Responsible Party – U.S. Contact Information</b>	Amazon.com Services, Inc
<b>Address</b>	410 Terry Ave N. Seattle, WA 98109, United States
<b>Telephone Number</b>	(206) 266-1000

## FCC Compliance Statement

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
  2. this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **FCC Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Canada IC Notice**

This Class B digital apparatus complies with Canadian CAN ICES-3(B) / NMB-3(B) standard.

### **Battery Disposal**

Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection site.

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimize the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

### **Specifications**

