



Amazon Cloud WiFi Camera YCC365APP Manual

[Home](#) » [Amazon](#) » Amazon Cloud WiFi Camera YCC365APP Manual 



**Amazon Cloud WiFi Camera
Operation Manual**

CLOUD-BASED STORAGE SERVICE 30 DAYS FREE EXPERIENCE

HIGHER-END AND SAFER STORAGE



Dear user, welcome to use this product, please read the operating instruction carefully before using this product and keeping this manual for future use.

Contents

- 1 Main Function Description
- 2 How To Download Mobile APP
- 3 How To Operate The Mobile APP
 - 3.1 Register an account
 - 3.2 Add The Camera
 - 3.3 Choose a wired network Only support Lan port device
- 4 Wi-Fi Smart configuration
- 5 Function Introduction
 - 5.1 cloud video playback/edit
 - 5.2 Favorites video playback / share
 - 5.3 Cloud Storage Service
 - 5.4 SD card
 - 5.5 Other functions setting
- 6 How to check the video on PC
 - 6.1 Login
 - 6.2 Function introduction
- 7 FAQ
- 8 • After-sales instruction
- 9 Related Posts

Main Function Description



Cloud Storage



High Definition Recording



Remote Switch



Audible Alarm



Schedule Recording



IOS supported



Android Supported



Two-way Audio



Remote Monitor



Wireless Wifi



TF Card Storage



Infrared Night Vision



Video Streaming



Pan & Tilt



Motion Detection

How To Download Mobile APP

A: Search and download “YCC365” in Apple Store or Android app store.

B: Scan the QR code as below.

C: **Android mobile needs to open the location service to get the network access of the device. App will pop up the window to ask for “location service” when you use ‘YCC365’ at the first time , Please select “allow”. If you refused by mistake,, please uninstall APP and download it again.**



For IOS

For Android

 
How To Operate The Mobile APP

Register an account

When you use this app at the first time, you need to use your email to register an account, click “Sign Up” and set a password according this procedure.


*If you forget your password, you can reset your password, just click “Forgot password” on the login page.


*Password should be at least 6 characters and not longer than 30 characters. It should be a combination of letters and numbers

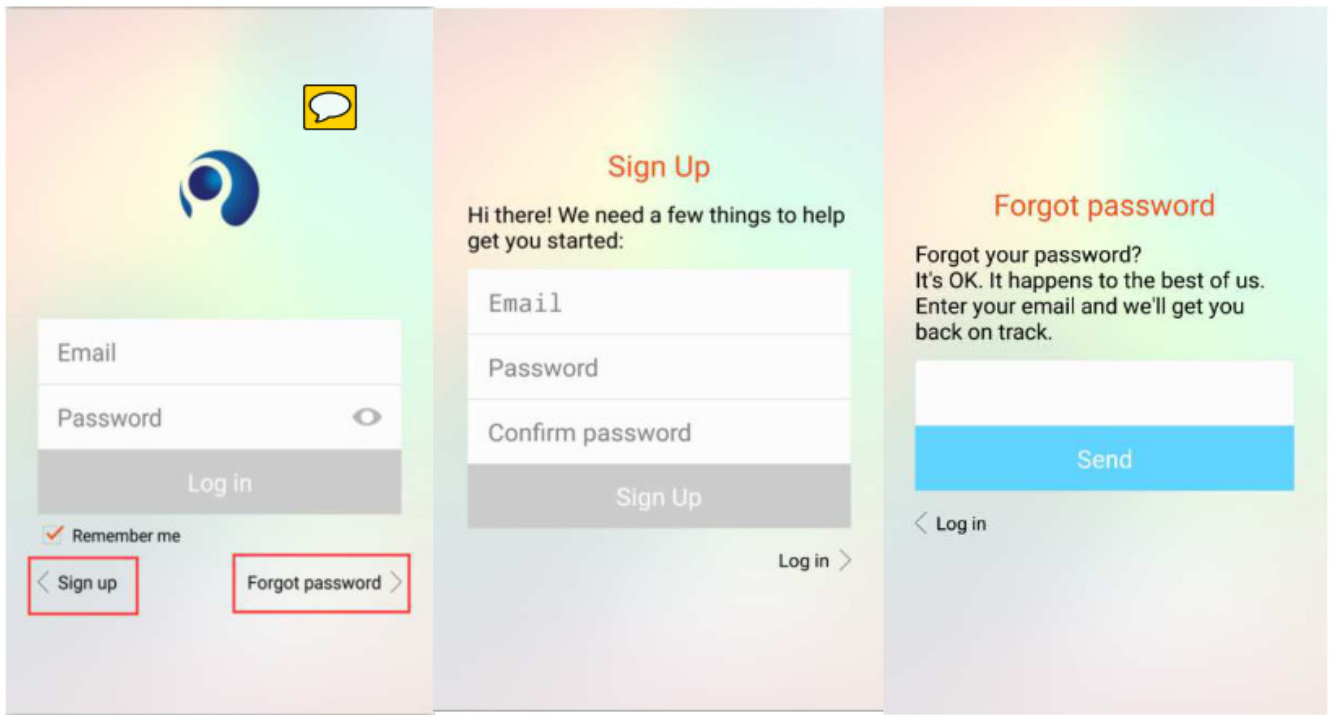

Add The Camera

  1、Scan QR code to add

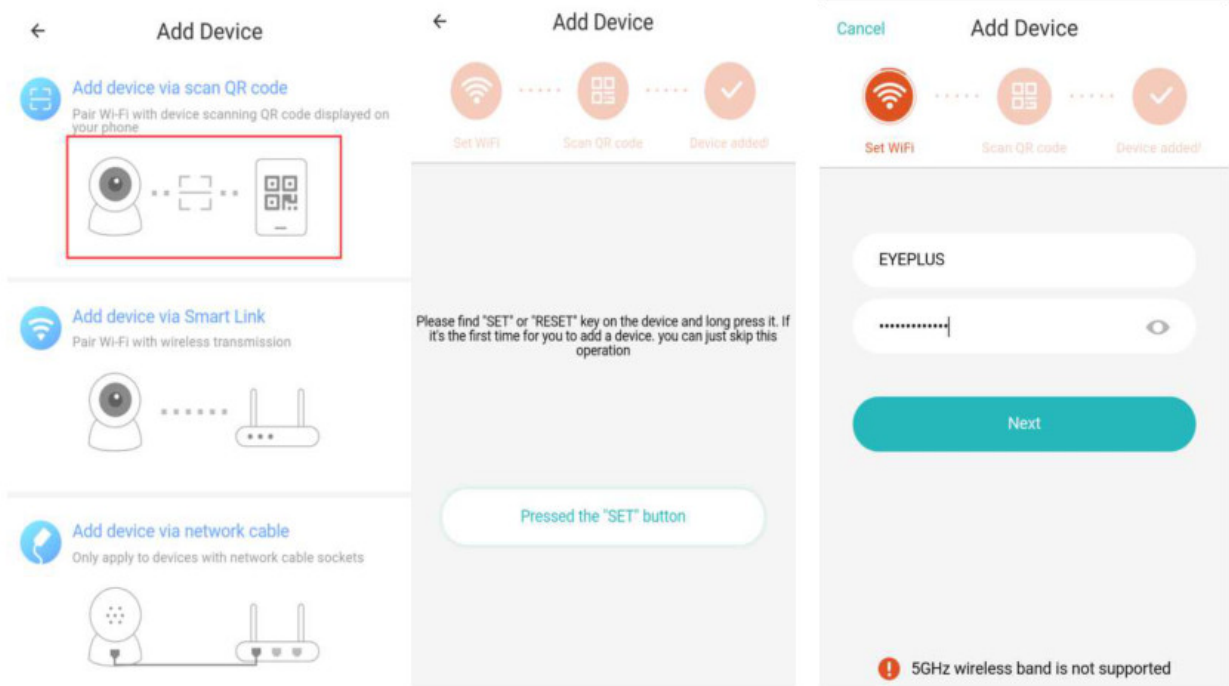

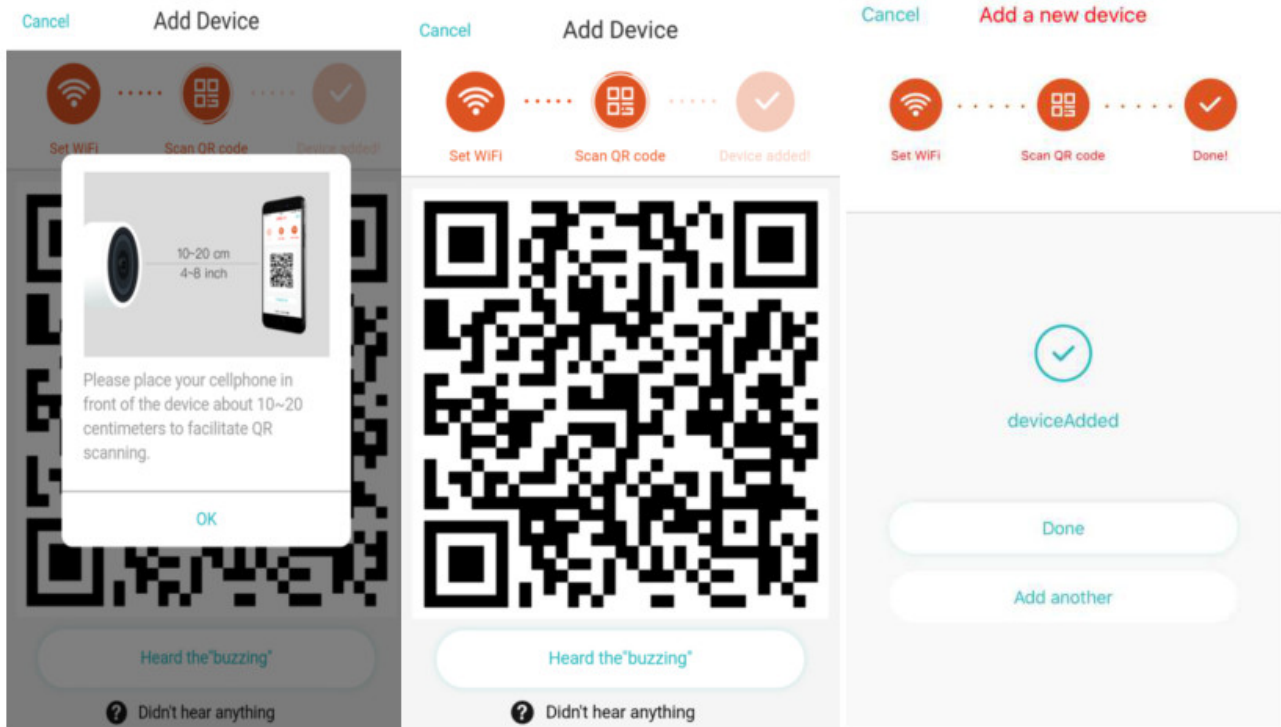

A Please make your phone connect to the Wi-Fi, and then click “Scan QR code to add”, reset the camera, and then click “Pressed the SET button”, waiting for the camera start up again.

B Select your own Wi-Fi and login with your password.

 
C Align the two-dimensional code displayed on the phone with the camera lens, maintain a distance of 4-8 inches and keep balance.

D Click “Heard the buzzing” after hearing the beep, a few seconds later, you will hear the voice “Internet-connected welcome to use cloud camera”

Choose a wired network Only support Lan port device

A Please connect Ethernet cable between camera and Wi-Fi router.

B After your phone connect to the Wi-Fi, Click “Add device” and “Choose a wired network”

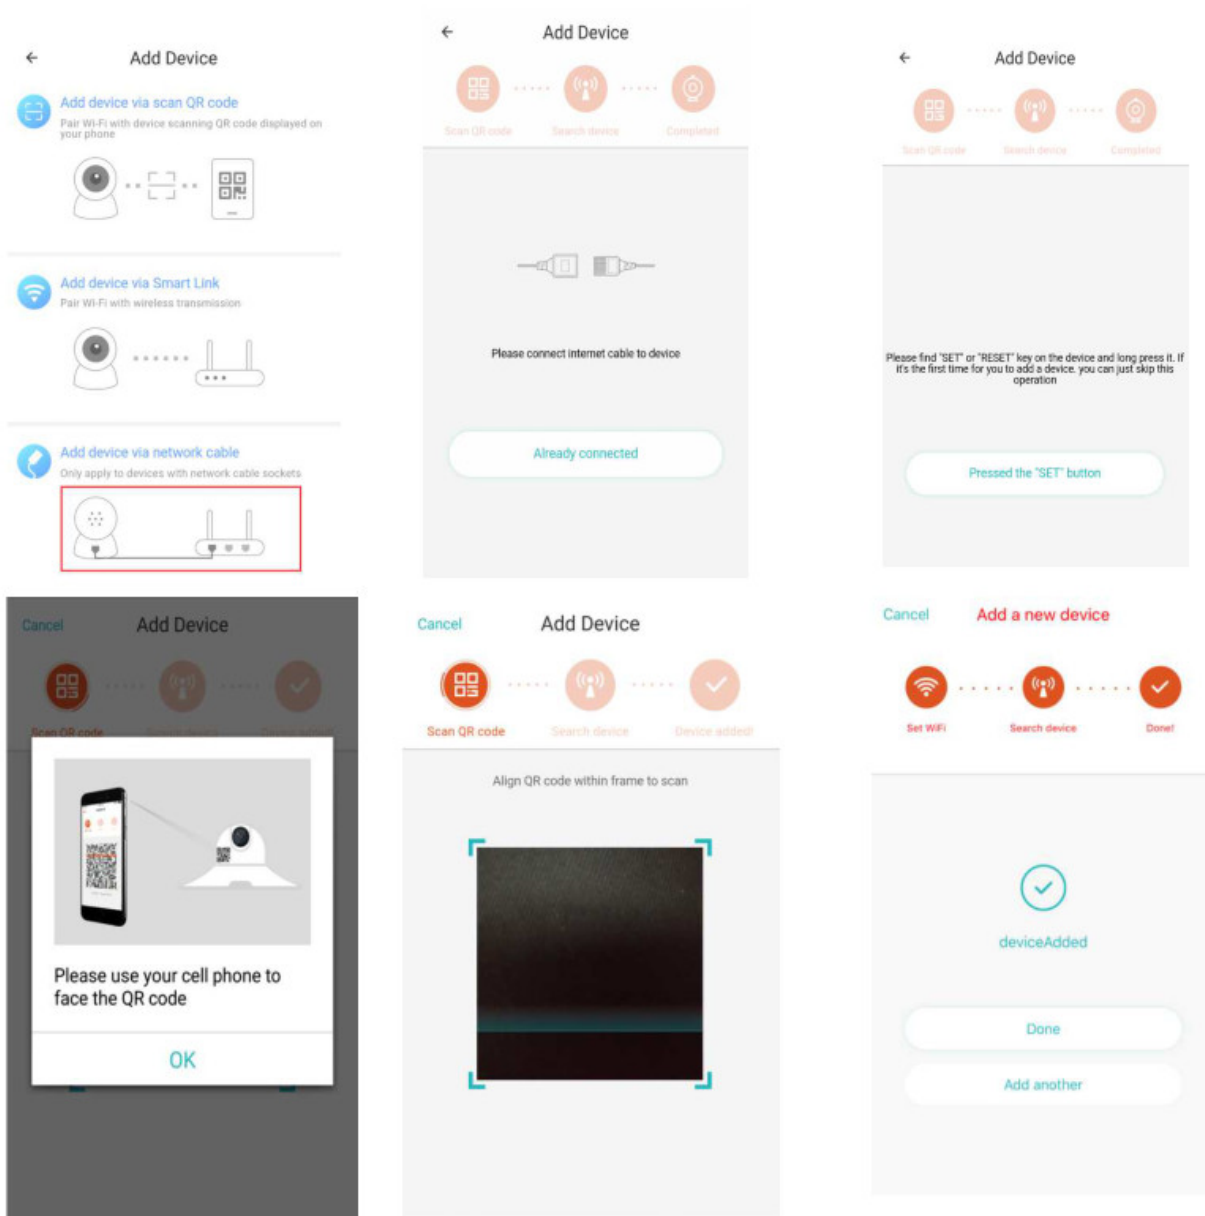



C Please scan the QR code on the device and wait for the network connection to succeed.

If you need to change WiFi, please do the following

D Open the video, click “” in the right up corner

E Select “Wi-Fi Network” and choose your Wi-Fi, login with your password, then click “Connect”

  F Unplug the ethernet cable.restart the camera and finish adding

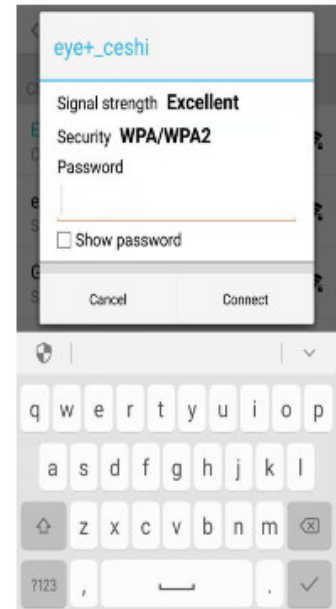
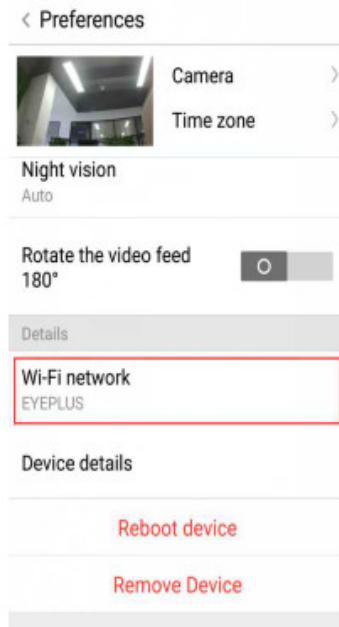


Wi-Fi Smart configuration

A After your phone connects to a Wi-Fi, please click “Add device” and “Choose a Wi-Fi network” reset the camera, after hearing the voice “Please use mobile phone for Wi-Fi configuration”, please click the “Pressed the SET button”

B Select your Wi-Fi and login with your password.

  C Hear the voice “Internet-connected welcome to use cloud camera” and wait for the Wi-Fi connection to succeed.

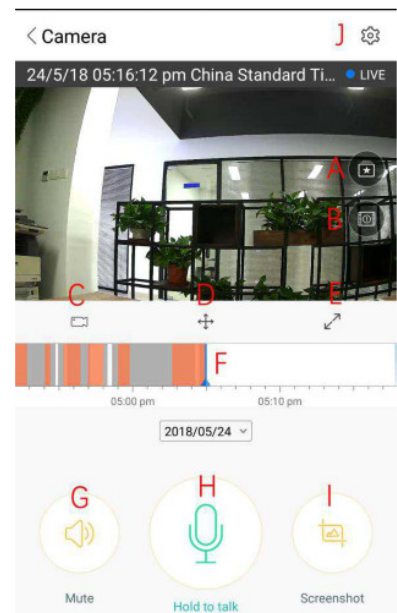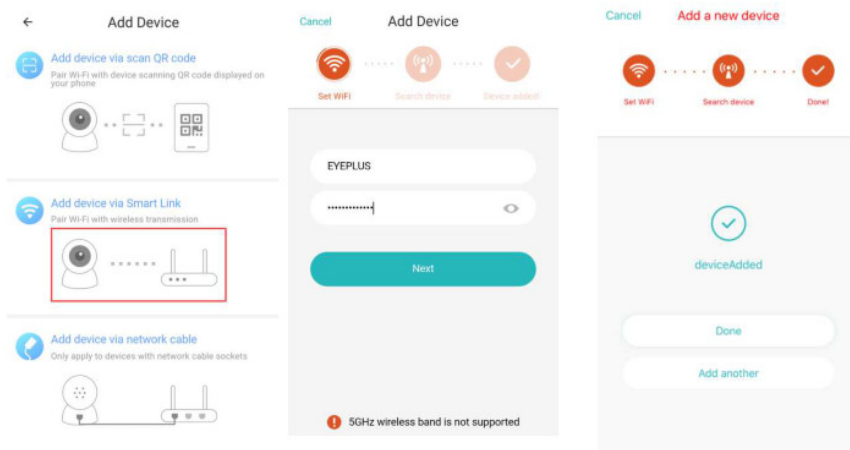

Function Introduction

Go to real-time video page

A my favorite

B Cloud video list includes motion alarm video and sound alarm video

C: Video to phone local

D Pan & Tilt

E Full Screen

F Cloud video replay, drag to timeline position to check the record from the video

 
G Mute/Unmute

H Two way audio



I: Snapshot

J: Parameter Menu

cloud video playback/edit

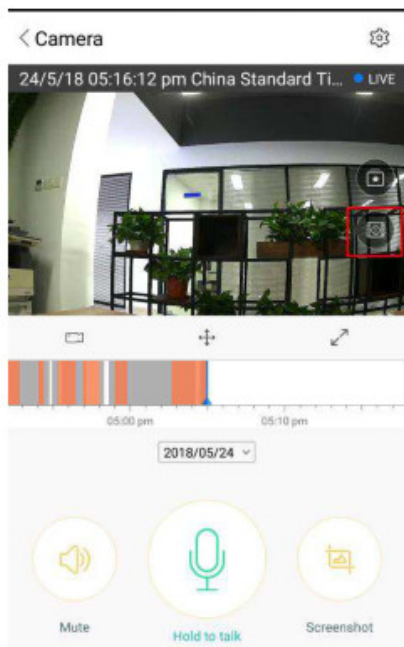


  Click the icon, check the cloud video page

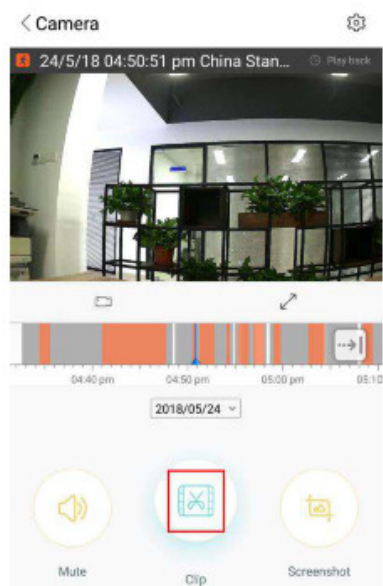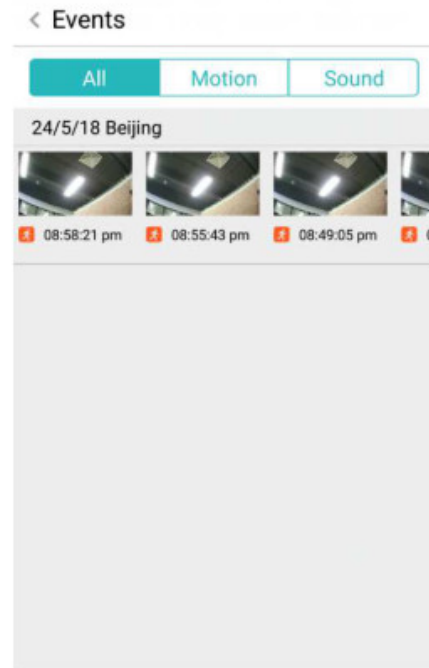

change the title of this video

 set the time of this video

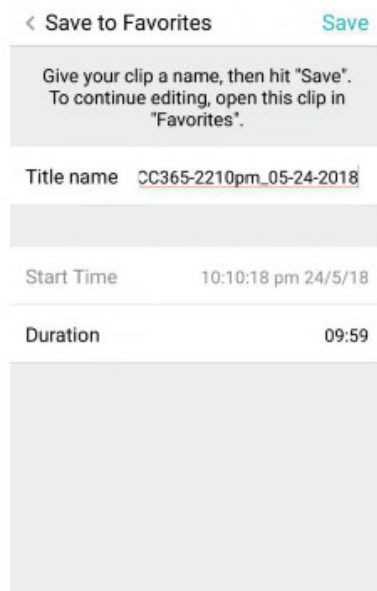

→ choose the video and click “clip”

Click save, and the video will be saved to “my favorite” Automatically

 
Favorites video playback / share

A Click “my favorite”

B Choose and play the video


C Click “Share”, You are share your Video on Facebook and YouTube, you can also share it by link.

D Select "Download" to save the video to your phone.

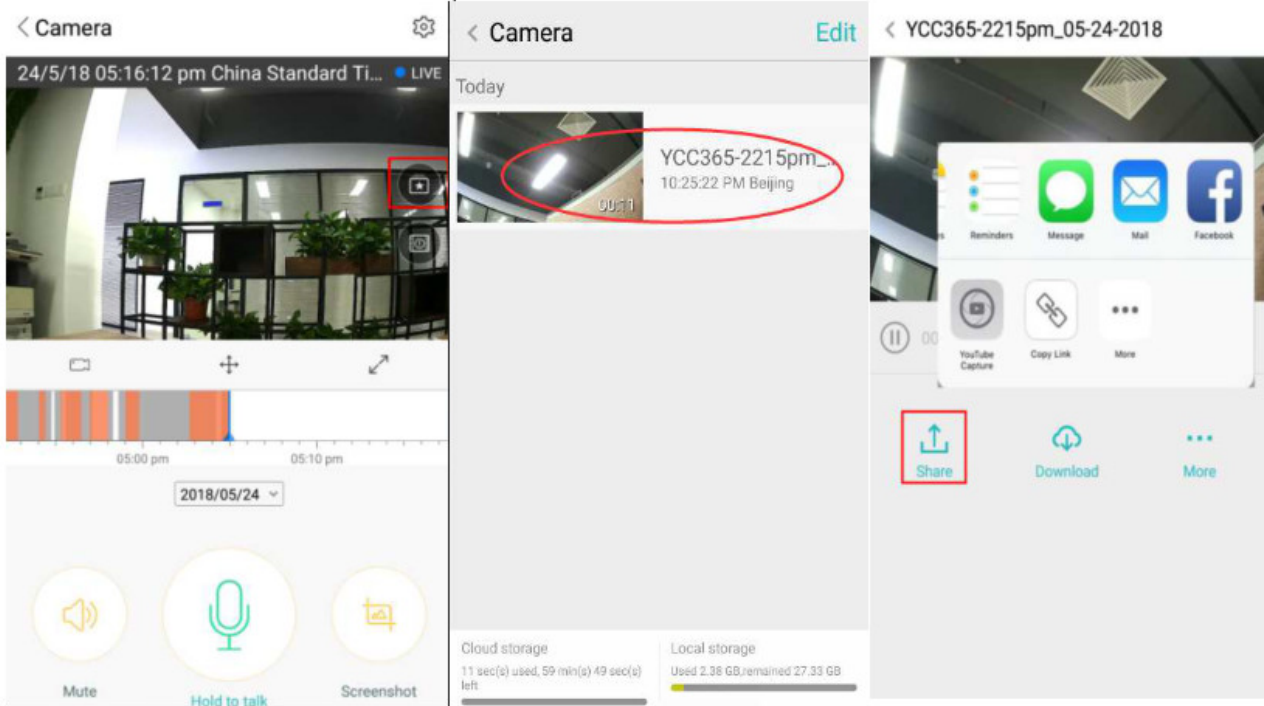

3 Close/Open the camera, set your monitoring plan

 - A Click "⚙️", check the parameter menu
- B Click "Device is On" to open or close the camera
- C Set on/off time

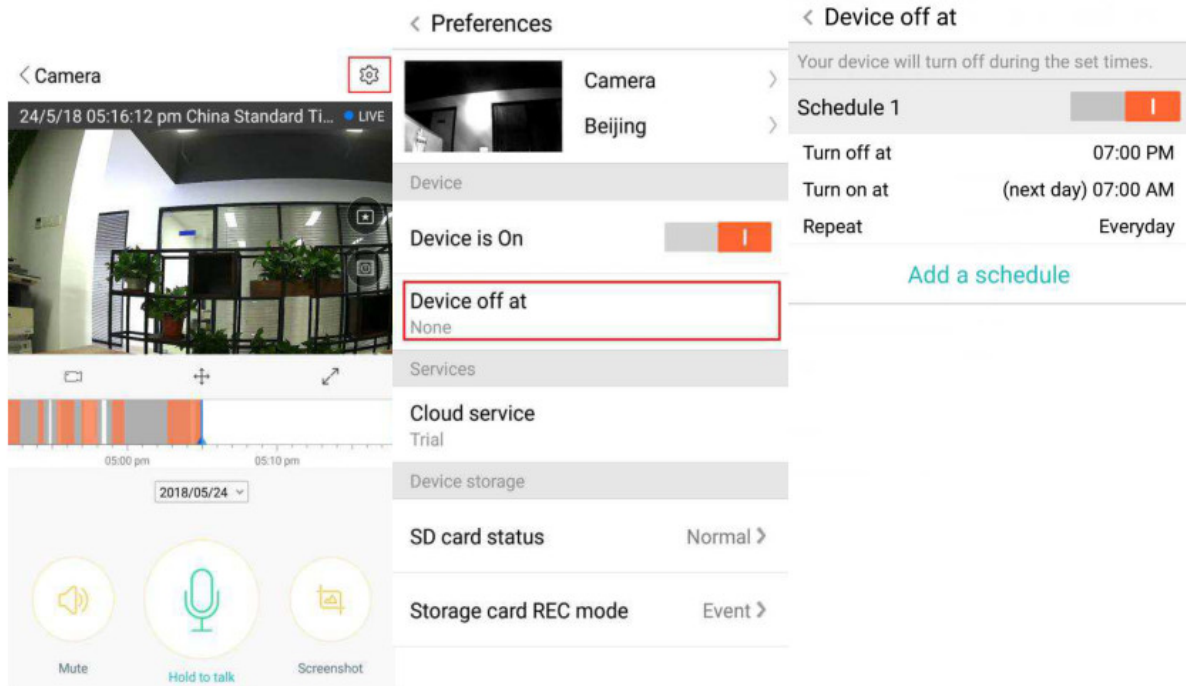

Cloud Storage Service

 
We offer a 30-day-long cloud service, everyone can enjoy the cloud storage service for free, after that you can choose to pay for the service with a low cost.

A Select "Cloud service" and check Subscription packages

B There are three kinds of subscription packages for you, you can choose to pay for this service by monthly or yearly.


C We support PayPal payment system, click "Go to PayPal now" and then finish the payment (please install PayPal app in advance)

Note The cloud services are supported by Amazon AWS, all the videos and messages are saved to amazon web services, it was authenticated by US-EU Safe Harbor protocol verification, ensuring your safety and privacy are inviolable. Due to the cloud subscription package is binding with the device, if the camera stops working and you need to transfer the subscription package to new device, please contact the seller.

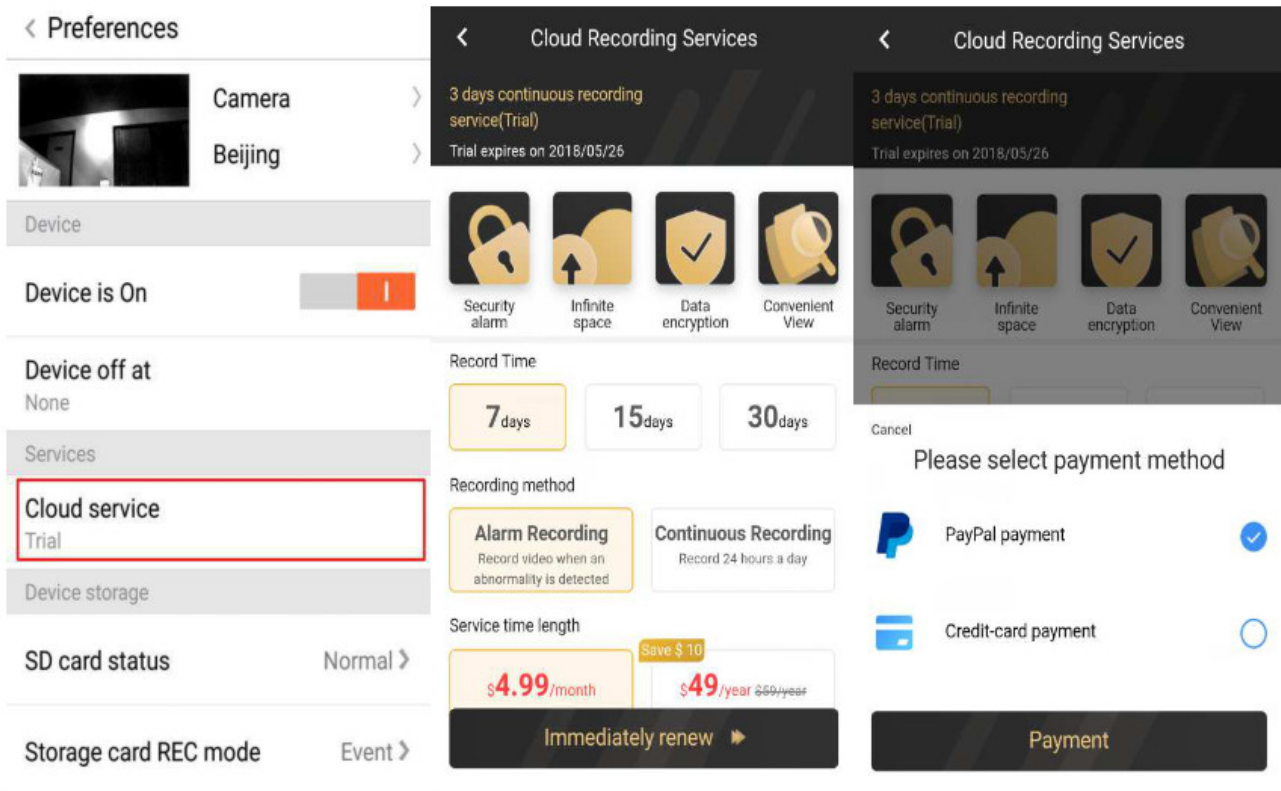

5 Notification Settings

 Click Notification Settings, set the notification model.

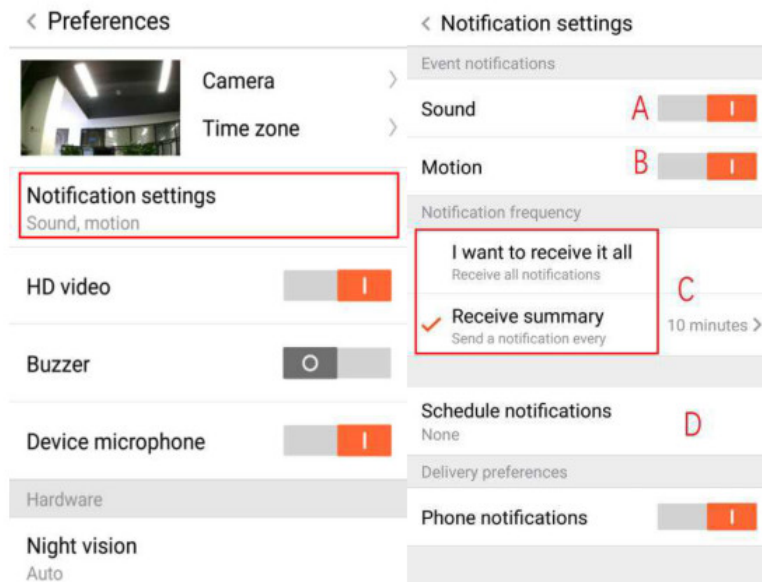

A 、 Turn on/off sound detection message push

B 、 Turn on/off motion detection message push

 
C、 schedule notifications.

D 、 Open/Close mobile

phone notifications.

SD card

Insert the SD card into the camera and start the camera (Don't do this while it's working)
TF card requirements

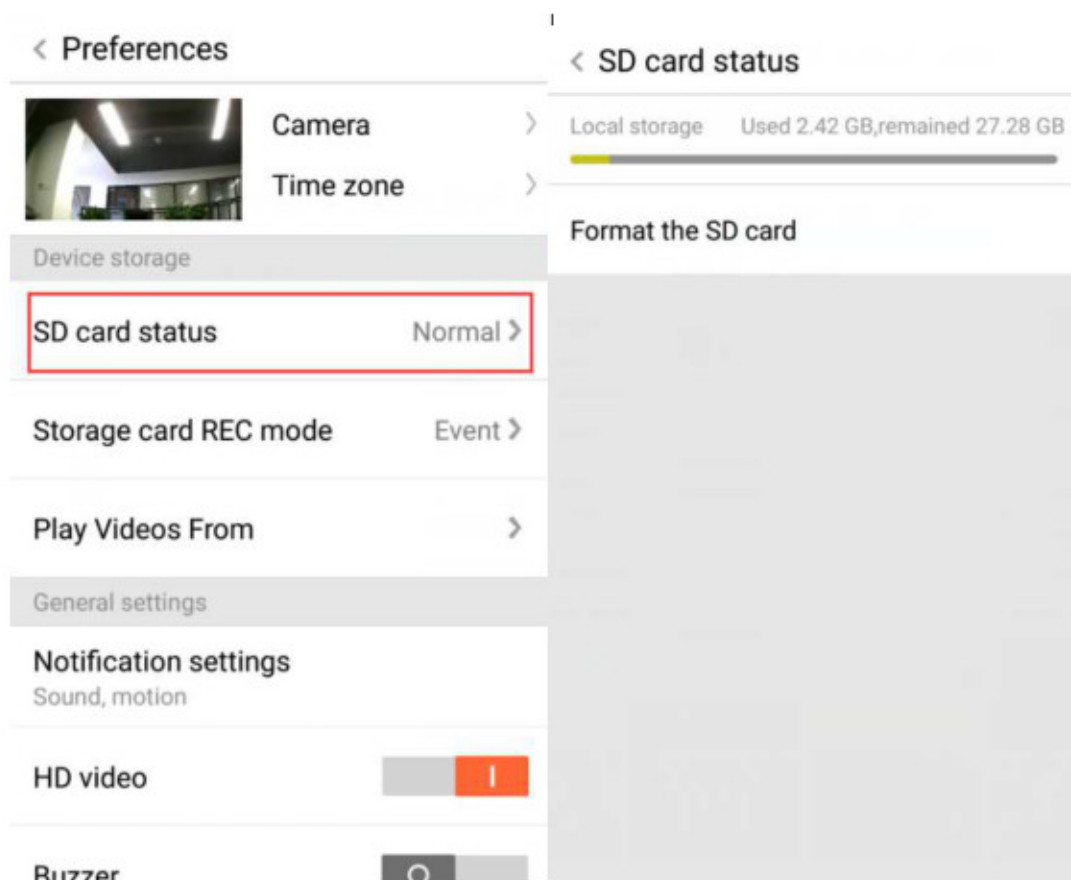

A: Memory space 8-128G

B: C10 TF card

C: FAT32 or exFAT format

D: Use after formatting

E: Recommend, Kingston/SanDisk/Samsung.

Click "SD Card State" to check it

Note After the SD card is inserted, the video will be save to the SD card and loop coverage in the

Other functions setting

A Device name

B Time zone.

 
HD video: switch the quality of pic, HD / SD Device Microphone: Open / Close the microphone

Night Vision

1 Off, close the night vision

2 On, always open night vision

3 Auto, automatic switchover

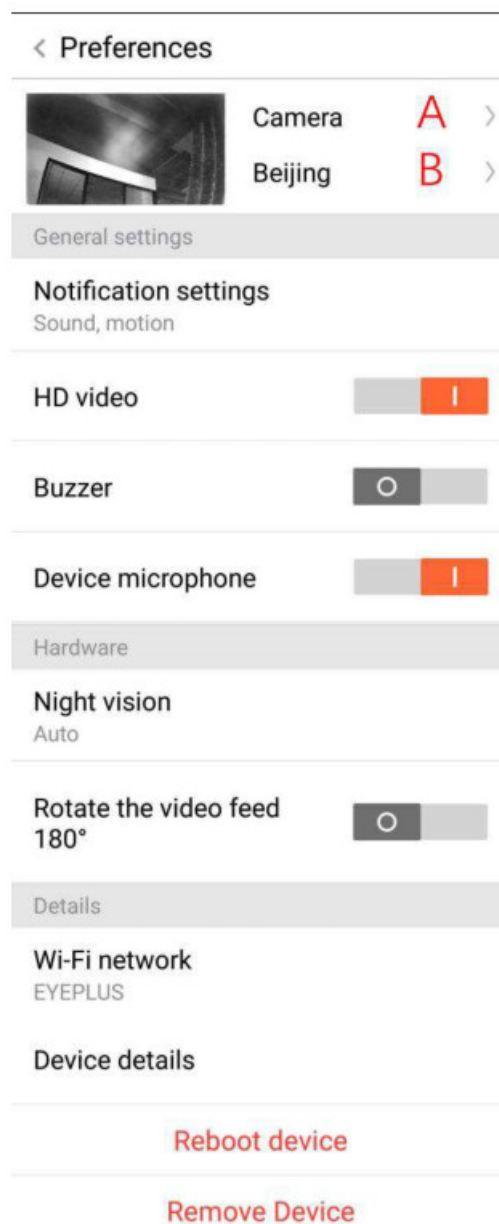

Rotate The Video Feed 180° Flip the picture when the camera is installed under the roof.

 
Wi-Fi Network: Change the Wi-Fi on the device.

Note: The Wi-Fi must be searchable, if the location changed and the Wi-Fi is different, please reset and connect to a new Wi-Fi again.

Device Details Check the ID and the number of the software\hardware of the device.

Remove Device Please remove the camera in your account if you need to use another account to add the camera.

Multi-screen viewing video(Only applies to multiple devices under the same

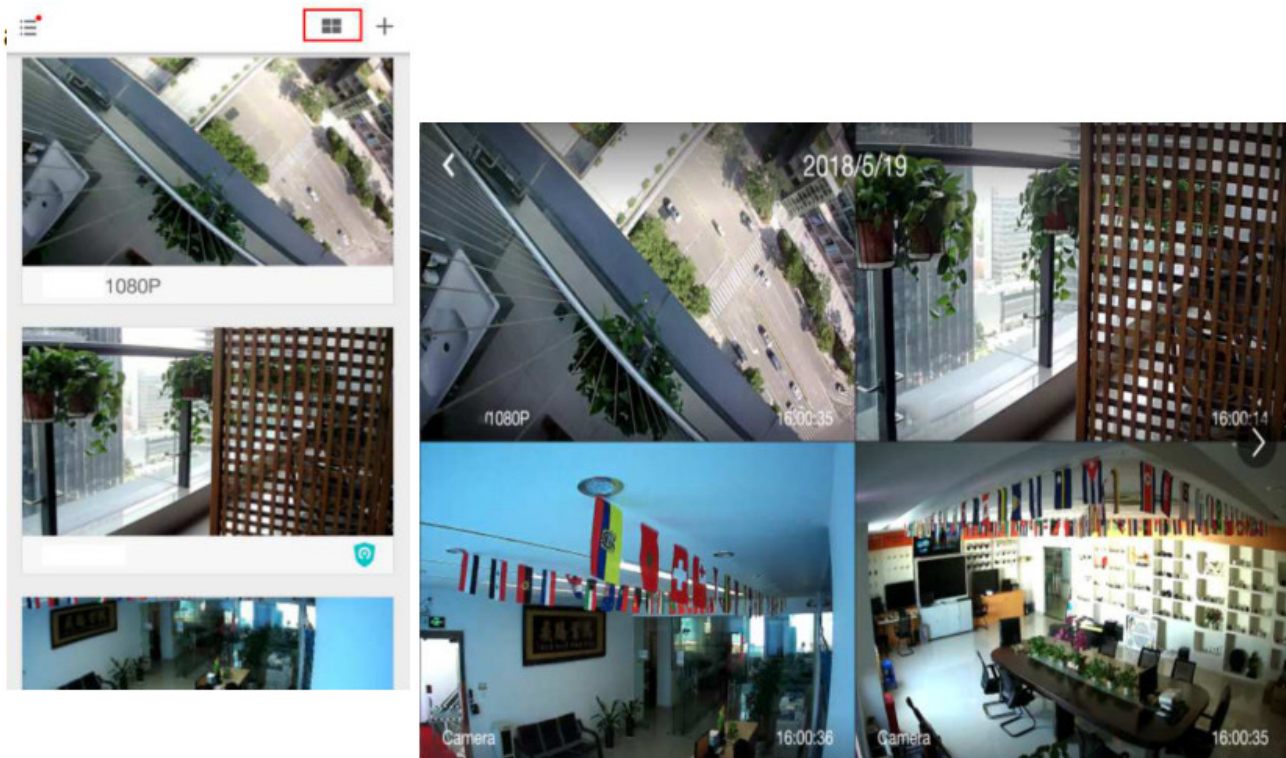

How to check the video on PC

Login

Get more with Recording Services.



Cloud video recording

View the last 24h of video footage from your smartphone, tablet or computer.



Easy saving and sharing

Keep up to 1h of clips. Edit and share from your smartphone.

Log In

Email Address:

185...786@qq.com

Password:

.....

☐ Remember me

Log In

 
[Forgot Password](#)

[Sign Up](#)

Enter your email address and login with your password on <https://www.eyepiusiot.com>

Note: Don't forget

Function introduction

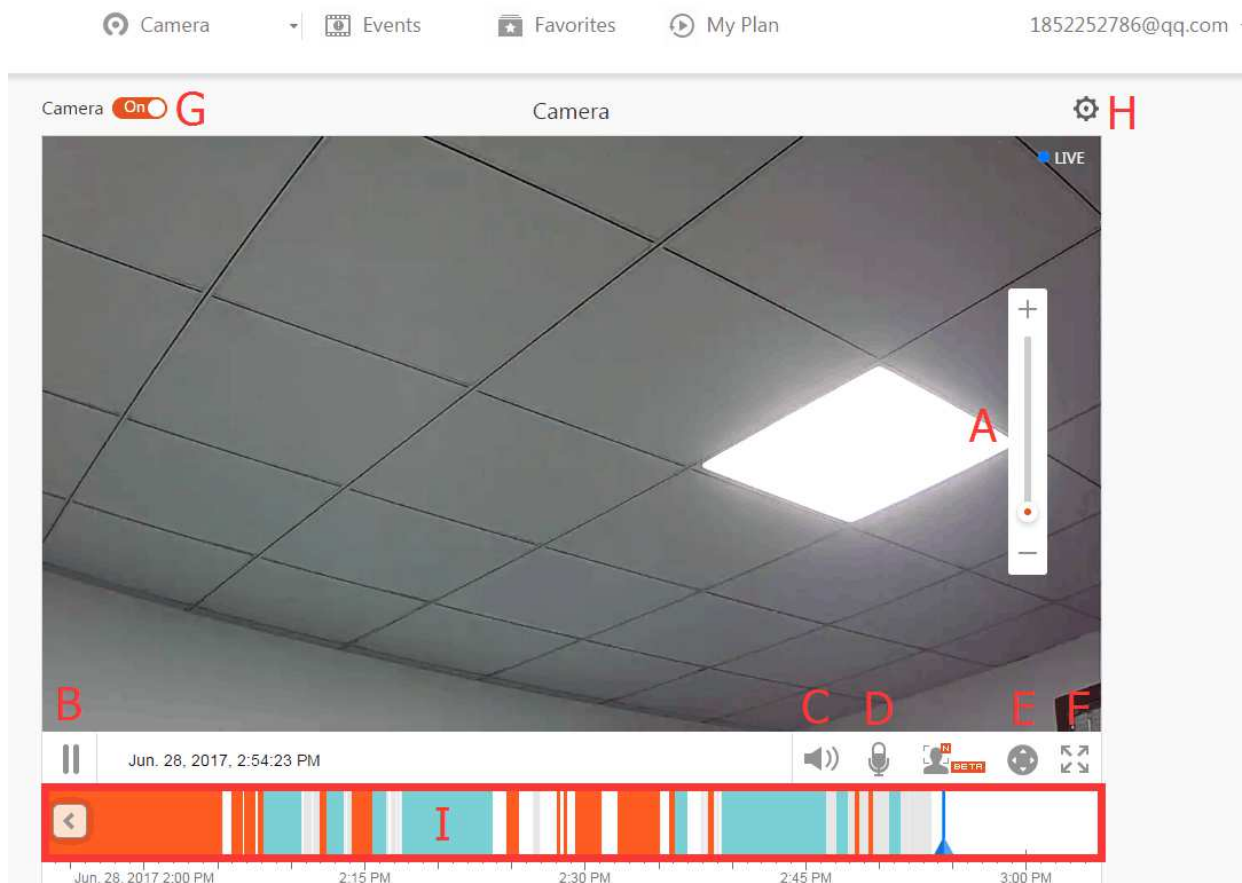

A 4x Digital zoom

B Stop playback

- C Volume setting
- D Talkback key
- E PAN / TILT
- F Full Screen
- G Close / Open Camera
- H Parameter setting, set the quality of picture and notifications.
- I Cloud video replay, drag to each timeline position to check the record from the video.

FAQ

1. Can't add the device

A Please make sure the camera has been reset. Press the Reset button until hear the prompt tone

B Only support 2.4GHZ Wi-Fi, if your Wi-Fi router is 5GHZ, please switch to 2.4/5GHZ dual mode.

C Please turn on the GPS service before adding the device on the Android mobile phone. After installation is complete, you will be asked to turn on GPS service when you use the app at the first time, if you choose not to turn on the GPS service, please uninstall and reinstall the app again

D Please confirm the camera wasn't binding by the other account. There are four voice prompts in the progress

1 "Please use mobile phone for Wi-Fi configuration" after powering on.

2 Select your Wi-Fi and login with your password, after the device, makes a noise like "beep" you will hear this "Please wait for Wi-Fi connecting".

3 "Please wait for internet connecting" after getting the Internet ip address.

4 "Internet-connected welcome to use cloud camera"

A If you can't go to the second step, please check your Wi-Fi channel is not hidden, and the Wi-Fi router can't be so far from the camera. If this way doesn't work, please scan the QR code to add the camera.

B If you can't go to the third step, please reduce the number of the Wi-Fi users, and delete the special characters of your Wi-Fi password.

C If you can't go to the forth step, please try again, if it still doesn't work, please contact the seller.

2. What's the difference of the timeline's colors

Orange means alarm video recording, blue means audible alarm video recording, gray means no exceptions and TF card video recording, white means no recording.

3. Why does it have an interval while the video is recording to the TF card

The size of the video file is limited. Once the video size close to the critical value, the video file will be created and the next video will continue to be recorded, there is a interval but so short.

4. The TF card can't be identified

Please check the TF card if it meets the quality requirements, when the Wi-Fi signal is not good, it also can't be identified.

5. The video recording timeline is blank after the cloud service expired.

The video can't be replayed after cloud service expired, if there is no TF card in the camera, the video can't be recorded.

If the TF card is always working, but the video files disappeared, please check the Check TF card state, if it is normal in the App but no video has been recorded, please format the TF card. If it still doesn't work, please get a new TF card and try again.

6. Why I can't get the notifications on my phone

Make sure the App get the message pushing rights Otherwise, when you are watching the real-time video in

the App, there is no warning notifications, because it's unnecessary to send notifications when you are watching the video online.

Advanced message push system, the warning notifications won't be pushed to your phone all the time but it will record all the messages and videos.

7. Camera disconnect

Please check the power and the Internet then restart the camera. If this way doesn't work please remove the camera and add it again in the App.

8. Circle in the video, video runs slowly

Circle in the video means it's still loading, please check your network environment.

9. How do the other people watch the video?

Share the App account with the other people.

10. How many people can use the account simultaneously.

There is no theoretical limit.

11. Why adding camera to another account would fail?

One camera one account, if the other account needs to add the camera, please remove the camera in the current device.

12. How can I get my camera connected to the other Wi-Fi.

Two ways:

A When you need to change to another Wi-Fi without moving the place.

Parameter setting >> Wi-Fi Network >> select the Wi-Fi

B: When the camera is moved to another place, please start the camera, you will see the "Device disconnected" on the main page, and then click "TROUBLESHOOT" to connect to the Wi-Fi again.

• After-sales instruction

1. The product will be updated in real time, if there is update, it will not be noticed anymore, please visit our official website for reference.
2. Introductions of the basic function of the products are included in the instruction, please users to read all the information carefully.
3. If any problems occur in the usage of the video camera, please contact the Seller
4. We have made every effort to ensure the completeness and correctness of contents of the instruction, but there may still some deviations between part of the data and the actual situation, if you have any question or dispute,
5. Losses caused by operating without following the instruction of the manual book should be assumed by users.

This instruction applies to consumer product.

Kindly reminder: if the instruction is updated, it will not be noticed any more, dual video recording memory (TF card/cloud storage) is supported by the video camera; to better safeguard safety of video recording, users could select multiple cloud video recording mode for video camera via service channels, choosing for monthly/yearly payment for storage.

Amazon Cloud WiFi Camera YCC365APP Manual – [Download \[optimized\]](#)

Amazon Cloud WiFi Camera YCC365APP Manual – [Download](#)