



Amazon Echo Frames (2nd Gen) User Guide

[Home](#) » [Amazon](#) » Amazon Echo Frames (2nd Gen) User Guide 

Contents

- 1 Amazon Echo Frames (2nd Gen)
- 2 WELCOME TO ECHO FRAMES
- 3 OVERVIEW
- 4 CONTROLS
- 5 STATUS COLORS LIGHT
- 6 CARE INSTRUCTIONS
- 7 FIT
 - 7.1 Check the Following Areas
- 8 ADJUSTABLE TEMPLATE TIPS
- 9 THINGS TO TRY
- 10 DESIGNED TO PROTECT YOUR PRIVACY
- 11 PAIRING YOUR ECHO FRAMES WITH OTHER DEVICES
- 12 IMPORTANT PRODUCT INFORMATION
- 13 BATTERY SAFETY
- 14 OTHER USE AND CARE INSTRUCTIONS
- 15 SERVICE YOUR DEVICE
- 16 FCC COMPLIANCE STATEMENT
- 17 RECYCLING YOUR DEVICE PROPERLY
- 18 ADDITIONAL SAFETY & COMPLIANCE INFORMATION
- 19 WHAT'S INCLUDED
- 20 PRODUCT SPECIFICATIONS
- 21 TERMS & POLICIES
- 22 LIMITED WARRANTY
- 23 DOWNLOAD
- 24 Related Posts

Amazon Echo Frames (2nd Gen)




USER GUIDE

WELCOME TO ECHO FRAMES

We hope you enjoy your Echo Frames as much as we enjoyed inventing them. We hope you enjoy your Echo Frames as much as we enjoyed inventing them.

OVERVIEW

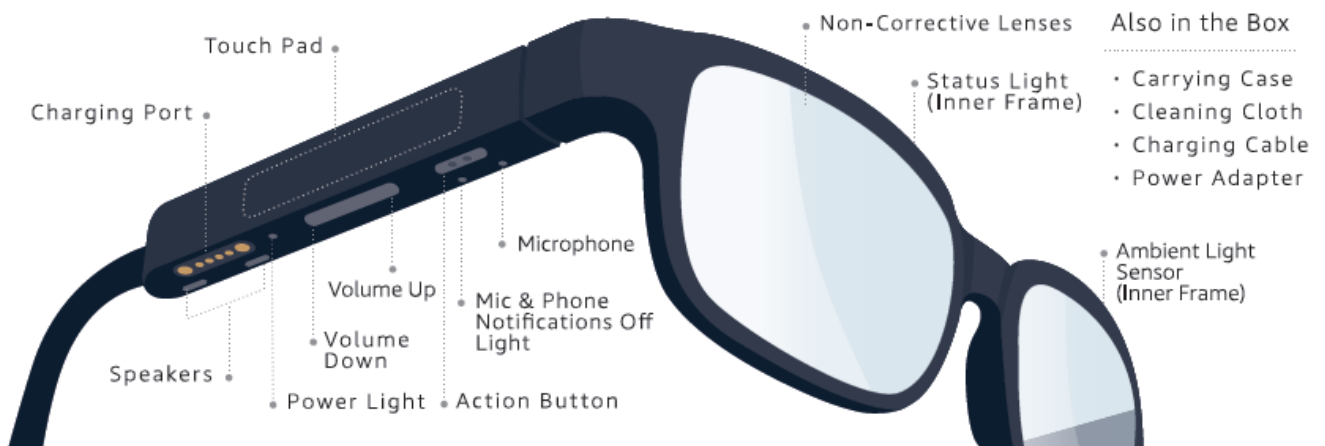

CONTROLS

1 . Action Button

- **POWER ON/RECONNECT/WAKE** : Press the action button once.
- **PAIR** : With your Echo Frames off, press and hold the action button until the status light blinks red and blue, then release the button.
- **TALK TO ALEXA** : In addition to voice, you can press the action button once, then ask without having to say

“Alexa”.

- **MIC & PHONE NOTIFICATIONS OFF/ON** : Press the action button twice.
- **POWER OFF** : Press and hold the action button until the status light turns red, then release the button.

2 .Volume Control





- **INCREASE VOLUME** : Press the front of the volume control.
- **DECREASE VOLUME** : Press the back of the volume control.


3. Touch Pad

- **ACCEPT A CALL/ACCEPT NOTIFICATION** : Swipe either direction.
- **REJECT A CALL/DECLINE NOTIFICATION** : Tap.
- **ACCESS OS ASSISTANT** : Long hold.
- **PAUSE MEDIA** : Tap the touch pad.
- **RESUME MEDIA** : Double tap the touch pad.



STATUS COLORS LIGHT

	PAIRING MODE : Blinking Blue/ Red
	ALEXA IS ACTIVE : Blinking Cyan/ Blue
	ACTIVE OS ASSISTANT : Solid White
	ERRORS/ MIC & PHONE NOTIFICATIONS OFF : Blinking Red

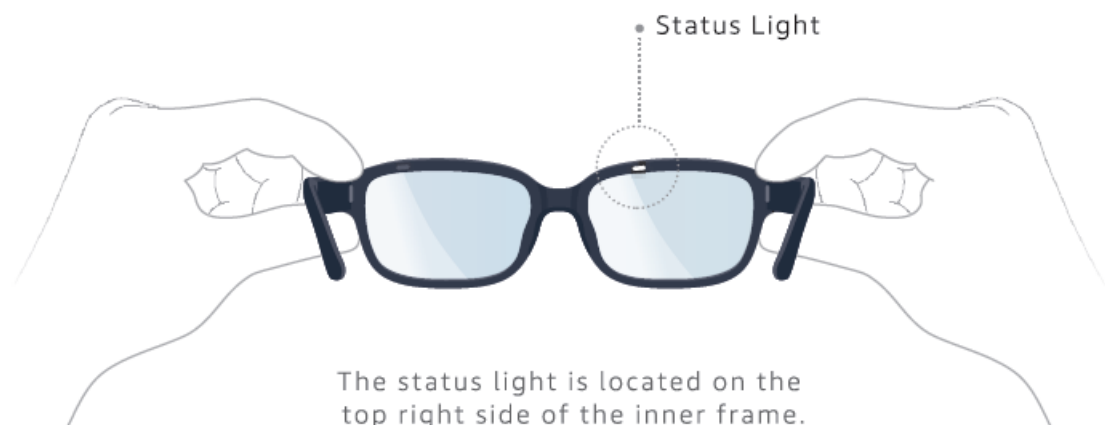

CARE INSTRUCTIONS

See “Important Product Information” for other safety, use, and care instructions.



IPX4 Water Resistance Rating

Splash-resistant to water and sweat.
Do not rinse under water.



Avoid High Heat

Do not leave in the car
on a hot day.



No Alcohol Solutions On Frame

Use alcohol-free lens cleaners and
a soft cloth to clean your lenses.

FIT

Let's make sure your Echo Frames fit properly before you get prescription lenses.

Check the Following Areas

1. TEMPLE EDGE

Put on Echo Frames and slide them all the way back, so they are sitting comfortably on your nose. The temples (arms) should not push onto your ears.

2. NOSE BRIDGE

Your nose should fit snugly under the bridge of the frames and the frames should not be too tight or too loose. If the frames are sliding down your nose, make adjustments to the temple tips by following the instructions in the following page.



ADJUSTABLE TEMPLATE TIPS

How To Make Adjustment?

1. MAKING AN ADJUSTMENT

To begin, try on the frames. If adjustment is needed, hold carefully on the blue highlighted area and bend slightly until the frames fit comfortably.



If the frames are not comfortable or you feel the size is not right, please return them to us.

2. CORRECTING THE CURVATURE

For better frames stability, the temple tips should follow the curvature of your ears.



THINGS TO TRY

Audiobooks and Podcasts

- Alexa, resume my audiobook.
- Alexa, play the pod cast Planet f1oney.

News and Information

- Alexa, play the news.
- Alexa, what's trending?

Communications

- Alexa, call Kari.
- Alexa, announce 'I'm headed home.'

Smart Home

- Alexa, turn on the hallway lights.
- Alexa, is the front door locked?

Reminders and Lists

- Alexa, remind me to buy tickets.
- Alexa, add 'pick up dinner' to my to-do list.

Useful to Know

- Alexa, what's the battery level?
- Alexa, what time is it?

To learn more about other things your Echo Frames can do, go to device settings in the Alexa app.

DESIGNED TO PROTECT YOUR PRIVACY

Amazon designs Alexa and Echo devices with multiple layers of privacy protection. From microphone controls to the ability to view and delete your voice recordings, you have transparency and control over your Alexa experience. To learn more about how Amazon protects your privacy, visit www.amazon.com/alexaprivacy.

PAIRING YOUR ECHO FRAMES WITH OTHER DEVICES

To pair your Echo Frames with other Bluetooth devices, turn your frames off, then press and hold the action button until the status light blinks red and blue. Next, on your laptop or other Bluetooth supported device, go to Bluetooth settings and look for Echo Frames to pair. To swap between paired Bluetooth devices, select Echo Frames in the device's Bluetooth settings. Alexa functionality will only be available when connected to the Alexa app.

For troubleshooting and more information, go to Help & Feedback in the Alexa app.

IMPORTANT PRODUCT INFORMATION

Indication of Use: Echo Frames are spectacle frames intended to hold prescription lenses. They come with non-corrective lenses.

SAFETY INFORMATION

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

BE AWARE OF SURROUNDINGS

PAY ATTENTION. Similar to other electronic devices, use of Echo Frames may divert your attention from other activities or impair your ability to hear surrounding sounds, including alarms and warning signals. Your device also contains a visible LED light that may distract you. For your safety and the safety of others, avoid using this device in a way that distracts you from activities that require your attention. For example, distracted driving can be dangerous and result in serious injury, death, or property damage. Always pay full attention to the road. Do not allow interactions with this device or Alexa to distract you while driving. Check and obey the applicable laws and regulations on the use of this device while operating a vehicle. You are solely responsible for safely operating your vehicle and complying with all applicable laws regarding use of electronic devices while driving. Always observe posted road signs, traffic law, and road conditions.

Turn off the device or adjust your volume if you find it disruptive or distracting while operating any type of vehicle or performing any activity that requires your full attention.

BATTERY SAFETY

HANDLE WITH CARE. This device contains a rechargeable lithium-ion polymer battery and should be replaced only by a qualified service provider. Do not disassemble, open, crush, bend, deform, puncture, shred or attempt to access the battery. Do not modify or remanufacture the battery, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids, expose to fire, explosion or other hazard. Only use the battery for the system for which it is specified. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage or other hazard. Do not short-circuit a battery or allow metallic conductive objects to come into contact with battery terminals. Avoid dropping the device. If the device is dropped, especially on a hard surface, and the user suspects damage, discontinue use and do not attempt repair. Contact Amazon Customer Service for assistance.

Keep this device and the included power adapter in a well-ventilated area and away from heat sources, especially when in use or charging. Do not wear the Echo Frames when charging the device. For more information about batteries, go to <http://www.amazon.com/devicesupport>. This device should only be charged using the cable and adapter included with the device. Do not charge this device near water or in extremely humid conditions. Use only accessories included with this device.

AVOID PROLONGED LISTENING AT HIGH VOLUME. Prolonged listening of the player at high volume can damage the ear of the user. To prevent possible hearing damage, users should not listen at high volume levels for long periods.

DO NOT USE AS EYE PROTECT! ON. The lenses of this device have been tested as impact resistant within the meaning of 21 CFR 801.410, but are not shatterproof or indestructible.

THIS DEVICE CONTAINS MAGNETS

This device and included charging cable contain magnets. Under certain circumstances, magnets may cause interference with some internal medical devices, including pacemakers and insulin pumps. This device and these accessories should be kept away from such medical devices.

WATER PROTECTION

Although this device has been tested to comply with IEC 60529 IPX4, the device is not waterproof and should not be immersed in water or other liquids.

- Do not rinse under running water.
- Do not spill food, oil, lotion, or other abrasive substances on the device.
- Do not expose the device to pressurized water, high velocity water, soapy water, or extremely humid conditions (such as a steam room).
- Do not immerse or submerge the device in water or expose the device to seawater, salt water, chlorinated water, or other liquids (such as beverages).
- Do not wear the device while participating in water sports, e.g. swimming, waterskiing, surfing, etc.

If your device is exposed to water or sweat, follow these instructions:

- Wipe the device with a soft, dry cloth.
- Allow the device to fully dry in a well ventilated area. Do not attempt to dry the device with an external heat source (such as a microwave, oven, or hair dryer). Failure to properly dry the device before charging may lead to compromised performance, charging issues, or erosion of components over time.

Dropping or otherwise damaging the Echo Frames may increase the possibility that exposure to water or sweat could harm the device.

OTHER USE AND CARE INSTRUCTIONS

Clean this device with a soft dry cloth. Do not use water, chemicals, or abrasive materials to clean the frames. To clean the lenses, use an alcohol free lens cleaner and a soft cloth.

Improper maintenance of this device may lead to skin irritation or injury. If skin, hearing or other problems develop, discontinue use immediately and consult a physician.

To reduce the risk of electrostatic discharge upon contact with this device, avoid such contact in extremely dry conditions.

Do not expose this device to extreme heat or cold. Store them in a location where temperatures remain within the storage temperature ratings set forth in this guide. The device and the included accessories are designed to function within the operating temperature ratings set forth in this guide. If it is too hot or too cold, they may not turn on or function properly until they have warmed or cooled, as the case may be, to within the applicable temperature ratings.

The device and its included accessories are not intended for children and should not be used by children under the age of 14.

For additional safety, compliance, recycling and other important information regarding your device, please see www.amazon.com/devicesupport and the Alexa app in Help & Feedback> Legal & Compliance.

SERVICE YOUR DEVICE

If you suspect the device or the included accessories are damaged, discontinue use immediately and contact Amazon Customer Support. Contact details can be found at <http://www.amazon.com/devicesupport>. Faulty service may void the warranty.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The output power of the radio technology used in the Products is below the radio frequency exposure limits set by the FCC. Nevertheless, it is advised to use the Products in such a manner that minimizes the potential for human contact during normal operation.

Changes or modifications to a product by the user that are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The party responsible for FCC compliance is Amazon.com Services LLC, 410 Terry Ave North, Seattle, WA 98109 USA

If you wish to contact Amazon visit www.amazon.com/devicesupport, select United States, click Help & Troubleshooting, then scroll to the bottom of the page and under the Talk to an Associate option, click on Contact Us.

Device Name: Echo Frames

RECYCLING YOUR DEVICE PROPERLY

In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of, or recycle, your device in accordance with your local laws and regulations. For information about recycling your device, go to www.amazon.com/devicesupport.

ADDITIONAL SAFETY & COMPLIANCE INFORMATION

For additional safety, compliance, recycling and other important information regarding your device, please see www.amazon.com/devicesupport and the Alexa app in Help & Feedback> Legal & Compliance.

WHAT'S INCLUDED

1 pair of Echo Frames, carrying case, cleaning cloth, power adapter, and charging cable.

PRODUCT SPECIFICATIONS

Model Number: Z4NEU3

Electrical Rating: SVDC, 250mA Max (Echo Frames), 100-240VAC, 50/60Hz, 0.15A (Power adapter)

Temperature Rating: 32° F to 95° F (0° C to 35° C)

Storage Temperature Range: 14° F to 113° F (-10° (to 45° (

Safety certified to IEC 62368-1, UL 62368-1

Engineered and distributed by Amazon, assembled in China.

TERMS & POLICIES

Your Echo Frames are enabled with Alexa. Before using your Echo Frames, please read all applicable terms, rules, policies and usage provisions found in the Alexa app in Help & Feedback> Legal & Compliance and available at www.amazon.com/devicesupport (collectively, the "Agreements").

By using your Echo Frames, you agree to be bound by the Agreements.

LIMITED WARRANTY

Your Echo Frames is covered by a Limited Warranty, detailed in the Alexa app in Help & Feedback> Legal & Compliance and at www.amazon.com/devicesupport.

Use of the Made for iPhone badge means that an accessory has been designed to connect specifically to iPhone

and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Apple and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. Android is a trademark of Google LLC.

©2020 Amazon.com, Inc. or its affiliates. Amazon, Alexa, Echo, and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

DOWNLOAD

Amazon Echo Frames (2nd Gen) User Guide – [[Download PDF](#)]

Amazon Echo Frames (2nd Gen) Quick Start Guide – [[Download PDF](#)]

- [Echo Frames \(2nd Gen\) Quick Start Guide \(PDF\)](#)
- [Echo Frames \(2nd Gen\) Quick Start Guide \(HTML\)](#)
- [Echo Frames \(2nd Gen\) User Guide \(PDF\)](#)
- [Echo Frames \(2nd Gen\) User Guide \(HTML\)](#)