



Amazon Echo Input User Guide

[Home](#) » [Amazon](#) » Amazon Echo Input User Guide 

Contents

 
- 1 Amazon Echo Input
- 2 Getting to know your Echo Input
- 3 Setup
- 4 2. Download the Alexa App
- 5 Getting started with your Echo Input
- 6 DOWNLOAD
- 7 Related Posts

Amazon Echo Input



QUICK START GUIDE

Getting to know your Echo Input

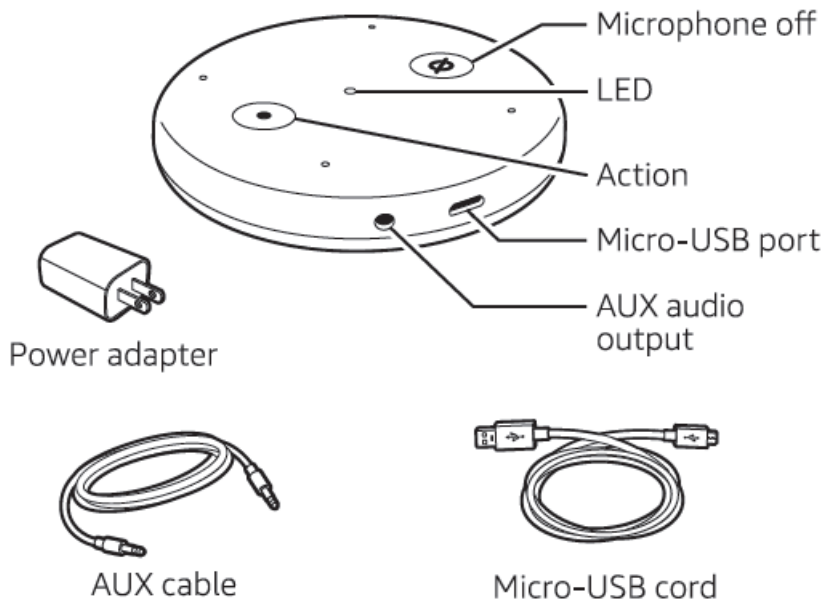


You must use the items included in the original Echo Input package for optimal performance.

Setup

1. Plug in your Echo Input

Plug the micro-USB charging cord and power adapter into your Echo Input and then into a power outlet. If your speaker has an AUX port, connect your Echo Input and speaker using the included AUX cable now. Ensure your speaker is set to an audible volume so that you can hear Alexa provide instructions for completing setup. If your speaker does not have an AUX port, then the Alexa App will provide instructions on how to connect Echo Input with your speaker using Bluetooth. As soon as you see the Echo Input LED light up, go to step 2.

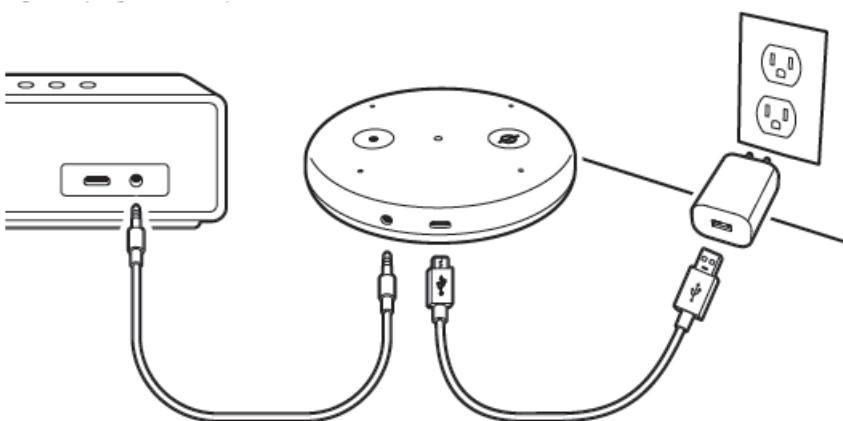


2. Download the Alexa App

Download the latest version of the Alexa App from the app store.

The app helps you set up your Echo Input and more. It's where you set up calling and messaging, and manage music, lists, settings, and news.

If the setup process does not automatically start, tap the Devices icon in the lower right of the Alexa App, then follow the instructions to set up a new device.

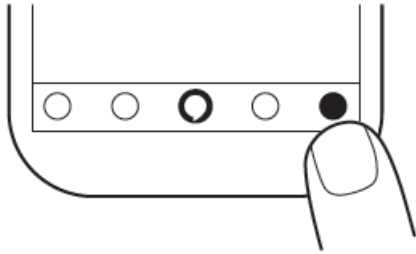


You can also start the setup process from your computer browser at <https://alexa.amazon.com>. To learn more about Echo Input, go to Help & Feedback in the Alexa App.

3. Connect to your speaker

If you have not already connected your Echo Input to a speaker using Bluetooth or an AUX cable, you should do so now. If you are using Bluetooth, place your speaker at least 3 feet away and follow the instructions in the Alexa App to pair Echo Input to your speaker. If you are not automatically prompted, go to your device's settings in the Alexa App and select "Bluetooth Devices." If you are using an AUX cable, your speaker should be at least 0.5 feet away.

Some speakers may turn off automatically due to a power saving mode on the speakers. To avoid an unintentional loss of connection with Echo Input, follow the speaker manufacturer's instructions to disable power saving mode.

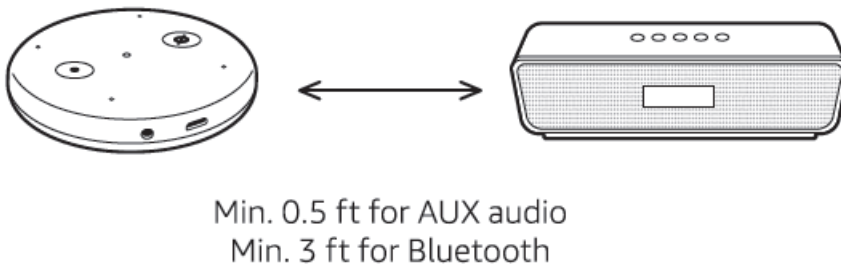

Getting started with your Echo Input

Where to put your Echo Input

Echo Input works best when placed at least 8 inches from any walls. You can put Echo Input in a variety of places-on a kitchen counter, the end table in your living room, or a nightstand.

Talking to your Echo Input

To get the attention of your Echo Input, simply say "Alexa." See the Things to Try card to help you get started.

Give us your feedback

Alexa will improve over time, with new features and ways to get things done. We want to hear about your experiences. Use the Alexa App to send us feedback or visit www.amazon.com/devicesupport.

