



Amazon Echo Wall Clock User Guide

[Home](#) » [Amazon](#) » Amazon Echo Wall Clock User Guide 

Contents

- [1 Amazon Echo Wall Clock User Guide](#)
- [2 What's in the box](#)
- [3 Batteries installation](#)
- [4 Set up your Echo Wall Clock](#)
- [5 Wall Mounting Instructions](#)
- [6 Troubleshooting](#)
- [7 CAUTION](#)
- [8 DOWNLOAD](#)
- [9 Related Posts](#)

 
Amazon Echo Wall Clock User Guide



QUICK START GUIDE

What's in the box


1. Echo Wall Clock
2. Four AA batteries (included)
3. Plasterboard screw
4. Plasterboard anchor

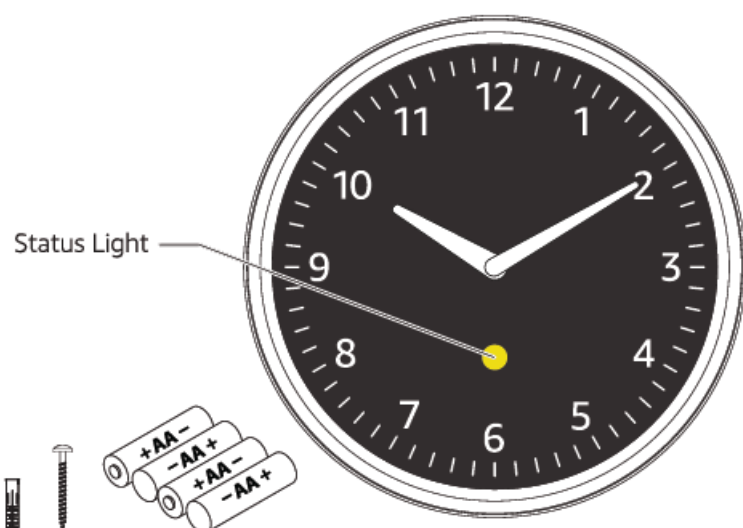

Batteries installation

Gently push the plastic tab to release the battery door. Insert four new AA alkaline batteries (included) in the

correct position, as shown in the diagram. Close the battery door.

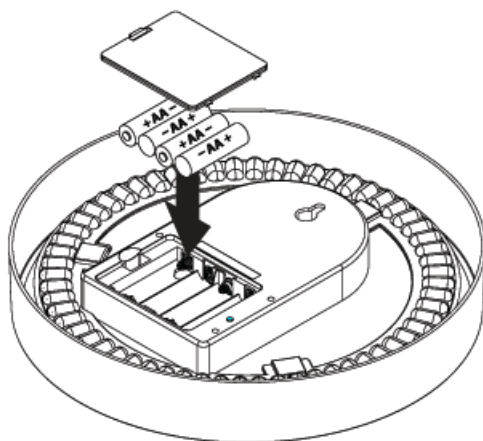


WARNING: CHOKING HAZARD – Small parts Not suitable for children under 3 years of age

Set up your Echo Wall Clock

Prior to mounting, place your Echo Wall Clock within 9.1 metres of your compatible Echo device.


Then say, ".Alexa, set up my Echo Wall Clock" and follow the instructions.

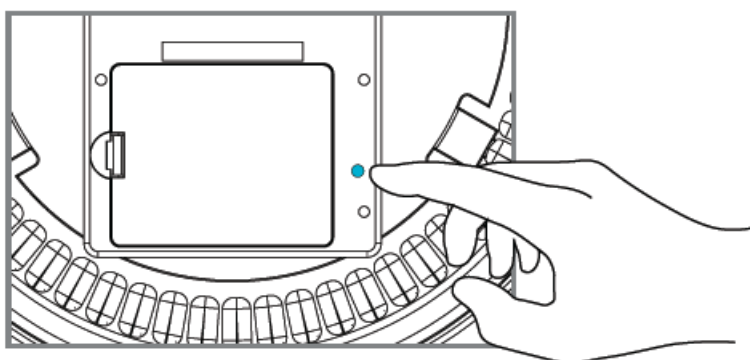

Wall Mounting Instructions

Use a 5.5 mm drill bit (not included) for optimal wall mounting. Follow the steps and diagram below for mounting instructions.



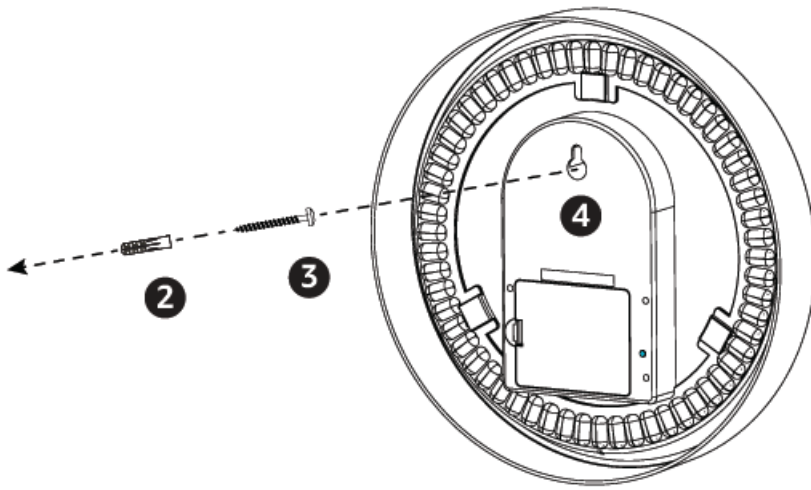



- Step 1.** Drill hole into wall
- Step 2.** Push plasterboard mount into drilled hole
- Step 3.** Screw in plasterboard screw
- Step 4.** Hang Echo Wall Clock



Troubleshooting

To troubleshoot any issues, visit

<https://www.amazon.co.uk/help/echowallclock>

STATUS COLOR		DESCRIPTION
	Pulsing orange	In pairing mode
	Solid blue	Paired
	Pulsing blue	Time syncing
	Pulsing yellow	Notification received on paired Echo Device
	Single blink red	Battery is low
	Three blinks blue	Disconnected

Factory Reset your Clock: If the hands of your clock come off, or if the clock displays the incorrect time, you may need to realign your clock hands by doing a factory reset. On the troubleshooting page see section under Factory Reset your Clock.

Un pair your Clock: If after initially setting up your clock you wish to disconnect it from your Echo device, you can do so by selecting Forget Device in the Bluetooth section of your Alexa app. For details see the video at Troubleshoot your Echo Wall Clock.


Checking for Updates: When connecting your clock to a new Echo device, you may be prompted to wait for a software update after saying “Alexa, setup my Ech,; Wall Clock”. If you hear this prompt, please wait for a few hours, and then re-start your device by unplugging the power adapter and plugging it back in. On some devices you can also check for updates by asking “Alexa, check for software updates.”

Maintaining your Echo Wall Clock: Do not drop, throw, disassemble, crush, bend, puncture or paint your Echo Wall Clock. If your Echo Wall Clock gets wet, use rubber gloves to remove the batteries and wait for your Echo Wall Clock to dry completely before installing new batteries .

Do not attempt to dry your Echo Wall Clock with an external heat source, such as a microwave oven or hairdryer. Clean your Echo Wall Clock with a soft cloth and avoid using liquids or harsh chemicals that may damage your Echo Wall Clock; be careful not to wipe your Echo Wall Clock with anything abrasive.

Please retain the packaging information for future reference.

CAUTION

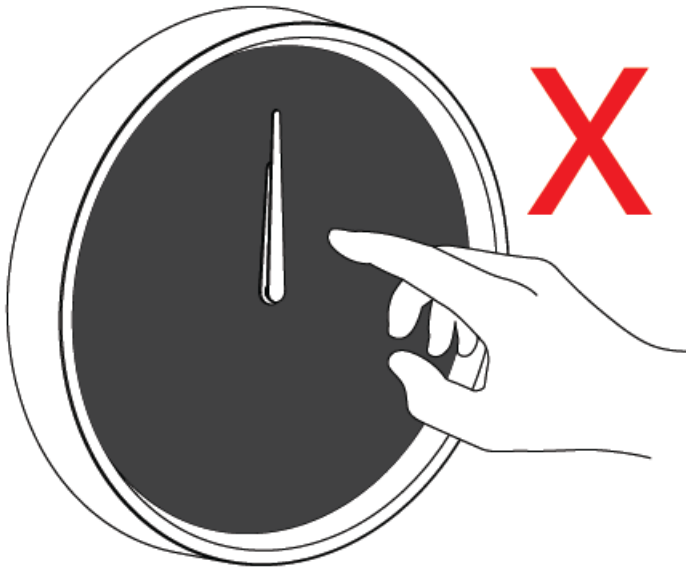

To avoid damage, please do not touch, push, or move clock hands by force.

DOWNLOAD

Amazon Echo Wall Clock Quick Start Guide – [[Download PDF](#)]
