



Fire HD 10 Keyboard Case User's Guide

[Home](#) » [Amazon](#) » Fire HD 10 Keyboard Case User's Guide

Contents [[hide](#)]

[1 Fire HD 10 Keyboard Case User's Guide](#)

- [1.1 Charging and battery management](#)
- [1.2 Pairing your keyboard](#)
- [1.3 Powering on and off](#)
- [1.4 Positioning your keyboard](#)
- [1.5 LED indicators](#)
- [1.6 Instant Search](#)
- [1.7 Shortcuts](#)
 - [1.7.1 Dedicated Buttons](#)
 - [1.7.2 Function Keys](#)
 - [1.7.3 General Shortcuts](#)
- [1.8 Troubleshooting](#)
- [1.9 Finding additional assistance](#)
- [2 Related Posts](#)

Fire HD 10 Keyboard Case User's Guide

The Fire HD 10 Keyboard Case is an integrated Bluetooth LE Keyboard and case designed by Amazon for your Fire HD 10 Tablet. This short guide will familiarize you with all of the features and functionality of your new Fire HD 10 Keyboard Case.

Charging and battery management

The Fire HD 10 Keyboard utilizes low power consuming Bluetooth Smart technology resulting in a battery life of up to 3 months with regular use and 12 months on standby. When you aren't using your keyboard, we recommend that you slide it back into the case to turn the keyboard off and conserve battery life.

 
Your Fire HD 10 Keyboard can be charged using the USB charging cable included with your Fire HD 10. Charging should take less than 2.5 hours. Please note that it may take a bit longer the first few times you charge your keyboard.

To check the battery level, connect your keyboard to your Fire tablet and then check Notifications. There are three status levels: FULL, OK, and LOW. Once the battery level has reached LOW, you can expect at most a couple more days of typical use.

Pairing your keyboard


To pair your Fire HD 10 Keyboard and Fire HD 10 Tablet:

1. Slide the keyboard out. The LED indicator will blink blue indicating it is ready to be paired.

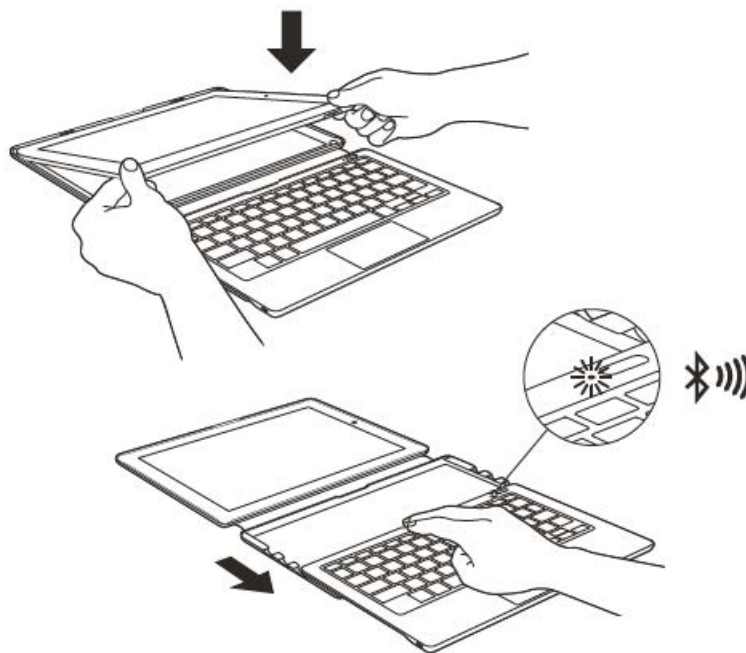

If the LED indicator does not blink, charge the keyboard.

 2. Open Settings and select Wireless > Bluetooth. Turn Bluetooth on and select Pair a Bluetooth Device. Choose Fire HD 10 Keyboard. The LED indicator will flash blue twice when your keyboard successfully pairs.

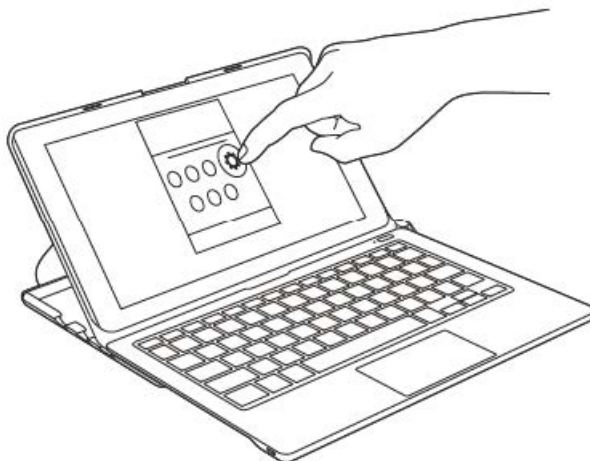


3. The Fire HD 10 Keyboard Case is available in U.S. or UK models, so you will need to set the keymap on your Fire HD 10 tablet to match the physical keyboard. To do this, open Settings and select Keyboard & Language. Under Physical Keyboard, select Fire HD 10 Keyboard > Set up Keyboard Layouts. Once the keyboard layout is selected, you must press the Back key to back out of the screens and for the change to take effect.

Powering on and off


Your Fire HD 10 Keyboard will automatically power off after 15 minutes of inactivity to conserve battery life. To wake your keyboard up, tap the Power button. To turn it off, slide the keyboard back or hold the Power button for 2 seconds. When pressing the Power button to turn it off, a red LED indicator will appear then fade out.

Positioning your keyboard

 Your keyboard case can support the tablet in three distinct angles for better typing, browsing, and viewing experiences whether at a desk or on the go.

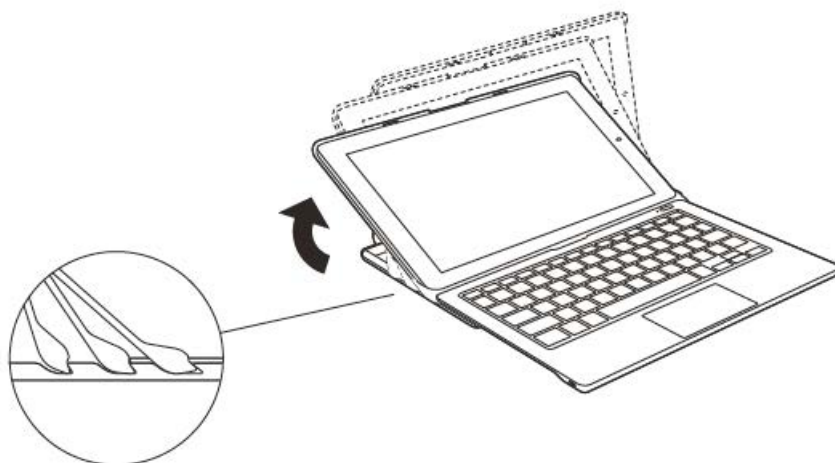

 You can also use your tablet in tablet mode without removing it from the protective case.

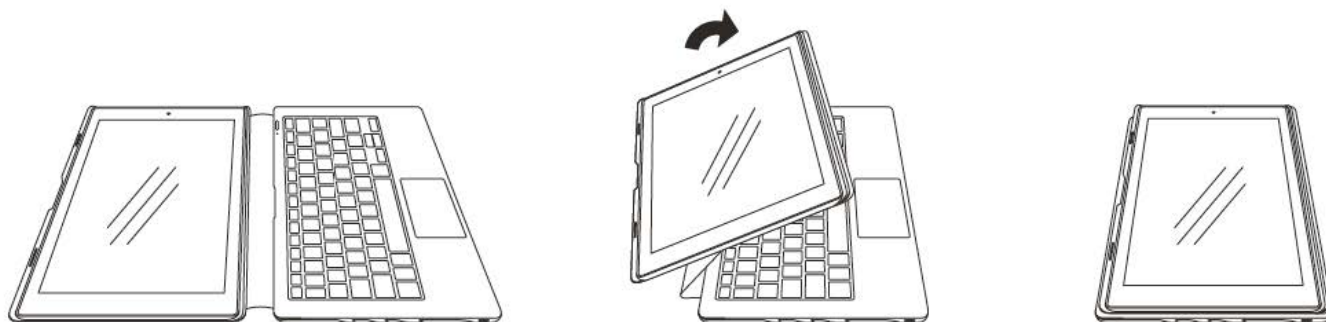

In the above configuration, the keyboard is stowed and will not interfere if turned off.

LED indicators

Your Fire HD 10 Keyboard uses an LED light on the corner of the keyboard to indicate status. The light will also briefly illuminate when the keyboard wakes up.

Event	LED Color and Action
Power On	Blue – Pulsing
Waking up	Blue – Pulsing
Connected	Blue – Double Flash then off
Off - 2 second press of power button	Red - Fade Out
Charging	Red - Solid
Charging Complete	Blue - Solid
Bluetooth Discovery Mode	Blue - Blinking







Instant Search

Your keyboard supports Instant Search, allowing you to search your Fire HD 10 Tablet, Amazon.com, and the web from a single keystroke within select apps. If you are not in a text input field, Instant Search will launch search within the app you are currently using

Shortcuts

Your keyboard provides single-click access to email, media controls, volume, and other actions.

Dedicated Buttons

Button		Description/Action
Home		Return to the Home screen from any screen on your tablet.
Back		Return to the previous screen or action.
F1		Unlock the tablet. Show context-specific menus within apps.
F2		Open the Search field.
F3		Open the Amazon Store.
F4		Open Email app.

Button		Description/Action
F5	■	Go to previous media.
F6	►	Play/Pause.
F7	►	Go to next media.
F8	🔊✕	Mute/unmute media.
F9	🔊	Decrease volume.
F10	🔊🔊	Increase volume.
F11	🔒	Turn off screen and lock tablet. A long press will bring up the Power Off dialog box.
F12	del	Delete.

Function Keys

Function Key	Description/Action
Fn+Tab	Trackpad enable/disable toggle.
Fn+Ctrl	Take a screenshot.
Fn+z (UK model)	Forward slash.
Fn+x (UK model)	Vertical line.
Fn + (UK model)	Equal sign.
Fn+4 (UK model)	Euro currency symbol.
Fn+u	Open square bracket.
Fn+i	Close square bracket.
Fn+o	Open curly bracket.
Fn+p	Close curly bracket.
Fn+Up Arrow	Increase brightness.
Fn+Down Arrow	Decrease brightness.

General Shortcuts

Shortcut	Description/Action
Ctrl+C	Copy.
Ctrl+V	Paste.
Ctrl+X	Cut.
Ctrl+A	Select all.

Shortcut	Description/Action
Alt+Delete	Delete line.
Ctrl+Left Arrow	Move cursor to previous word.
Ctrl+Right Arrow	Move cursor to next word.
Alt+Left Arrow	Move cursor to the front of line.
Alt+Right Arrow	Move cursor to the end of line.
Shift+Right Arrow	Highlight text to the right.
Shift+Left Arrow	Highlight text to the left.
Tab	Go to next item.
Ctrl+T	Open the notification tray.
Alt+Tab	Open the task switcher.
Alt+Shift+Tab	Cycle backwards in task switcher.
Space/Alt+Down Arrow	Page down.
Shift+Space/Alt+Up Arrow	Page up.
Shift+Trackpad Left (Docs App only)	Select left (with double tap).
Shift+Trackpad Right (Docs App only)	Select right (with double tap).

Troubleshooting

Why does the Lock function key (F11) not unlock the tablet?

The Lock function key is a stock Android graphic that represents the Power key. Pressing this function key will turn off the tablet screen and as a side effect will lock the tablet. Unlocking the tablet requires you to turn the tablet screen on and then to press the Menu function key (F1). Alternatively, you can also tap the Space Bar twice to turn the tablet screen on and bring up the unlock screen.

I got a message that my keyboard firmware has been upgraded. What should I do?

There is no action required on your part. The next time you turn on your keyboard, there will be a 20 second delay while the keyboard software is automatically updated.

Will my Fire HD 10 Keyboard work with non Fire OS devices?

Yes, you may use the Fire HD 10 Keyboard with non-FOS devices. However the tray that holds the tablet is specifically designed and sized for the Fire HD 10 tablet. In addition, Fire HD 10 Keyboard features such as multi-touch gestures, enable/disable trackpad, Fire HD 10 Keyboard OTA, battery level notifications and alerts, Mute function key support, brightness support, special UK character mappings, and Instant Search will not be available on non-Fire OS devices.

Finding additional assistance

For helpful information and troubleshooting, go to www.amazon.com/devicesupport.

Fire HD 10 Keyboard Case User's Guide – [Download \[optimized\]](#)

Fire HD 10 Keyboard Case User's Guide – [Download](#)

