




amazonbasics 4-Digit Carabiner Lock User Guide

[Home](#) » [AmazonBasics](#) » amazonbasics 4-Digit Carabiner Lock User Guide 

Contents

- 1 AmazonBasics 4-Digit Carabiner Lock User Guide
 - 1.1 Caution
 - 1.2 Warranty Information
 - 1.3 Feedback and Help
- 2 Documents / Resources
- 3 Related Posts

AmazonBasics 4-Digit Carabiner Lock User Guide

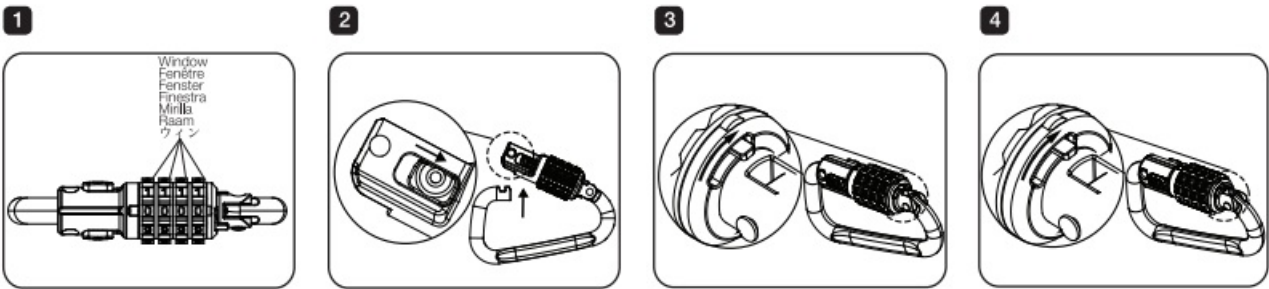

Caution

This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children.

- Make sure to read and understand these instructions before attempting to operate and change the combination of this lock.

Step 1: Factory initial combination is set to 0-0-0-0. Turn the Dials and align the combination with the Guide Line.

Step 2: Slide the Release Lever to unlock.

Step 3: Turn the Reset Button clockwise until it comes to a stop. Set your new desired combination.

Step 4: After changing your combination, turn the reset button back completely to its original position. Your lock is now ready for use with its new combination.

NOTICE Check the lock/unlock function again before scrambling the combination.



WARNING

Keep your combination in a safe and accessible place for future reference.

Warranty Information

To obtain a copy of the warranty for this product:



US: amazon.com/AmazonBasics/Warranty

UK: amazon.co.uk/basics-warranty



US: +1 -866-216-1072 / UK: +44 (0) 800-279-7234

Feedback and Help

Love it? Hate it? Let us know with a customer review.



US: amazon.com/review/review-your-purchases#

UK: amazon.co.uk/review/review-your-purchases#




US: amazon.com/gp/help/customer/contact-us

UK: amazon.co.uk/gp/help/customer/contact-us

MADE IN CHINA

Documents / Resources

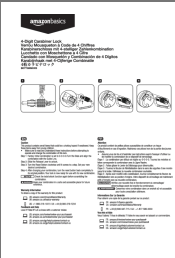	amazonbasics 4-Digit Carabiner Lock [pdf] User Guide 4-Digit Carabiner Lock
---	--