



amazonbasics A3 Sewing Machine User Guide

[Home](#) » [AmazonBasics](#) » amazonbasics A3 Sewing Machine User Guide 



A3 Sewing Machine User Guide

Contents

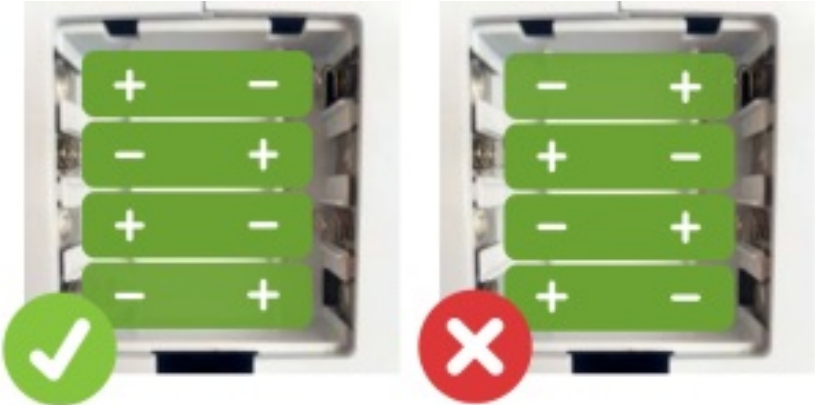

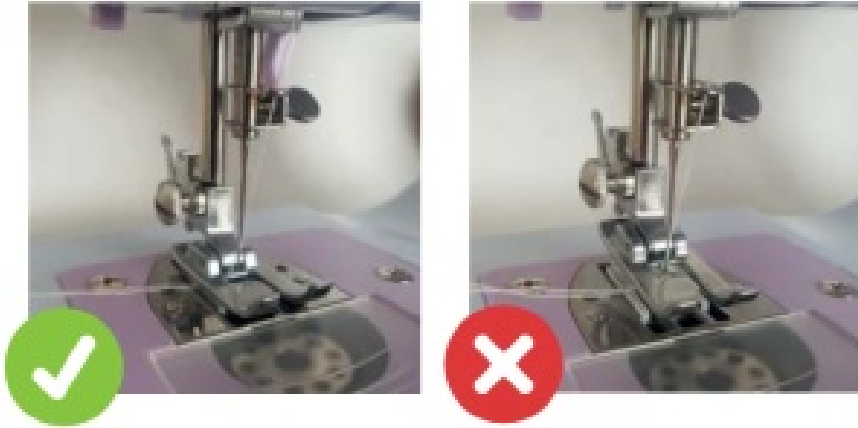
[1 Troubleshooting](#)

[2 Documents / Resources](#)


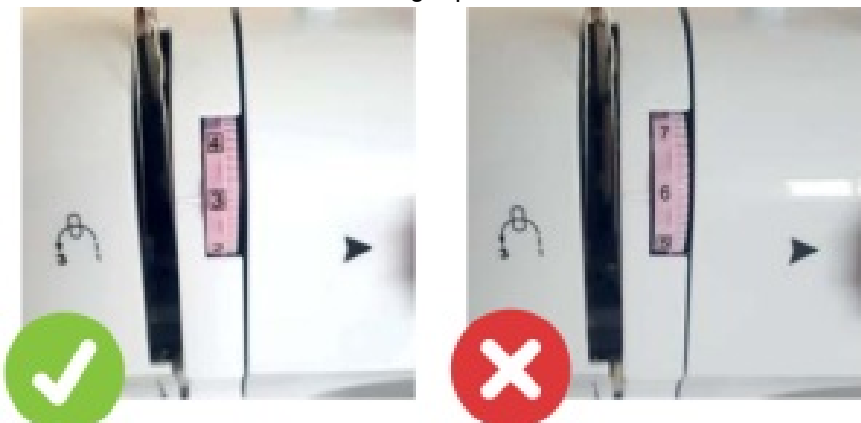
[3 Related Posts](#)











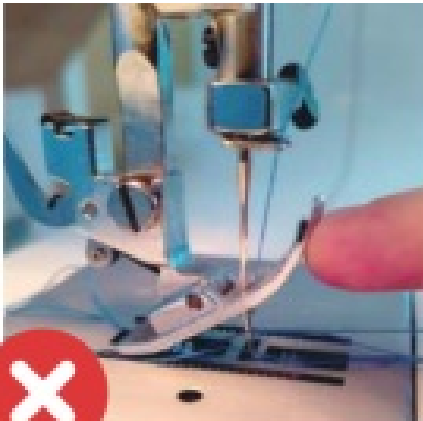

Troubleshooting

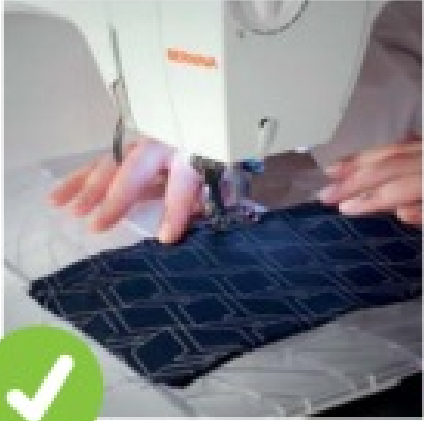











Problem	Possible Cause and Solutions
The Machine Does Not Start	<div><div>No Power: Check Power Supply to make sure the machine is plugged in and the socket on the wall is turned on</div><div></div></div>


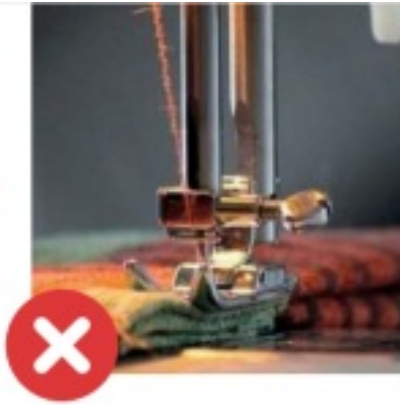







<p>The Machine Does Not Start</p>	<p>Battery Issue: Make sure the batteries are inserted correctly</p> 
<p>The Thread Breaks</p>	<p>Needle Bent or Needle shank is not properly seated: Replace the bent needle and insert it correctly</p> 
<p>The Thread Breaks</p>	<p>Bobbin Threads and Upper Threads are not put under the presser foot: Put the upper thread and bobbin thread underneath the presser foot</p> 

<p>Stitches are skipped</p>	<p>Presser's foot is loose: Set the presser foot lever to down position</p> <div data-bbox="544 152 1444 600">  </div>
-----------------------------	---

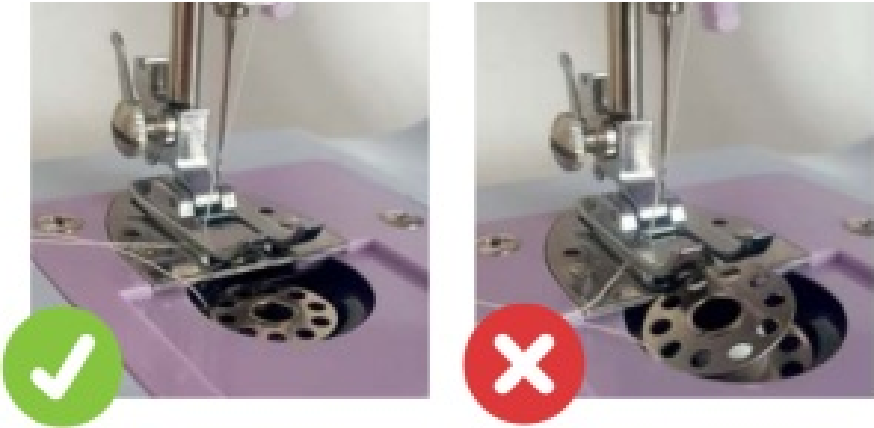

Problem	Possible Cause and Solutions
<p>The Machine Does Not Start</p>	<p>The foot pedal is not connected: Set the Auto Function switch to Off. Then plug the foot pedal into the foot pedal jack on the machine</p> <div data-bbox="557 851 1417 1272">  </div>
<p>The Thread Breaks</p>	<p>Thread tension is wrong for the fabric: Fabric should be no more than 16mm; Use lower tension setting for thicker fabric. Tension Control should be in the right place</p> <div data-bbox="557 1496 1422 1917">  </div>

The Thread Breaks	<p>Excessive lint in the bobbin case: Clean the lint out of the bobbin case</p> <div data-bbox="528 159 979 618">   </div> <div data-bbox="1007 159 1458 618">   </div>
Stitches are skipped	<p>Incorrect threading: Re-thread the machine correctly. (Refer to Quick Start Guide)</p> <div data-bbox="528 719 979 1178">   </div> <div data-bbox="1007 719 1458 1178">   </div>
Stitches are skipped	<p>Bent or Damaged needle: Replace the damaged needle</p> <div data-bbox="528 1267 979 1727">   </div> <div data-bbox="1007 1267 1458 1727">   </div>
Problem	Possible Cause and Solutions

<p>Stitches are skipped</p>	<p>Do not pull the fabric too fast: Do not pull the fabric when the machine is running</p> <div data-bbox="534 197 986 645">   </div> <div data-bbox="1005 197 1455 645">   </div>
<p>Needle Breaks</p>	<p>The bobbin is empty: Re-thread the Bobbin (Refer to Quick Start Guide)</p> <div data-bbox="534 813 986 1261">   </div> <div data-bbox="1005 813 1455 1261">   </div>
<p>Needle Breaks</p>	<p>The needle is out of Alignment to Realign the needle</p> <div data-bbox="534 1523 986 1971">   </div> <div data-bbox="1005 1523 1455 1971">   </div>

Needle Breaks	<p>Fabric is too thick or Fabric is not suitable: Make sure the fabric is less than 16mm in thickness; Do not use knitted fabric, velvet, silk, mesh, lace, leather</p> <div>   </div> <div> <div>  Cotton  Canvas  Denim </div> <div>  Knit  Velvet  Silk  Leather </div> </div>
---------------	--

Problem	Possible Cause and Solutions
Stitches are skipped	<p>Wrong needles are used : Refer to the below Needle Size Guide to identify which needle you need. Needle Size Guide: No. 60/8 65/9 – Silks No. 70/10 75/11 – Lightweight Fabrics No. 80/12 – Medium Fabrics No. 90/14 – Medium (slightly heavier) Fabrics No. 100/16 – Heavyweight Fabrics No. 110/18 – Upholstery Fabrics No. 120/20 – Very Heavy Fabrics</p>

<p>Needle Breaks</p>	<p>The bobbin case is seated correctly Seat Bobbin case correctly, run it a few times until it is perfectly seated</p> <div data-bbox="555 219 1433 645">  </div>
<p>The machine keeps running when the foot pedal is disengaged</p>	<p>The machine is set to Auto mode. Set the Auto as Off while using a foot pedal</p> <div data-bbox="544 831 1453 1272">  </div>

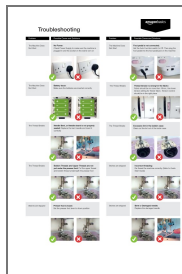
Scan the QR Code to learn more about your machine!

Scan Me



<https://www.amazon.co.uk/dp/B085CY1MP9>

Documents / Resources



[amazonbasics A3 Sewing Machine](#) [pdf] User Guide
A3 Sewing Machine