


amazonbasics LED Rope Light User Manual

Home » AmazonBasics » amazonbasics LED Rope Light User Manual


Contents

- 1 amazonbasics LED Rope Light User Manual
- **2 Product Description**
- 3 Installation
- 4 Connecting in series
 - 4.1 Use and Care Instructions
- 5 Cleaning
- 6 Maintenance
- 7 User Servicing Instructions
 - 7.1 Fuse replacement
- 8 FCC Supplier's Declaration of Conformity
 - 8.1 Unique Identifier
 - **8.2 FCC Compliance Statement**
- 9 FCC Interference Statement
- 10 Canada IC Notice
- 11 Specifications
- 12 Feedback and Help
- 13 Read More About This Manual & Download PDF:
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

amazonbasics LED Rope Light User Manual

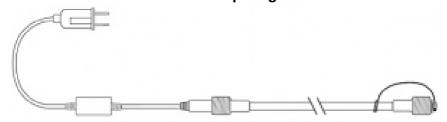

Product Description

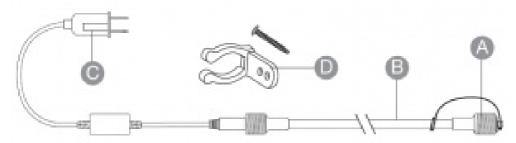



A Female cord connector C Attachment plug with fuse

B LED lamp (non-replaceable)
D Mounting clip and screw set

Installation


- Determine installation location and lay the product in place before assembly.
- Fix the product directly to the structural support. Use provided mounting clips (D).
- Connect the plug (C) to a suitable outlet. The product lights up.

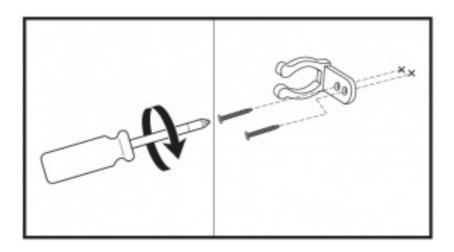

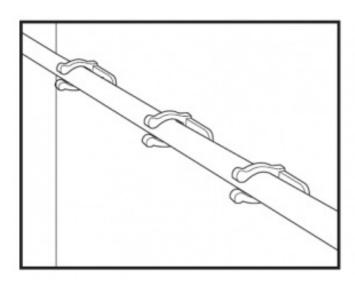

Connecting in series

 To attach additional rope lights, unscrew the end cap on the female cord connector (A) and remove the end plug. Then connect the male cord connector from another set and tightly screw the end cap.



WARNING: Risk of electric shock! Do not combine more than:

- 4 sets for 40-foot (12 meters) version or
- 8 sets for 20-foot (6 meters) version.

Total length of a set should not exceed 160-foot (48 meters).

Use and Care Instructions

WARNING Risk of electric shock! To prevent electric shock, unplug before cleaning.WARNING Risk of electric shock! During cleaning do not immerse the product in water or other liquids.Never hold the product under running water.

Cleaning

- To clean, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Maintenance

• When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.


- If the product is placed on a tree, the tree should be well secured and stable.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

User Servicing Instructions

Fuse replacement

NOTICE The product requires a max. 3 Amp, 125 Volt fuse.

- Grasp the plug (C) and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- Slide open the fuse access cover on top of the plug (C) towards blades.
- Remove the fuse carefully. Use a pointed object to push the fuse out of the socket.
- Replace the fuse with a spare one located in the fuse compartment and slide close the fuse access cover on top of the plug (C).

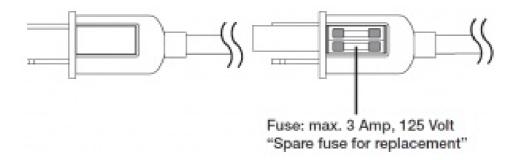

CAUTION Risk of fire! Replace only with max. 3 Amp, 125 Volt fuse.

CAUTION Risk of fire! Do not replace the plug (C). It contains a safety device (fuse) that should not be removed. Discard product if the plug (C) is damaged.



FCC – Supplier's Declaration of Conformity

Unique Identifier

B07TT6GYQ3 – 180 LED Candy Cane Striped Rope Light, 20-Foot

B07TV72B57 - 360 LED Candy Cane Striped Rope Light, 40-Foot

B07TT6G9NC – 210 LED Green Rope Light, 20-Foot

B07TS33SKB - 210 LED Red Rope Light, 20-Foot

B07TT6GYQJ - 210 LED Blue Rope Light, 20-Foot

B07TXD56K8 – 210 LED Yellow Rope Light, 20-Foot

B07TW9WZB5 – 210 LED Purple Rope Light, 20-Foot

B07TYHNSNS – 210 LED Orange Rope Light, 20-Foot

B07TRMB894 - 210 LED White Rope Light, 20-Foot

B07TXD56KT - 210 LED Warm White Rope Light, 20-Foot

B07TV73X9C - 420 LED Green Rope Light, 40-Foot

B07TV74YYJ – 420 LED Red Rope Light, 40-Foot

B07TW9YC73 – 420 LED Blue Rope Light, 40-Foot B07TW9WD98 – 420 LED Yellow Rope Light, 40-Foot B07TRM9MR7 – 420 LED Purple Rope Light, 40-Foot B07TXF1P7Y – 420 LED Orange Rope Light, 40-Foot B07TRM8X1B – 420 LED White Rope Light, 40-Foot B07TRM8X1K – 420 LED Warm White Rope Light, 40-Foot

Responsible Party Amazon.com Services, Inc

410 Terry Ave N.

U.S. Contact Information

Seattle, WA

98109, United States

Telephone Number (206) 266-1000

FCC Compliance Statement

- 1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including
- 2. interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Canada IC Notice

• This Class B digital apparatus complies with Canadian CAN ICES-3(B) / NMB-3(B) standard.

Specifications



 B07TT6G9NC,
 B07TV73X9C,

 B07TS33SKB,
 B07TV74YYJ,

 B07TT6GYQJ,
 B07TW9YC73,

 B07TXD56K8,
 B07TW9WD98,

B07TW9WZB5. B07TXF1P7Y, B07TRM9MR7, B07TRM8X1B, B07TYHNSNS, B07TRM8X1K B07TRMB894, B07TXD56KT

Rated voltage: 120 V~, 60 Hz 120 V~, 60 Hz Rated wattage: 16.8 W 33.6 W

Lamp type: LED (x210) (non-replaceable) LED (x420) (non-replaceable)

max. 3 Amp, 125 Volt max. 3 Amp, 125 Volt Fuse type: Length: 20-foot (6 meters) 40-foot (12 meters)

B07TT6GYQ3 B07TV72B57

Rated voltage: 120 V~, 60 Hz 120 V~, 60 Hz

14.4 W 28.8 W Rated wattage:

Lamp type: LED (x180) (non-replaceable) LED (x360) (non-replaceable)

max. 3 Amp, 125 Volt max. 3 Amp, 125 Volt Fuse type: Length: 20-foot (6 meters) 40-foot (12 meters)

Feedback and Help

Love it? Hate it? Let us know with a customer review. Amazon Basics is committed to delivering customerdriven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.

amazon.com/review/review-your-purchases#

amazon.com/gp/help/customer/contact-us

Read More About This Manual & Download PDF:

Documents / Resources



amazonbasics LED Rope Light [pdf] User Manual

LED Rope Light, B07TT6GYQ3, B07TV72B57, B07TT6G9NC, B07TS33SKB, B07TT6GYQJ, B 07TXD56K8, B07TW9WZB5, B07TYHNSNS, B07TRMB894, B07TXD56KT, B07TV73X9C, B0 7TV74YYJ, B07TW9YC73, B07TW9WD98, B07TRM9MR7, B07TXF1P7Y, B07TRM8X1B, B07 TRM8X1K

References

- a Amazon.com. Spend less. Smile more.
- **a** Amazon.com: Amazon Basics