


amazonbasics Low-Back Computer Chai User Manual

Home » AmazonBasics » amazonbasics Low-Back Computer Chai User Manual



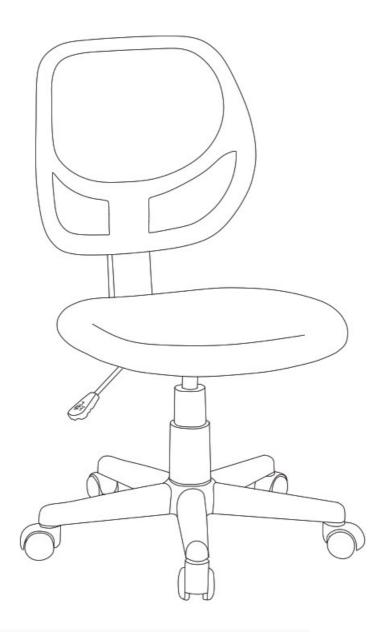

Contents [hide

- 1 Low-Back Computer Chair
- **2 IMPORTANT SAFEGUARDS**
- 3 IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY
- **4 Cleaning and Maintenance**
- **5 Maintenance**
- **6 Specifications**
- 7 Feedback and Help
- 8 Documents / Resources
- 9 Related Posts

Low-Back Computer Chair

BO7SRJ7CYL / BO7SRJ7J23 / BO7SRJ74K3 / BO7SVNT3JJ / BO7SQFTTLZ / BO7SQFTDSL / BO7SVNPYT3 / BO7SWS2YZQ





Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:

- For domestic and office use only.
- A competent adult must assemble this product.
- Keep children and pets away while assembling the product.
- Do not let children climb on or play with the product.
- Always use on a firm, level ground.
- Do not use this product if any parts are missing, are damaged or worn.
- Do not overtighten the fasteners.
- Regularly examine the product for wear and tear. Replace at first sign of damage or if parts become detached.
- · Do not stand on the seat.
- · Do not sit on the armrest.
- The product is intended for users up to 120 kg.



The gas lift must be replaced and repaired by a qualified professional only.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY



Before First Use

· Check for transport damages.



Risk of suffocation! Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

Cleaning and Maintenance

Cleaning

- To clean, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.



Maintenance

- Regularly check that all the components and fasteners are tightened.
- Store in a cool and dry place away from children and pets, ideally in original packaging.
- Vacuum the product regularly. Small dust particles are very abrasive and can wear furniture prematurely.



Specifications

Net weight: 7.0 kg

Dimensions (W x H x D): 45 x 85 - 96.5 x 51 cm





Feedback and Help


Love it? Hate it? Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.



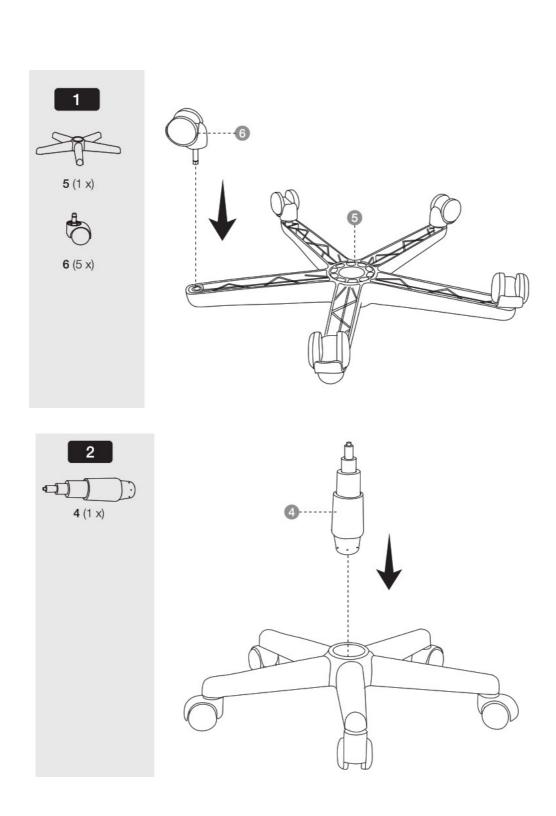

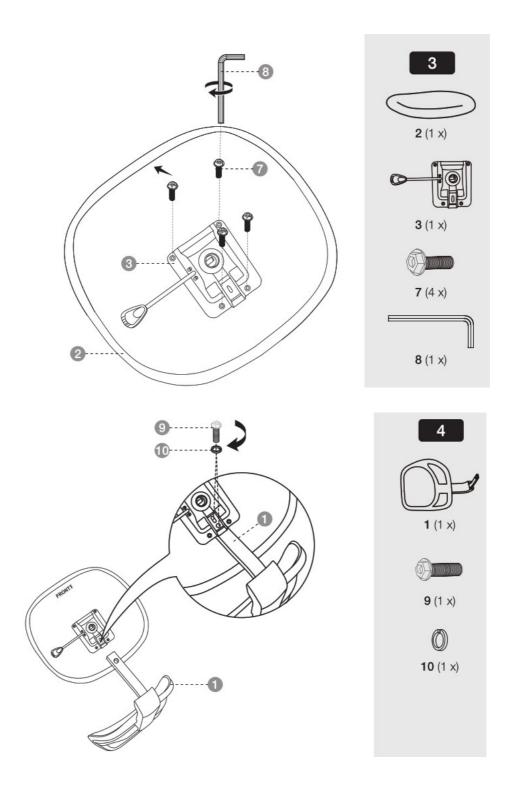

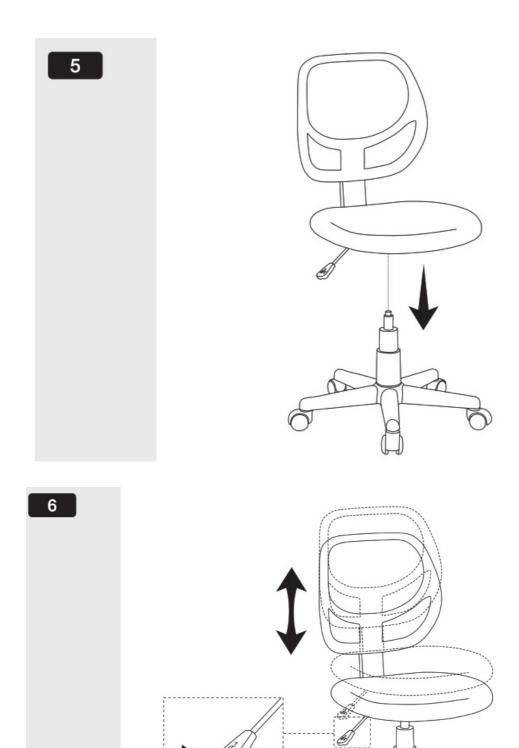



amazon.com/AmazonBasics



amazonbasics Low-Back Computer Chai [pdf] User Manual Low-Back Computer Chai

privacy Manuals+, home