



amazonbasics Rechargeable Wireless Keyboard Mouse Combo User Guide

[Home](#) » [AmazonBasics](#) » amazonbasics Rechargeable Wireless Keyboard Mouse Combo User Guide 

Contents

- [1 amazonbasics Rechargeable Wireless Keyboard Mouse Combo](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Parts List – Mouse](#)
- [5 Parts List – Keyboard](#)
- [6 Connection](#)
- [7 FCC -Supplier's Declaration of Conformity](#)
- [8 Safety and Compliance](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



amazonbasics Rechargeable Wireless Keyboard Mouse Combo



Product Information

- Product Name: AmazonBasics Rechargeable Wireless Keyboard Mouse Combo
- Manufacturer: Amazon
- Country of Origin: China

- Parts Included: Mouse, Keyboard
- Mouse Features: Left Button, Scrolling Wheel, Right Button, DPI Button, Low battery Indicator, ON/OFF Switch, Sensor, USB Cover, Nano Receiver, Type-c charging port
- Keyboard Features: Media player program control buttons, volume control buttons, mute button, track navigation buttons, media playback control buttons, web browser launch button, email client launch button, 'My Computer' folder open button, 'My favorite' open button, Fn lock button, right-click button, search button, calculator button, screen button,
- LED indicators for low battery, Number Lock on, Caps Lock on, Scroll Lock on, function key enable button, USB cover, ON/OFF switch, Type-C charging port
- Charging Method: Connect to power supply using the provided charging cable
- Battery Indicator: LED indicators for low battery and charging status
- Cleaning and Maintenance: Refer to user manual for instructions

Safety and Compliance:

Do not look directly at the LED light; Follow battery disposal guidelines; Complies with FCC and IC regulations

Specifications:

- Mouse Weight
- [Insert Mouse Weight], Keyboard Weight
- [Insert Keyboard Weight], Mouse Dimensions
- [Insert Mouse Dimensions], Keyboard Dimensions
- [Insert Keyboard Dimensions]

 
Product Usage Instructions

1. To turn on the media player program, press the corresponding button on the keyboard.
2. To decrease volume, press the volume control button on the keyboard.
3. To increase volume, press the volume control button on the keyboard.
4. To mute the sound, press the mute button on the keyboard.
5. To go to the previous track, use the track navigation buttons on the keyboard.
6. To go to the next track, use the track navigation buttons on the keyboard.
7. To play/pause media playback, use the media playback control button on the keyboard.
8. To stop media playback, use the media playback control button on the keyboard.
9. To start the default web browser and load the home page, press the corresponding button on the keyboard.
10. To start the default email client, press the corresponding button on the keyboard.
11. To open up the folder 'My Computer', press the corresponding button on the keyboard.
12. To open 'My favorite' when inside the browser, press the corresponding button on the keyboard.
13. Press Fn + any function key (1 through 12) to trigger the secondary function of each key.
14. For right-click functionality, use the right-click button on the keyboard.
15. Use the search button on the keyboard to initiate a search.
16. Use the calculator button on the keyboard to launch a calculator application.
17. Use the screen button on the keyboard to control screen settings.
18. LED indicators on the keyboard show low battery status, Number Lock status, Caps Lock status, and Scroll

Lock status.

 
 
 
19. To enable the second function of the Function keys, use the corresponding button on the keyboard.
20. Remove the USB receiver from the keyboard slot and plug it into a USB port on your computer for connection.
21. The battery indicator on the keyboard and mouse shows the charging status.
22. Follow the provided cleaning and maintenance instructions in the user manual.
23. Refer to the user manual for FCC compliance statement, Canada IC notice, and EU declaration of conformity.
24. Ensure proper battery disposal by taking used batteries to an appropriate disposal/collection site.



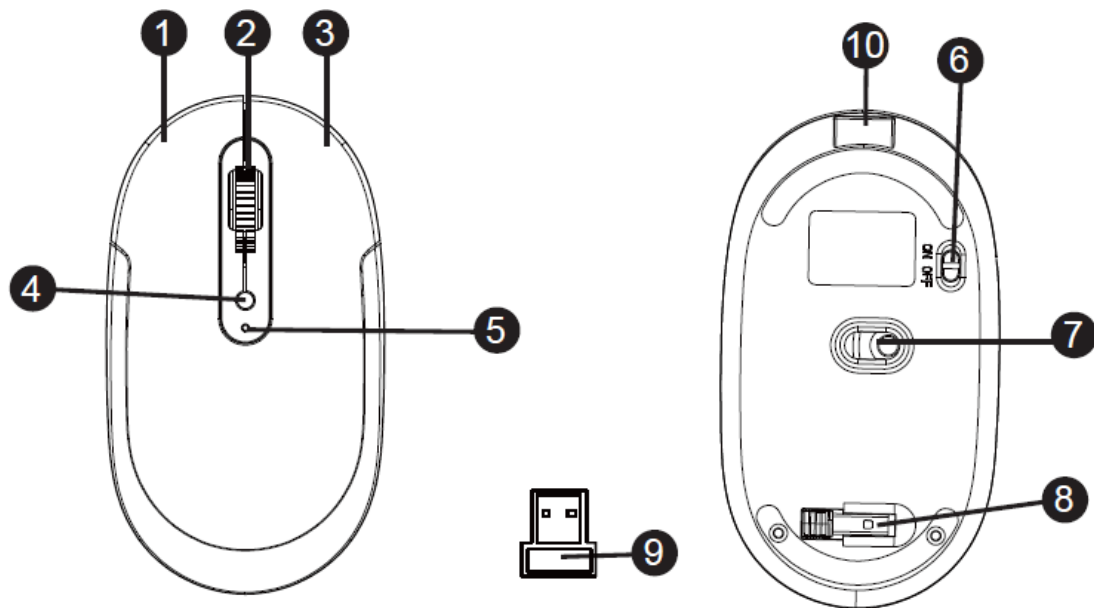



 

 


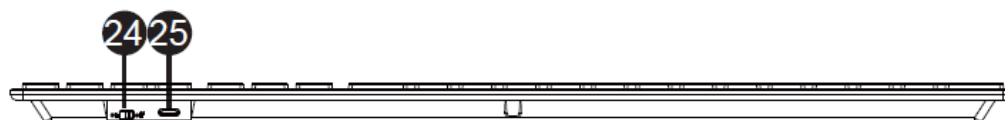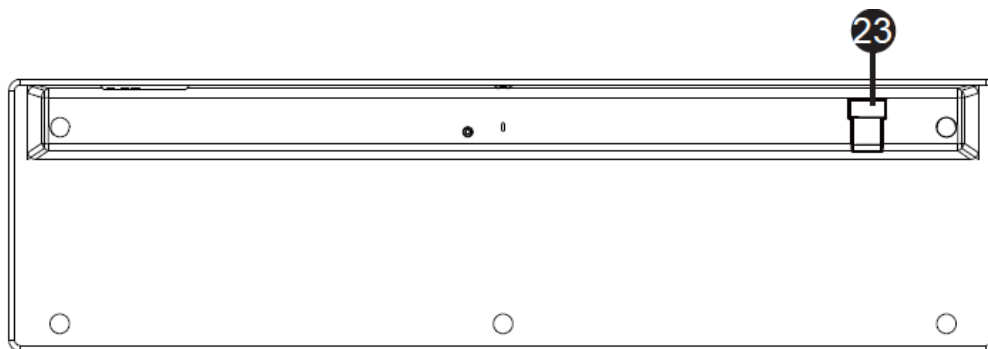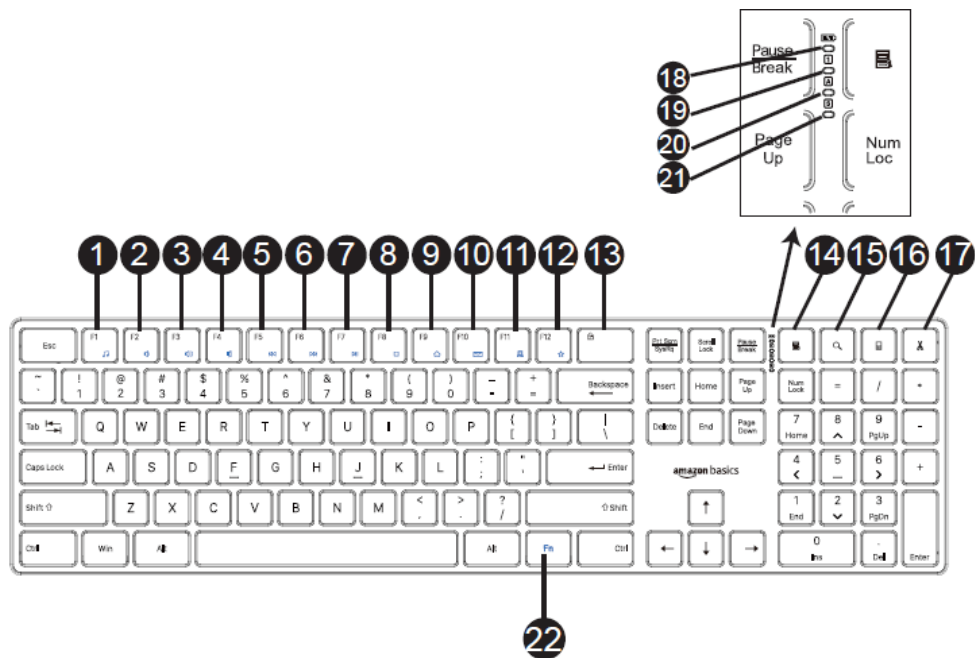
 

 
 
 
 
 
 

 
Parts List – Mouse



1	Left Button	6	ON/OFF Switch
2	Scrolling Wheel	7	Sensor
3	Right Button	8	USB Cover
4	DPI Button	9	Nano Receiver
5	Low battery Indicator	10	Type-c charging port

Parts List – Keyboard




1		To turn on the Media player program
2		To decrease volume
3		To increase volume
4		To mute the sound
5		Previous track
6		Next track
7		To play/pause media playback
8		To stop media playback
9		To start the default Web browser and load the home page
10		To start the default e-mail client
11		To open up the folder 'My Computer'
12		To open 'My favorite' when inside the browser
13		Fn lock
14		Right click
15		Search
16		Calculator
17		Screen
18		LED indicator Low battery
19		LED indicator Number Lock on
20		LED indicator Caps Lock on
21		LED indicator Scroll Lock indicator
22		To enable the second function of the Function keys
23	USB cover	
24	ON/OFF Switch	
25	Typec-C Charging port	

NOTE


Press Fn + any function key (1 through 12) to trigger the secondary function of each key.

 Keyboard & Mouse Charging

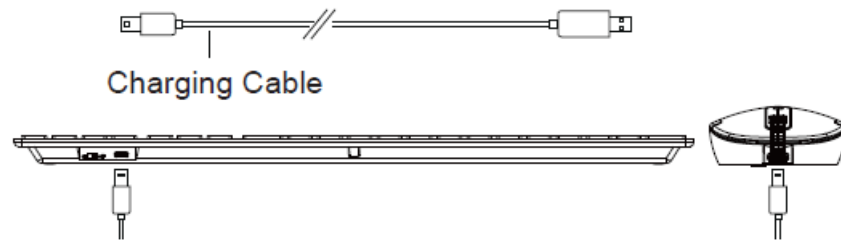


When the battery is too low, The power red Indicator will flash until shut down please connect to the power supply to charge in time to ensure that the keyboard and mouse sufficient power to meet normal work. if the battery of the keyboard and mouse is too low, there will have delays and freezes and other problems in typing, which will affect normal use. Power indicator turns red while charging then turns to green after 2-3 hours fully charged.

 
Connection

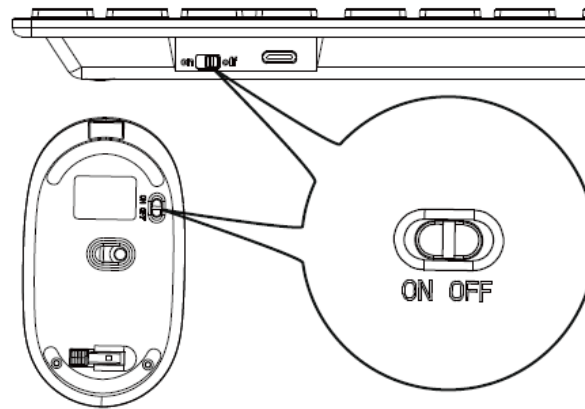

 1. Turn on the power switch to ON.

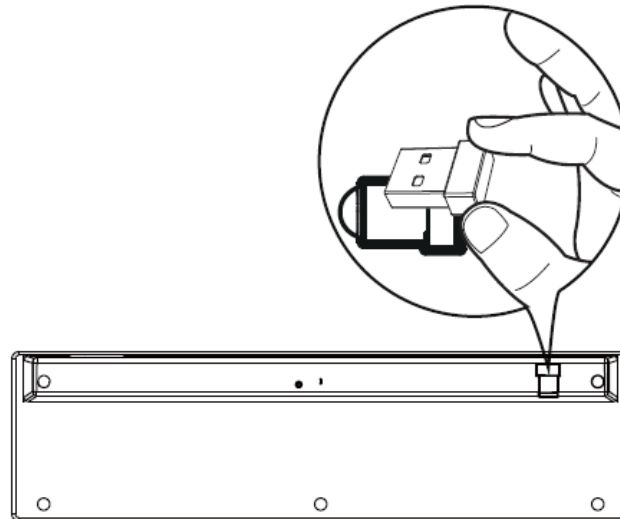

 2. Take out the USB receiver from keyboard slot(Keyboard and Mouse share one Receiver)

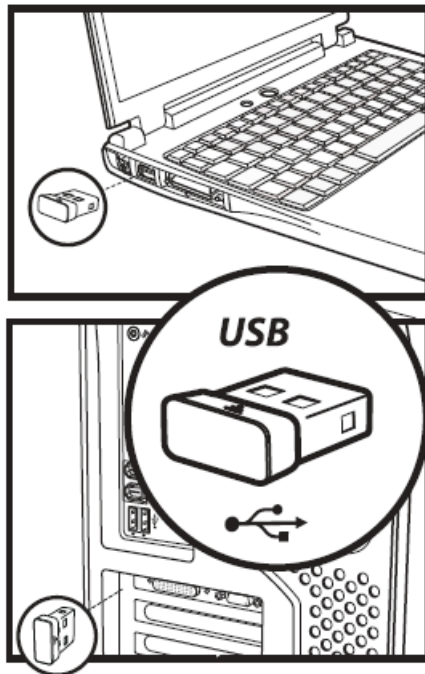

3. Plug the USB receiver into USB port of your computer.

Keyboard & Mouse LED Indicator

 
 
Turn on keyboard & mouse LED is lighting 10 sec.

Battery Indicator

Low battery LED blinks

Red light for charging

Green light charging completed

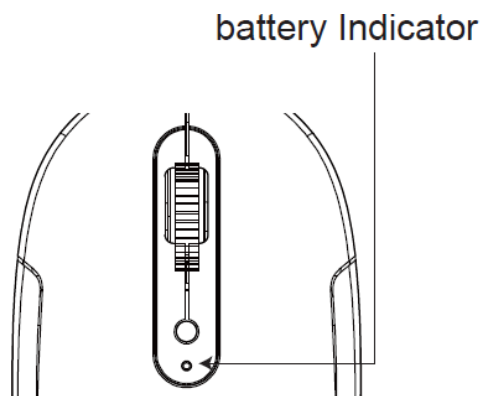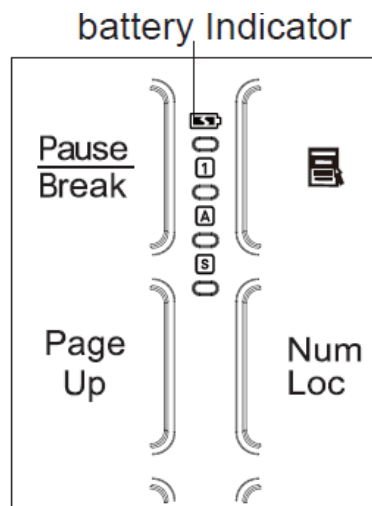

Cleaning and Maintenance

- Clean the product with a dry lint-free cloth. Do not allow any water or other liquids enter the product's interior.
- Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning.
- Clean the battery contacts and also those of the product prior to battery installation.

FCC -Supplier's Declaration of Conformity

FCC Compliance Statement

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 1. this device may not cause harmful interference, and
 2. this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canada IC Notice

- This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:
 1. This device may not cause interference, and
 2. This device must accept any interference, including interference that may cause undesired operation of the device.

Simplified EU Declaration of Conformity

- Hereby, Amazon EU Sarl declares that the radio equipment type is in compliance with Directive 2014/53/EU.
- The full text of the EU declaration of conformity is available at the following internet address:

https://www.amazon.co.uk/amazon_private_brand_EU_compliance

Intended Use

This product is a wireless computer peripheral intended for interacting with your desktop/laptop.

Safety and Compliance

Read this instruction manual carefully before using the product. It contains important information for your safety as well as operating and maintenance advice. Observe all safety instructions to avoid damage through improper use! Follow all warnings on the product. Keep this instruction manual for future use. Should this product be passed on to a third party, then this instruction manual must be included.

- Never use this product if damaged
- Do not insert any foreign objects into the inside of the casing
- Protect the product from extreme temperatures, hot surfaces open flames, direct sunlight, water, high humidity, moisture, strong jolts, flammable gases, vapours and solvents.
- Keep this product and its packaging out of the reach of children and pets.


WARNING: Do not look directly at the LED light.

Battery Warnings

- Keep batteries out of the reach of children.
- Do not dispose of batteries in fire.
- Store unused batteries in their original packaging away from metal objects. If already unpacked, do not mix or jumble batteries.
- Remove batteries from product if it is not to be used for an extended period of time unless it is for emergency purposes Exhausted batteries should be immediately removed from product and properly disposed
- If the battery leaks avoid contact with skin and eyes. Rinse affected areas immediately with plenty of clean water, then consult a doctor

Disposal



-  The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimize the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

Battery Disposal

- Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/collection

site.

Specifications

- Weight – Mouse: 62.8g (0.138 lbs)
- Weight – Keyboard: 550g (1.213lbs)
- Dimensions- Mouse: 10.78×6.01×2.68 cm (4.24×2.37×1.06 in)
- Dimensions- Keyboard: 43.18 x 11.88 x 1.83 cm (17.00×4.68×0.72 in)
- OS compatibility: Windows XP; Windows VISTA / 7/8/10
- Frequency band: 2.4 GHz (2.402 GHz – 2.480 GHz)


FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used installed and operated with minimum distance 0mm between the radiator and your body.

Documents / Resources

 <small>MADE IN CHINA DESIGNED BY TENCER PRODUCED BY TENCER PRODUCED IN CHINA DESIGNED IN CHINA</small>	amazonbasics Rechargeable Wireless Keyboard Mouse Combo [pdf] User Guide HK8983, 2BA78HK8983, Rechargeable Wireless Keyboard Mouse Combo, Wireless Keyboard Mouse Combo, Keyboard Mouse Combo, Mouse Combo
---	---

References

- [Amazon.com: Amazon Basics](#)
- [Amazon.co.uk: Low Prices in Electronics, Books, Sports Equipment & more](#)