



amazonbasics Ultra-Light True Wireless Bluetooth Earbuds User Guide

[Home](#) » [AmazonBasics](#) » amazonbasics Ultra-Light True Wireless Bluetooth Earbuds User Guide 

Contents

- 1 Ultra-Light True Wireless Bluetooth Earbuds
- 2 Contents:
- 3 Important Safety
- 4 Symbols Explanation
 - 4.1 Intended Use
 - 4.2 Before First Use
 - 4.3 Stereo mode
 - 4.4 Mono mode
- 5 Charging the earbuds (F)
- 6 Battery Indicators
- 7 Cleaning and Maintenance
- 8 FCC Compliance Statement
 - 8.1 FCC Interference Statement
 - 8.2 Canada IC Notice
- 9 Warranty Information
- 10 Documents / Resources
- 11 Related Posts

 
amazonbasics

Ultra-Light True Wireless Bluetooth Earbuds



Contents:

Before getting started, ensure the package contains the following components:

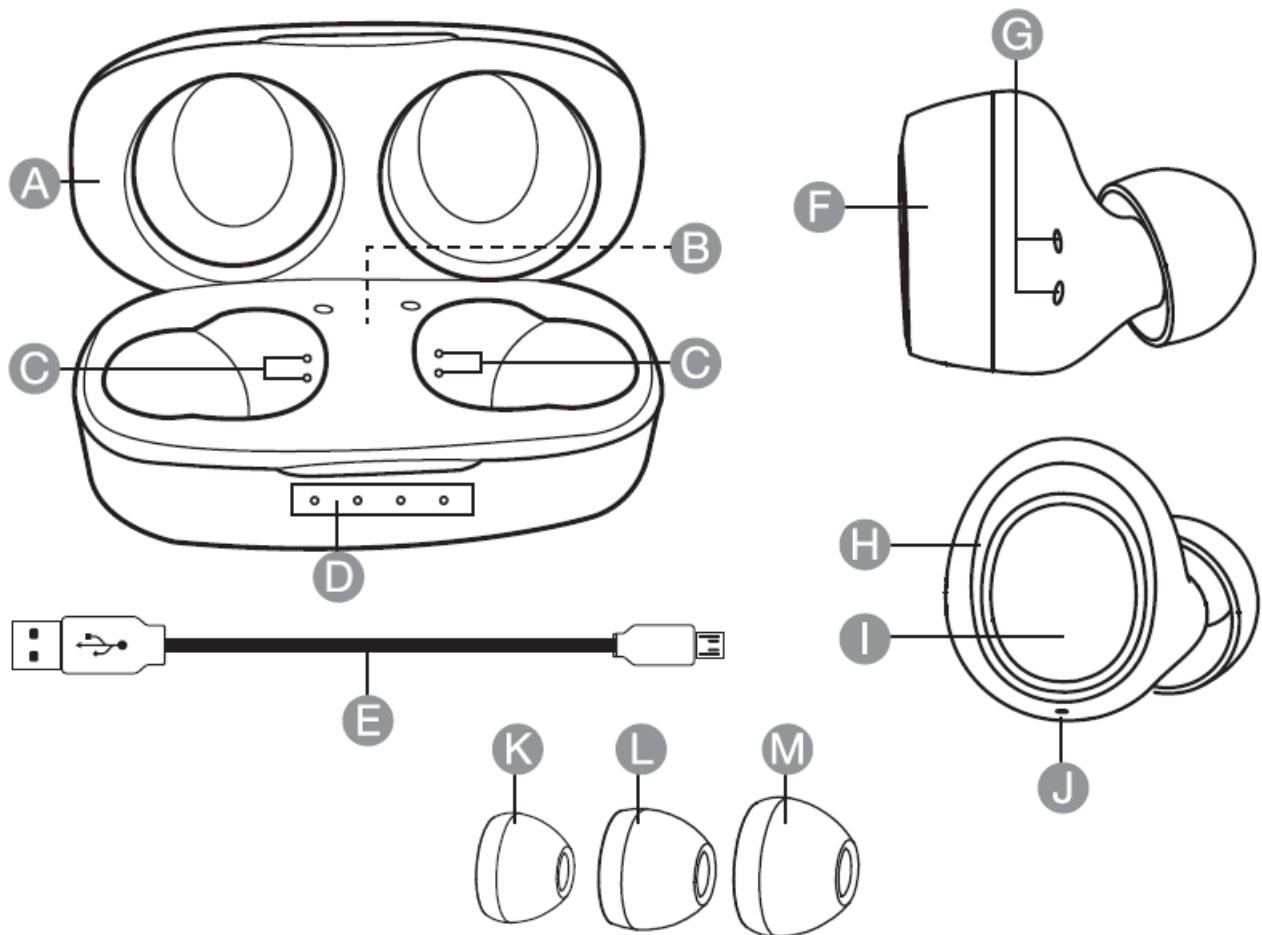

- Battery-powered case
- USB Micro B port
- Charging contact points
- Charging indicators
- USB cable
- Earbud x2
- Charging contact points
- Indicator light

- MF (multifunction) switch
- Microphone
- Small ear tip x2 (L/R)
- Medium ear tip x2 (L/R)
- Large ear tip x2 (L/R)

Important Safety

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

- Keep the product away from sources of heat (e.g. direct sunlight), dust and water.
- To prevent possible hearing damage, do not listen at high volume levels for long periods. Do not use the earbuds while driving or cycling, or in any situation where you should be able to hear other sound.

Battery Warnings

- The battery contained in this product is non-replaceable. Do not throw the product into a fire.
- Do not leave the battery charging for a prolonged period of time when the product is not in use.
- Do not charge overnight.
- Charge this product once every 3 months to avoid shortening its battery life.
- Charge this product only with a compatible power source from reputable manufacturers e.g. a power adapter or USB port on a PC.

Symbols Explanation

 
Protected against splashing water from any direction. Do not Immerse In water.

Intended Use

- The product is intended for wireless audio playback. The product also can be used for hands-free calling via a paired Bluetooth® device.
- The earbuds are protected against water jets from any direction. Do not immerse in water.
- The battery-powered case is intended to be used in indoor dry areas only.

Before First Use

- Check for transport damages.
- Remove the film of the back earbud housing (This film is used to isolate the earbuds from the case to reserve the case battery during transportation).

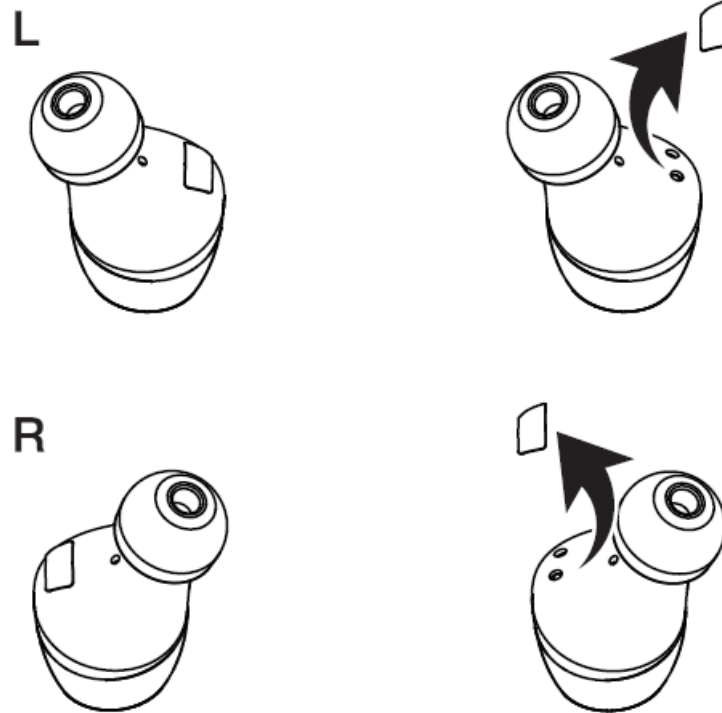


- **Risk of suffocation!** Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

Stereo mode


Dual Mode: The left and right earbuds (F) are as a whole item.

 1. Power on and pairing

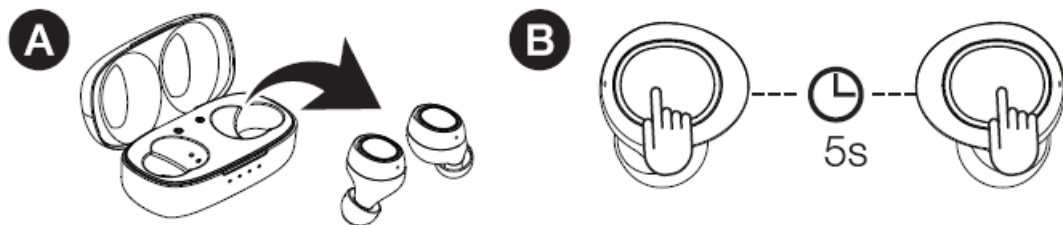


Take the earbuds (F) out of the case (A) at the same time or press the MF switch (0) on both earbuds (F) up to 5 seconds to turn them on manually, and wait for 5 seconds. The right earbud will blink red and blue alternately which indicates both earbuds (F) have paired automatically.

 2. Connected

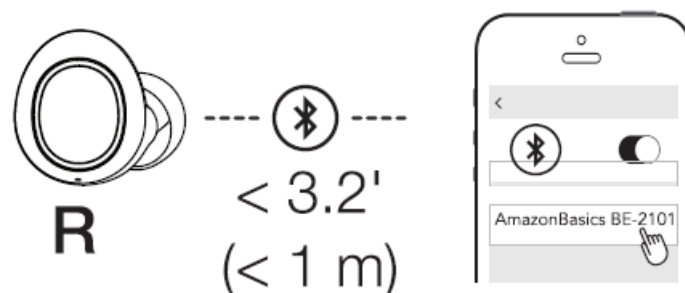

Search and select “AmazonBasics BE-2101 ” from the list on your device to finish setting with a voice prompt from the right earbud, both earbuds (F) will blink blue every 5 seconds once the device is connected successfully.

 3. Power off

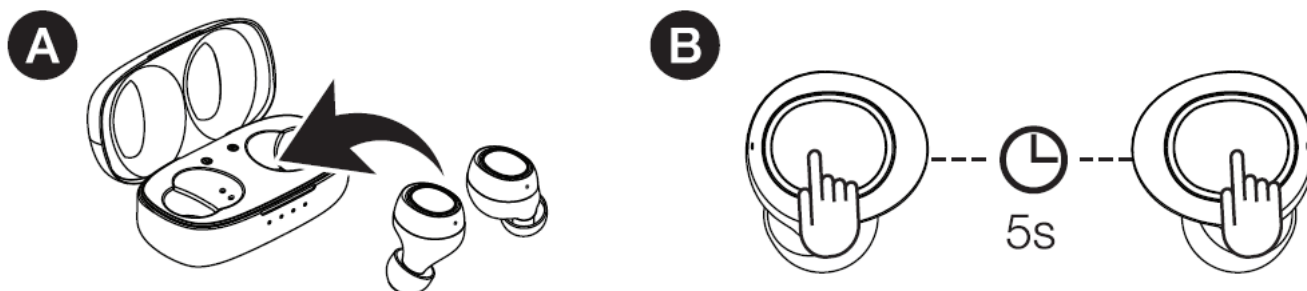

Return to the case (A) or press the MF switch(I) on either one of the earbuds (F) up to 5 seconds to turn off the earbuds (F).

 
Mono mode

Single Mode: The left or right earbud is as a separate item.

NOTICE: Make sure that the right earbud keeps off throughout the whole process.


1. Power on pairing

Take the left earbud out of the case (A), and wait for 5 seconds. The left earbud will blink red and blue alternately once it enters pairing mode.

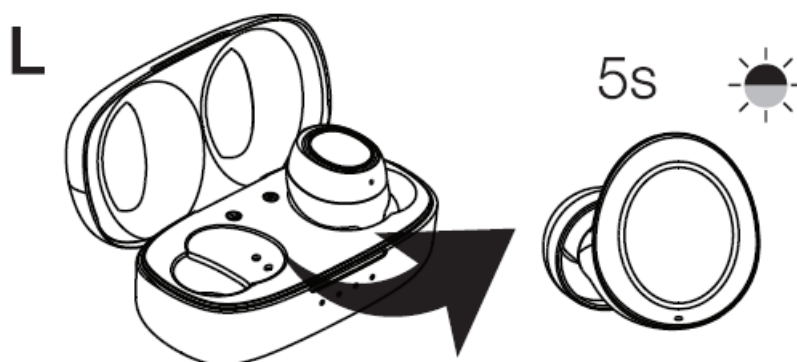


2. Connected

 Search and select “Amazon Basics BE-2101 L” from the list on your device to finish settings with a voice prompt from the left earbud, and the left earbud will blink blue every 5 seconds once the device is connected successfully.

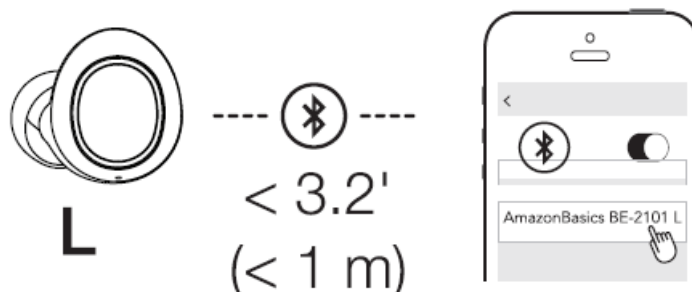

 3. Power off

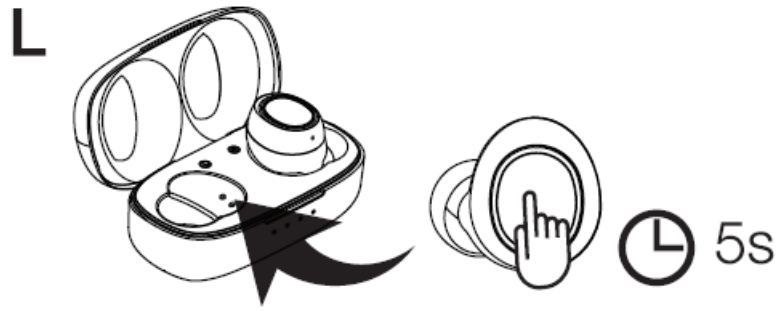

Put the left earbud back into the case (A) or press the MF switch (I) up to 5 seconds to turn it off.

Notice: The above steps are also applicable to the right earbud.

Switching from Mono to Stereo pairing

NOTICE: This function only works if each earbud had been individually paired with the device before.

- While the L or R earbud is connected, take out the other earbud from the case (A).
- Wait for a beep tone from the previously not connected piece. This confirms that the other earbud is also added into the Bluetooth™ connection.

🎵 Playback control

L/R



x1

Play / Pause



📞 Calling

L/R



x1

Answer / End call

L/R



⌚ 2s

Reject call

Activate voice assistant

NOTICE

This function is supported only on certain devices.

 
L/R



x2

Activate Siri / Google assistant

Charging the earbuds (F)

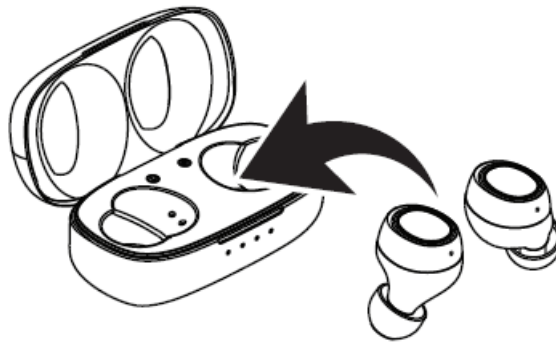

The earbuds (F) starts charging automatically when returned to the case (A).

Earbud status indicator:


- Steady red: Charging
- Off: Fully charged

Charging the case (A)

Use 5V-1A adapter (not included) to charge the case (A). The white LED indicators are blinking while charging. All of them will keep on when fully charged.

	0 – 25%		75 – 99%
	25 – 50%		100%
	50 – 75%		

 
Battery Indicators

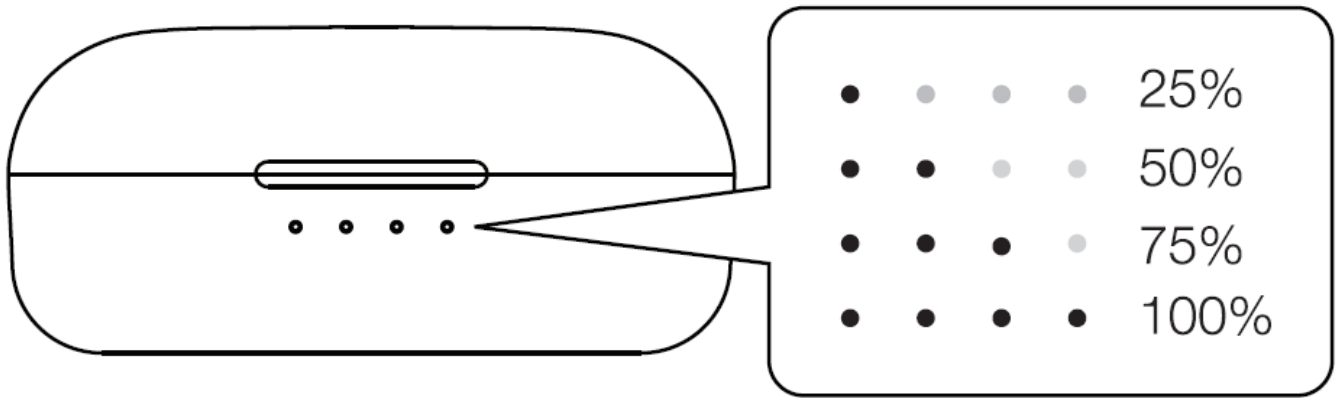

Put the earbuds (F) back into the case (A) to trigger the battery level status. The four LED indicators correspond to different battery levels.

Reset

 1. Clear the device's Bluetooth list, press and hold the MF switch (I) of both earbuds for 5 seconds at the same time to switch off the earbuds (F) until both earbuds (F) blink red 3 times
2. Press and hold the MF switch (I) of both earbuds (F) at the same time until it blinks purple, the earbuds reboot.

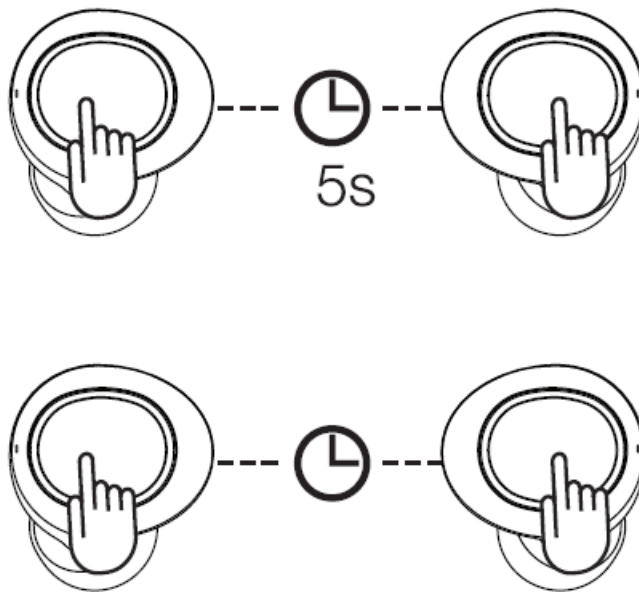

Notice: If you cannot search the paired name "Amazon Basics BE-2101" from the device's Bluetooth list, please put both earbuds (F) back into the case (A), make sure both earbuds (F) show the red LED, take them out of the case (A) at the same time, wait for 5 seconds until the right earbud blinks red and blue alternately. This is the key step to search the device. Reset the earbuds (F) if the device still cannot be found.

Cleaning and Maintenance

During cleaning do not immerse the electrical parts of the product in water or other liquids,

Cleaning

- To clean, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Storage

- Store in a cool and dry place away from children and pets, ideally in the case (A).

FCC Compliance Statement

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B signal device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID:HBOBE2101R

IC: 10550A-BE2101R

FCC ID: HBOBE2101L

IC: 10550A-BE2101I

Canada IC Notice

- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 - (1) this device may not cause interference, and
 - (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- This Class B digital apparatus complies with Canadian CAN ICES- 3(B) I NMB-3(B) standard.

Simplified EU Declaration of Conformity

- Hereby, Amazon EU Sari declares that the radio equipment type BOIT3VJKF4, B07T3VHSQ5 is in compliance with Directive 2014/53/EU.
- The full text of the EU declaration of conformity is available at the following internet address:

https://www.amazon.co.uk/amazon_private_brand_EU_compliance

Disposal

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimise the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

Warranty Information

To obtain a copy of the warranty for this product:

US: [amazon.com/AmazonBasics/Warranty](https://www.amazon.com/AmazonBasics/Warranty)



UK: [amazon.co.uk/basics-warranty](https://www.amazon.co.uk/basics-warranty)

US: +1-688-216-1072

UK: +44 (0) 800-279-7234



Documents / Resources

[amazonbasics Ultra-Light True Wireless Bluetooth Earbuds](#) [pdf] User Guide
 Ultra-Light True Wireless Bluetooth Earbuds, Earbuds