




amla Multicooker Multi Function Portable E Pan Instruction Manual

[Home](#) » [amla](#) » amla Multicooker Multi Function Portable E Pan Instruction Manual 

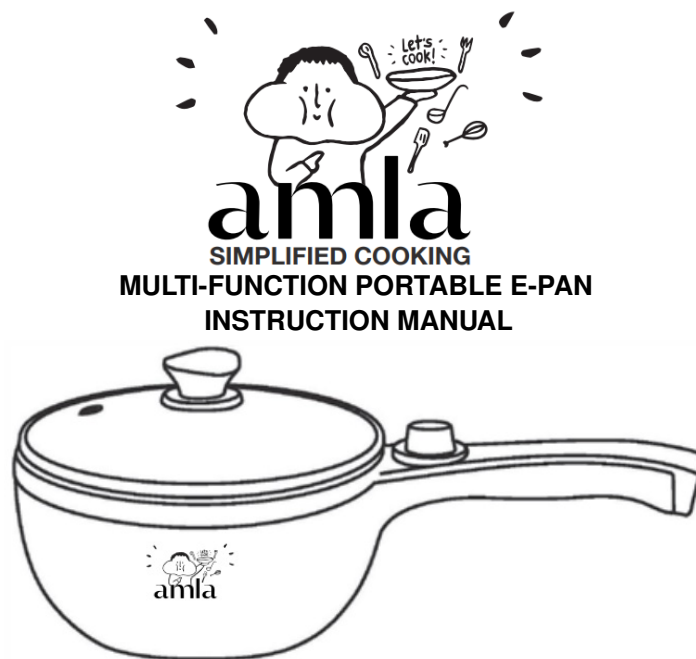


Contents

- [1 SAFETY PRECAUTIONS](#)
- [2 INSTRUCTION](#)
- [3 MAINTENANCE AND CLEANING](#)
- [4 LIMITED WARRANTY](#)
- [5 IMPORTANT NOTICE](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

SAFETY PRECAUTIONS

In order to better understand and use this product, please read the instructions carefully before use and follow the instruction.

1. The power cord plug must be plugged in the appropriate position.
2. It is strictly forbidden to immerse the appliance in any liquid to clean.
3. User should watch over the product when it works. Do not leave it unattended to avoid accidents.
4. Do not allow children to approach or touch the product while working to avoid burns.
5. When used, the product should be placed on a stable platform and placed out of reach of other electric appliances.
6. Please do not exceed the maximum water level when adding water, so as not to overflow after boiling liquid in the pot. Also, do not lower than the minimum water level to prevent the product from damage due to dry burning of the hot plate. The glass lid must be covered when boiling.
7. In order to clean the pot, please add the moderate amount of water and pour it out after boiling when you use the product for the first time. Do not hang the power cord on the table or in contact with hot objects.
8. This container is prohibited from being soaked in water to avoid short circuit of the internal circuit.
9. Before use, check whether the rated voltage on the product nameplate is the same as the voltage you use.
10. If the power cord is damaged, it must be replaced with a dedicated cable or a dedicated component purchased from its manufacturer or maintenance department.
11. This product is prohibited to be used unattended, and the power cord must be unplugged when it not in use.
12. When cleaning or moving the product, please must ensure the power is disconnected.
13. Don't reverse the product for cleaning.
14. When the product is damaged, in order to avoid danger, it must be manufactured by the manufacturer, its authorized maintenance department or a professional, and it is forbidden to disassemble it.
15. The use of appliances by unattended infants and disabled persons is prohibited.

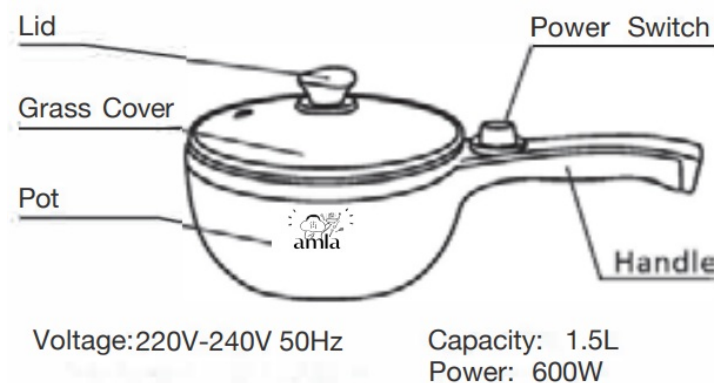

INSTRUCTION

A. Boil Water

1. Open the lid and add suitable clean water, otherwise the water will spill over and hurt people after boiling. Then close the lid.
2. Plug the power cord into the power socket and press the key switch to "600W" position. The indicator light will be on and the machine will start working.
3. The water would boil after about 10 minutes (the time is different from the different amount of the water), then turn off the switch button and unplug the power.

B. Hot Pot

1. Open the lid and add suitable clean water, otherwise the water will spill over and hurt people after boiling. Then close the lid.
2. Plug the power cord into the power socket and press the key switch to “600W” position. The indicator light will be on and the machine will start working.
3. After about 10 minutes (the time is different from the different amount of the water), the water in the pot begins to boil and put the food, ingredient, etc. into the inner pot. At this time, use a chopstick or a spoon to lower the temperature. You could control the power as you want and when you don't want to heat up, you can turn off the switch button and unplug the power.

C. Cooking Noodles

1. Open the lid and add suitable clean water, otherwise the water will spill over and hurt people after boiling. Then close the lid.
2. Plug the power cord into the power socket and press the key switch to “600W” position. The indicator light will be on and the machine will start working.
3. After about 10 minutes (the time is different from the different amount of the water), the water in the pot begins to boil, put the noodles into the inner pot and do not cover with the glass lid. When the water boils again, add the seasoning and stir the noodles.

D. Sauté

1. Plug the power cord into the power socket and press the key switch to “600W” position. The indicator light will be on and the machine will start working.
2. When the bottom of the pot is dried, heat the oil until it reaches a certain temperature, then add the food (eggs, chicken wings, meat, and other delicious food) to fry. Add the sauce seasoning and the appropriate amount of water with covering the glass cover. Waiting for it finish and you can enjoy the food.
3. You could control the power as you want and when you don't want to heat up, you can turn off the switch button and unplug the power.

(Notice: The maximum temperature of sauté and heating is 200 C. If the temperature is too high, the power will be cut off automatically.

When the temperature is lowered, the product will be automatically reset for heating. It is safe for you.)

MAINTENANCE AND CLEANING

1. After using, please unplug the power plug from the power outlet in time.
When the pot cool to room temperature, wipe and clean with a wet towel, then put it in a ventilated and dry place to avoid moisture.
2. Do not immerse the pot in water for cleaning, which will damage the internal electrical components of the product. The glass cover can be rinsed in water.
3. Do not use the steel wire balls and other hard objects to wash the product that is easy to damage non-stick coating. If the non-stick coating is scratched accidentally in the pot, or the non-stick coating wears away naturally after a long time of use, these will not affect the normal use of the product but will increase the

difficulty of product washing.

4. If the pot is getting oily, you can pour a little detergent into the pot, and wipe repeatedly with a wet towel and place it in a safe and ventilated place after cleaning.
5. The product is sprayed with a non-stick coating, will not have scale deposition even after long term use, which saves the trouble of removing scale

LIMITED WARRANTY

This Limited Warranty is effective for 90 days from the date of original consumer purchase. Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and will void this Limited Warranty. This Limited Warranty does not apply in respect of any appliance or any part thereof that has been altered or modified from its factory settings unless such alterations or modifications were expressly authorized

by Amla representative.

The guarantee is subject to the following terms:

1. We must be notified of the fault.
2. Proof of purchase must be presented.
3. All replacement parts will be new or reconditioned.

The guarantee is VOID in the following terms:

1. The warranty does not include damage to the product resulting from accident, alteration issue, abuse, neglect, unreasonable use, use contrary to the operating instructions normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God or repair by anyone unless directed by our company personnel.
2. Incidental or consequential damage caused by possible defects with this product.
3. We shall not be liable for incidental or consequential damages arising out of or in connection with the use or performance of the appliance or damages with respect to any economic loss, personal injury, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature.
4. Use of unauthorized parts and accessories, or repairs to parts and system resulting from unauthorized repairs or modifications made to this appliance.
Salamis not responsible for shipping costs related to warranty service, save and except for shipping costs associated with the return of your appliance.

The cost of repair or replacement under these excluded circumstances shall be borne by you.


If the product should become defective within the warranty period and subject to the warranty terms or you have any questions regarding warranty or service, please feel free to contact our customer service

IMPORTANT NOTICE

1. We ensure that the product packaging is in good condition before shipping. However, due to the long distance, there might have many uncontrollable factors during the carrying, inbound shipping, warehousing, and distribution etc. If you find that the packaging or the product is damaged once received, please reach out to our customer service and we will take all the responsibility and provide you a satisfied solution.

If for any other reasons, you are unhappy with the item, reach out to and we will do whatever it takes to take care of you.

Documents / Resources

	<p>amla Multicooker Multi Function Portable E Pan [pdf] Instruction Manual</p> <p>Multicooker Multi Function Portable E Pan, Multicooker, Multi Function Portable E Pan, Function Portable E Pan, Portable E Pan, E Pan, Pan</p>
---	--

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.