

ANANDA Speed Sensor Instruction Manual

Home » ANANDA » ANANDA Speed Sensor Instruction Manual



Contents

- 1 ANANDA Speed Sensor Instruction
- **2 INSTALLATION**
- 3 Documents / Resources
- **4 Related Posts**




ANANDA Speed Sensor Instruction




The content of this information is subject to change without notice


1. Check the harness for damage and the connector for loosening or falling.

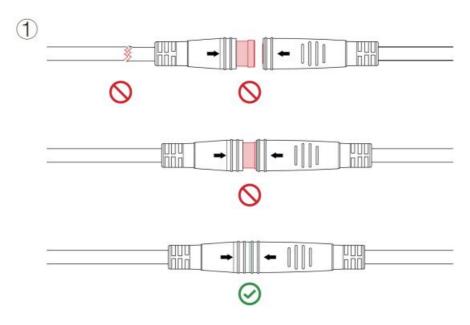


2. Check whether the speed measuring magnet is loose on the spokes.

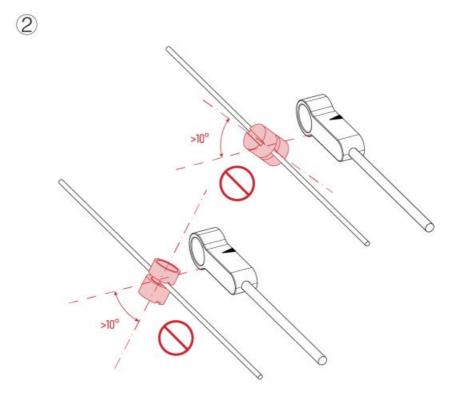


3. Check whether the speed measuring magnet is aligned with the " \triangle " mark of the speed sensor.

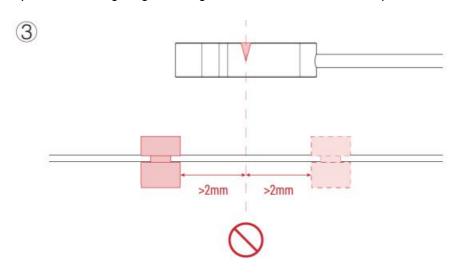

4. Check whether the distance between the speed measuring magnet and speed sensor is 7-23mm.

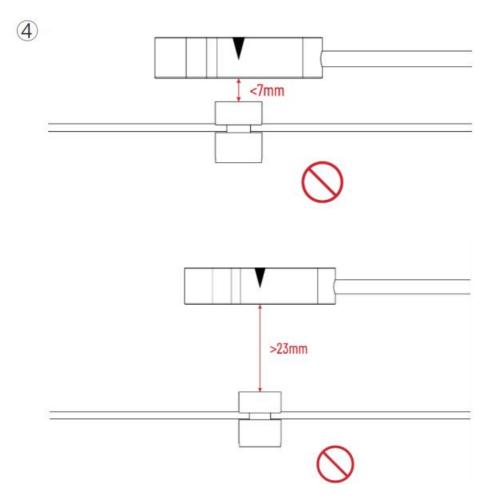

5. Adjust the speed measuring magnet to meet the above inspection requirements.

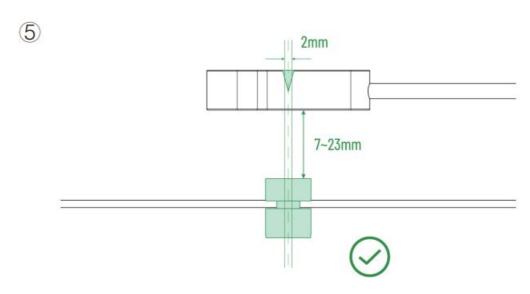

6. If the problem is still not resolved, replace the speed sensor.

Ananda Drive Techniques Co., Ltd.

Documents / Resources

япяпоя	
Help Manual Speed Sensor	ANANDA Speed Sensor [pdf] Instruction Manual Speed Sensor, Sensor
The control of Tribusiness and adjust to change without incline search for Tribusiness and adjust to the control of the contro	
апапоа	
Help Manual Speed Sensor	ANANDA Speed Sensor [pdf] User Manual Speed Sensor, Speed, Sensor
The comment of this information is adjust to charge without notice to exact all which there is in it.	

Manuals+,