



ANCHOR Go Getter Bluetooth Speaker Installation Guide

[Home](#) » [ANCHOR](#) » ANCHOR Go Getter Bluetooth Speaker Installation Guide 

Contents

- [1 ANCHOR Go Getter Bluetooth Speaker](#)
- [2 REQUIREMENTS](#)
- [3 INSTRUCTIONS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



ANCHOR Go Getter Bluetooth Speaker



REQUIREMENTS

- 8,000 or series 2 Go Getter unit with I/O board at revision E (or newer)
- Screw drivers (Phillips #1 and #2)
- 8 mm Nutdriver

INSTRUCTIONS

1. Make sure the unit is powered off and the plug is disconnected.
2. Remove the screws around the back panel.
3. Remove the back panel
4. Remove the battery and speaker harness
If applicable please remove the mic receiver harness
5. Remove the old Bluetooth module.
6. Remove the old harness from the Bluetooth module and use the included harnesses with the new Bluetooth module.
7. Connect the black and white audio cables to BT Audio.
8. Connect the red and black cables to BT only.
9. Reinstall the back panel to the unit and tighten with screws.

Documents / Resources



[ANCHOR Go Getter Bluetooth Speaker](#) [pdf] Installation Guide

Go Getter Bluetooth Speaker, Go Getter, Go Getter Bluetooth, Bluetooth Speaker, Go Getter Speaker, Speaker