



ANDERIC RRLC16.2 Advanced Universal Remote Control User Guide

[Home](#) » [Anderic](#) » ANDERIC RRLC16.2 Advanced Universal Remote Control User Guide 

Contents

- [1 ANDERIC RRLC16.2 Advanced Universal Remote Control](#)
- [2 Installing Batteries and The Wrist Strap](#)
- [3 Programming Codes for Roku TVs](#)
- [4 Learning Instructions](#)
 - [4.1 Delete all Learned Keys](#)
 - [4.2 Reset to Factory Default Status](#)
- [5 Optional Cable Attachment](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

ANDERIC


ANDERIC RRLC16.2 Advanced Universal Remote Control



Installing Batteries and The Wrist Strap

Please see the diagram below:

1. Remove the battery cover.
2. Insert the batteries, as shown in the diagram below, matching polarities.
3. Loop the wrist strap around the screw hole and hold in place while replacing the battery cover.

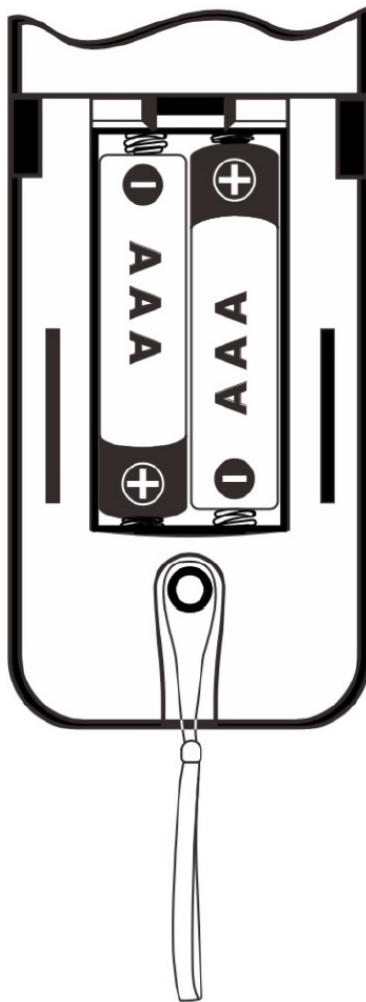













Programming Codes for Roku TVs


Use the codes below to program to Roku TVs (TVs manufactured by one of the brands below with built-in Roku software).

Steps:

1. Take note of the two keys to press from the “Code” column corresponding with your TV brand from the “Brand” column.
2. Press & hold the two keys for about 5 seconds until the indicator light flashes three times. It is now programmed.

Note: If the first code you use does not work, try the other brands as well, one of them will most likely work.

Brand	Code
Roku Streaming Players Ex. Roku Express, Roku Ultra, Roku Premier (Not compatible with Roku Sticks)	 & 
Insignia (without Game key)	 & 
Insignia (with Game Key)	 & 
Haier Hitachi LG Philips RCA Sanyo TCL	 & 
Sharp Hisense	 & 
Sharp (with Game Key)	 & 

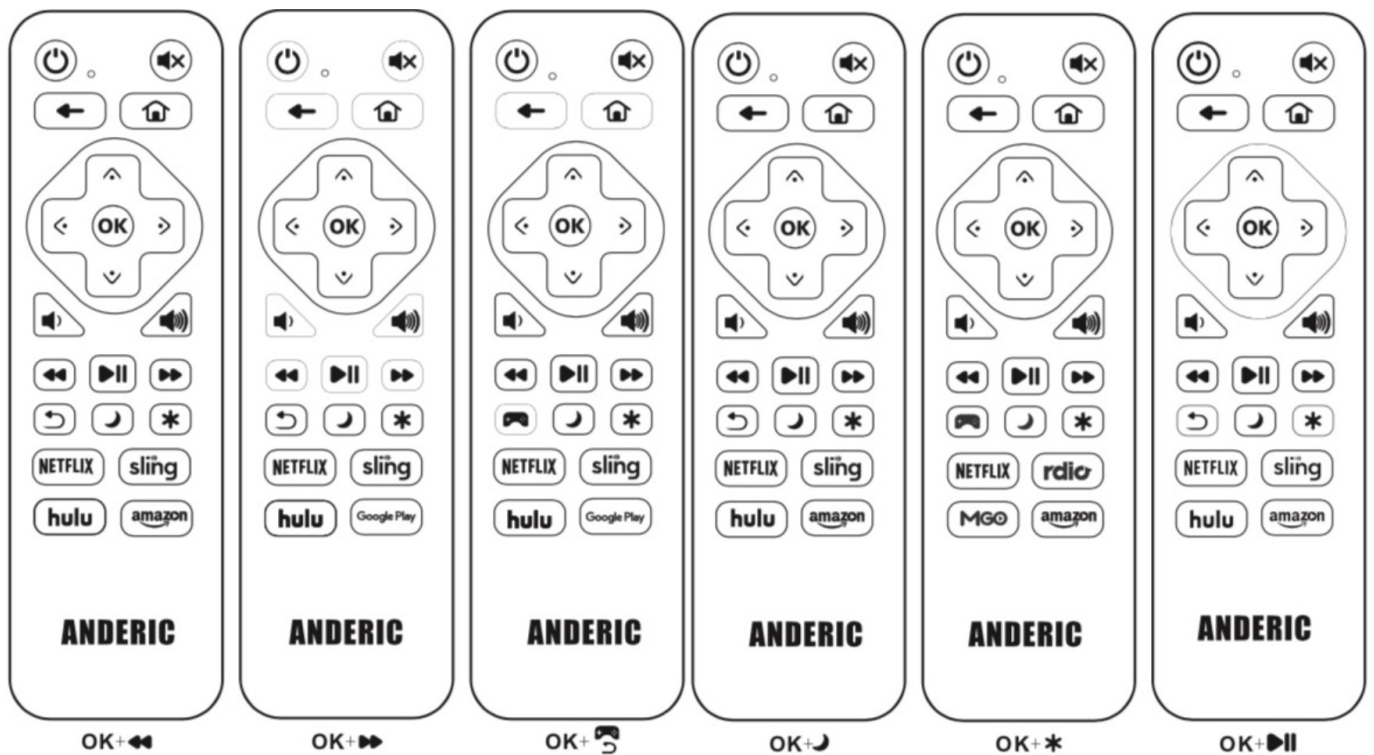

Learning Instructions

Note: All keys on the RRLC16.2 may be learnable. Original remote is needed. This method does not require codes.

1. Press and hold the hulu & OK keys simultaneously for about 5 seconds; indicator light will illuminate brighter and remain bright. Release the keys.
2. Point the original remote control head-to-head with the RRLC16.2, aligning top edges at about 1-2 inches apart (both remotes should be pointing at each other).
3. On the RRLC16.2, Press and release the first key to be learned, the indicator light will now flash slowly.
4. On the original remote, press and hold the key that you want to learn to the corresponding key previously pressed on the RRLC16.2. The indicator light will flash three times to confirm and then remain on, waiting for the next key to learn.
5. Repeat steps 2-4 to learn other keys.
6. Press AMAZON & OK keys simultaneously to save and exit, otherwise remote will exit automatically after 20 seconds.

Example: Learning the POWER key from an original remote to the POWER key of the RRLC16.2.

First, on the RRLC16.2 press hulu and OK hold & keys simultaneously for 5 seconds, release the keys (indicator light will remain on and bright). Press and release the POWER key on the RRLC16.2 (indicator light will now blink). Align both remotes facing each other head-to-head. Press and hold the POWER key on the original remote until the RRLC16.2 indicator light flashes three times and then remains on. Press AMAZON & OK keys to save and exit. The key is now programmed to the RRLC16.2 and should operate your unit. Still having trouble, please visit Anderic.com/RRLC16 for a step-by-step video.

Delete all Learned Keys

1. Press and hold OK & NETFLIX keys simultaneously for 3 seconds; the indicator light will flash three times to confirm. The deletion of all learned keys is now complete.

Reset to Factory Default Status

1. Press and hold OK and sling keys simultaneously for 3 seconds; the indicator will flash three times to confirm.
Reset to factory default is now complete.

Optional Cable Attachment

We offer a security cable (Part number: CBL01) that can be easily attached to the remote. This is great for keeping your remote affixed to any flat surface. This item is sold separately. Go to [Anderic.com/CBL01](https://www.anderic.com/CBL01) to view and purchase the item.


Copyright 2020.

Anderic® is a registered trademark of Dan's Electronics Etc. Inc. Roku® is a registered trademark of Roku Inc. Dan's Electronics Etc., Inc. is not affiliated in any way with Roku Inc. or any of the other mentioned brands. All other brands mentioned are registered trademarks of their respective owners.

For support, go to [Anderic.com](https://www.anderic.com).

ANDERIC

Documents / Resources

	<p>ANDERIC RRLC16.2 Advanced Universal Remote Control [pdf] User Guide RRLC16.2, Advanced Universal Remote Control</p>
---	--

References

- **A** [Anderic Official Site | Home | North Carolina](#)
- **A** [RRLC16.2 Universal Roku Remote Pre-programmed for Sharp Roku TVs | anderic](#)