



## Anderic RRS01 Advance Universal Remote Control User Guide

[Home](#) » [Anderic](#) » Anderic RRS01 Advance Universal Remote Control User Guide 

### Anderic® RRS01.2 Advanced Universal Operating Guide



Thank you for purchasing the Anderic RRS01.2 universal remote control. This remote is programmed to work

with Roku® Media Players and LG®/Vizio® TVs (for the keys: `Power,' `Mute,' `Vol+/-'). This remote can be programmed to work any TV via the learning method. Please refer to the “Learning Instructions” section for instructions, no codes are needed. However, if you have a Roku TV, you can program this remote work via the below table “Programming Codes for Roku TVs.”

**NOTE:** This remote does not work for Roku Sticks  
Downloadable (**PDF**) version of this manual is available at:  
**ANDERIC.COM/RRST01**


## Contents

- [1 Installing batteries and the wrist strap](#)
- [2 Programming Codes for Roku TVs](#)
- [3 Learning Instructions](#)
- [4 Reset to factory default status](#)
- [5 Optional cable attachment](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

## Installing batteries and the wrist strap

Please see the diagram below.

1. Remove the battery cover.
2. Insert the batteries, as shown in the diagram below, matching polarities.
3. Loop the wrist strap around the screw hole and hold in place while replacing the battery cover.

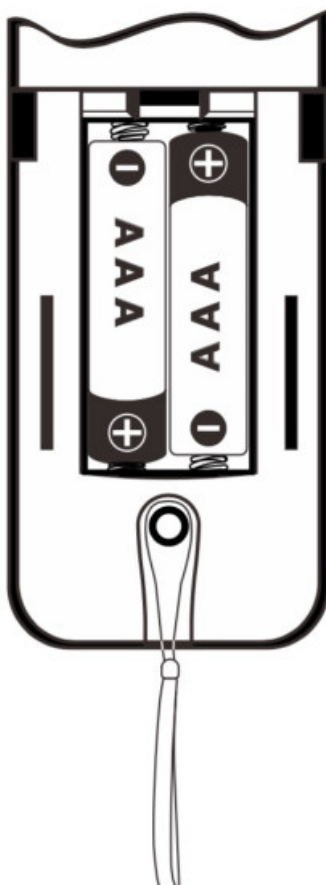













## Programming Codes for Roku TVs


Use the codes below to program to Roku TVs (TVs manufactured by one of the brands below with built-in Roku software).

### Steps:

1. Take note of the two keys to press from the “Code” column corresponding with your TV brand from the “Brand” column.
2. Press & hold the two keys for about 5 seconds until the indicator light flashes three times. It is now programmed.

Note: If the first code you use does not work, try the other brands as well, one of them will most likely work.

Brand	Code
Roku Streaming Players	 & 
Insignia (without Game key)	 & 
Insignia (with Game Key)	 & 
Haier Hitachi LG Philips RCA Sanyo TCL	 & 
Sharp Hisense	 & 
Sharp (with Game Key)	 & 

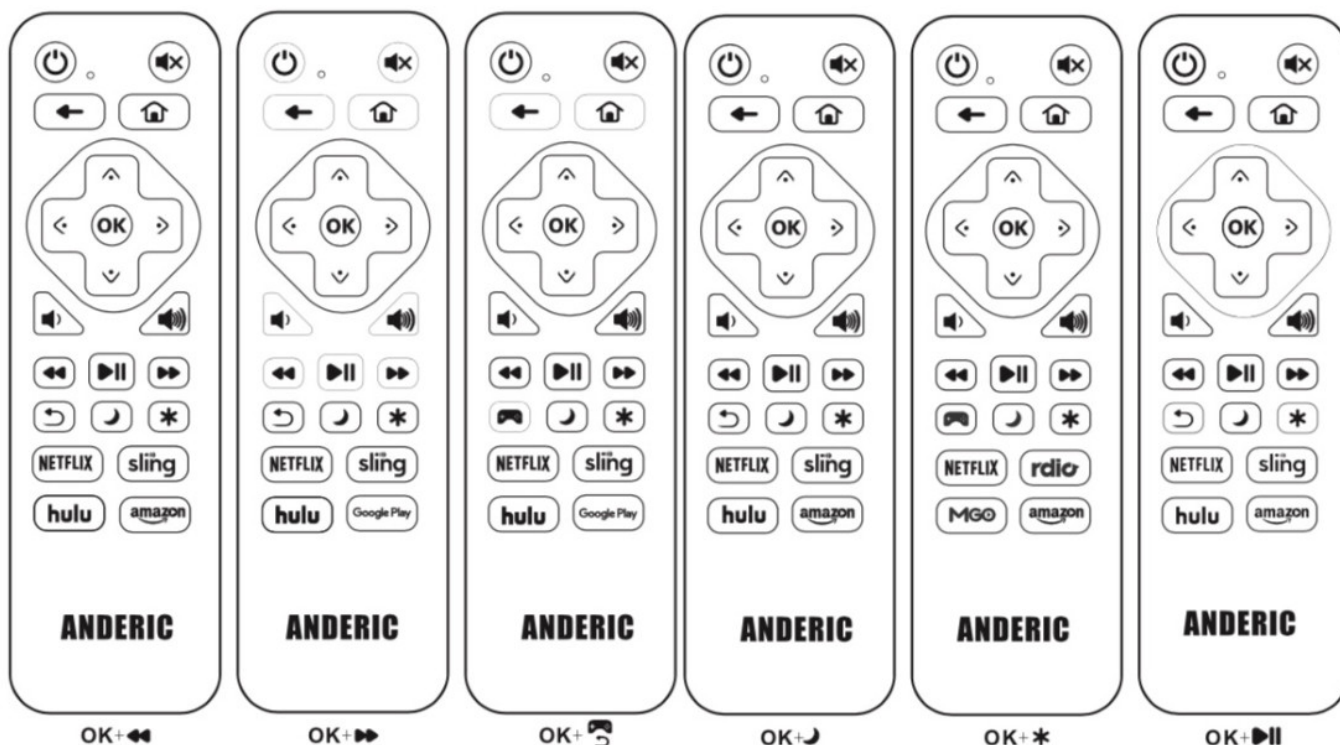

## Learning Instructions

Note: All keys on the RRST01.2 may be learnable. Original remote is needed. This method does not require codes.

1. Press and hold the **hulu** & **OK** keys simultaneously for about 5 seconds; an indicator light will illuminate brighter and remain bright. Release the keys.
2. Point the original remote control head-to-head with the RRST01.2, aligning top edges at about 1-2 inches apart (both remotes should be pointing at each other).
3. On the RRST01.2, Press and release the first key to be learned, the indicator light will now flash slowly.
4. On the original remote, press and hold the key that you want to learn to the corresponding key previously pressed on the RRST01.2. The indicator light will flash three times to confirm and then remain on, waiting for the next key to learn.
5. Repeat steps 2-4 to learn other keys.
6. Press **amazon Google Play** & **OK** keys simultaneously to save and exit, otherwise the remote will exit automatically after 20 seconds.

**Example:** Learning the POWER key from an original remote to the **POWER** key of the RRST01.2.



First, on the RRST01.2 press and hold **hulu** & **OK** keys simultaneously for 5 seconds, release the keys (indicator light will remain on and bright). Press and release the **POWER** key on the RRST01.2 (indicator light will now blink). Align both remotes facing each other head-to-head. Press and hold the **POWER** key on the

original remote until the RRST01.2 indicator light flashes three times and then remains on. Press **amazon Google Play** & **OK** keys to save and exit. The key is now programmed to the RRST01.2 and should operate your unit. Still having



trouble, please

[visitAnderic.com/RRST01](https://www.anderic.com/RRST01) for a step-by-step video.

### Delete all learned keys

1. Press and hold  &  & keys simultaneously for 3 seconds; the indicator light will flash three times to confirm. The deletion of all learned keys is now complete.

### Reset to factory default status


1. Press and hold  &  & keys simultaneously for 3 seconds; the indicator will flash three times to confirm. Reset to factory default is now complete.

### Optional cable attachment

We offer a security cable (Part number: CBL01) that can be easily attached to the remote. This is great for keeping your remote affixed to any flat surface. This item is sold separately. Go to [Anderic.com/CBL01](https://www.anderic.com/CBL01) to view and purchase the item.

Copyright 2020. Anderic® is a registered trademark of Dan's Electronics Etc. Inc. Roku® is a registered trademark of Roku Inc. Dan's Electronics Etc., Inc. is not affiliated in any way with Roku Inc. or any of the other mentioned brands. All other brands mentioned are registered trademarks of their respective owners. For support, go to [Anderic.com](https://www.anderic.com).

### Documents / Resources

	<p><a href="#">Anderic RRST01 Advance Universal Remote Control</a> [pdf] User Guide RRST01, Advance Universal Remote Control</p>
---	--

### References

- [A Anderic Official Site | Home | North Carolina](#)
- [A RRST01 Advanced Universal for Roku® Streaming Players | anderic](#)