





YR108T Android Tablet Instruction Manual

Home » Android » YR108T Android Tablet Instruction Manual

Contents

- 1 YR108T Android Tablet
- 2 FAQ
- 3 Preface
- **4 Product Features**
- 5 Introduction of accessories
- 6 Differences between multiple interfaces
- 7 Shutdown key
- 8 Introduction of main interface
- 9 Functions of icons in the menu
- 10 Introduction of basic selection functions
- 11 Common problems and Solutions
- **12 FCC STATEMENT**
- 13 Documents / Resources
 - 13.1 References



YR108T Android Tablet



FAQ

- Q: Can I use a different power adapter with the tablet?
 - **A:** It is recommended to use the original power adapter provided with the tablet to ensure compatibility and safe operation.
- Q: How do I backup data on the tablet?
 - A: As a mobile storage product, it is advisable to regularly backup your data to prevent any loss. You can
 use external storage devices or cloud services for data backup.

Preface

Before starting the machine, please read this manual carefully to understand the usage and precautions of this machine.

Attention

- The contents covered in the manual are based on the latest information of the machine at the time of compiling the manual. In case of any change to the product contents and parameters, the current product shall prevail without further notice.
- Please use the original power adapter and related accessories.
- Please unplug the power cord when the machine is not used for a long time in thunderstorm weather.
- Do not disassemble the product by yourself. Do not use alcohol, diluent or benzine to scrub the surface of the product.
- The company shall not be responsible for the loss of memory or damage caused by other reasons.
- Please do not put the product in the place where sunlight can directly shine, high temperature, humidity or dust;

- Please avoid falling or strong collision with the product. Do not let the display screen suffer violent vibration and impact, otherwise the display screen may be damaged or abnormal.
- As a mobile storage product, the company strongly recommends that you make data backup in the process of
 use. For data loss caused by any reason in use, the company does not assume any responsibility for the
 data. The company only undertakes limited warranty liability for the hardware itself.
- Please do not disconnect suddenly when the machine is formatting or uploading or downloading data, otherwise the equipment may be damaged.

Product Features


- 1G+8G A64 CPU 2G+16 RK3288/RK3566 4G+16G RK3399
- Android 6.0/7.1/8.1/9.0/10.0/11.0
- Front camera 2.0M (optional)
- Built-in microphone and speaker
- Bluetooth
- · Wi-Fi wireless network
- RJ45 network port (POE optional)
- · capacitive touch screen
- USB*2, supporting external USB port, mouse and keyboard.
- The full format video plays mpeg1, mpeg2, mpeg4, rmvb, mkv, H.264, vc1, etc.
- Image browsing, support BMP, GIF, PNG JPGE formats
- Online video, YouTube, facbook
- Google Chrome browser supports tag broweser, Google search, etc.

Introduction of accessories

Check whether there are the following items in the product packaging box.



android tablet

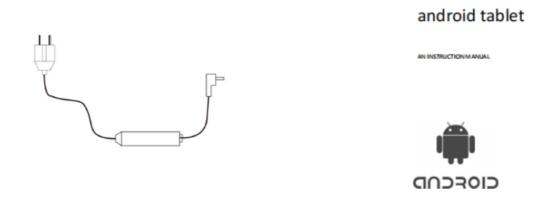


Power adapter manual

Instructions

- 1. host
- 2. Power adapter
- 3. Instruction manual
- 4. Desktop stand


Differences between multiple interfaces

General interface 1:

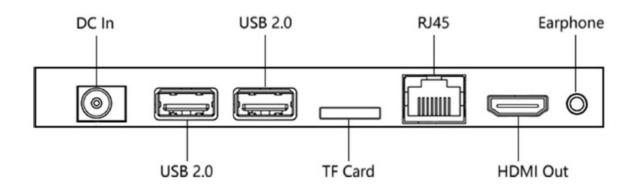

• USB port next to the power port is OTG port (it can be used as an upgrade brush machine!)

General interface 2:

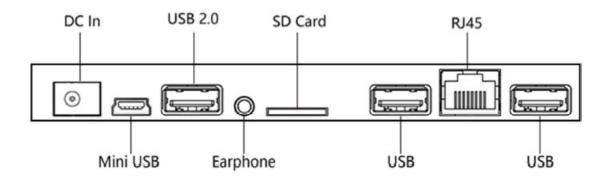

* Mini USB is OTG port (can be used as an upgrade brush machine!)

Shutdown key




Plug in the power supply to automatically enter the boot interface; Press the power button for 3 -5 seconds for shutdown duration, and the shutdown dialog box will appear. Click shutdown.

Introduction of main interface

1. The boot interface is as follows:



2. The upper right corner of the main interface:

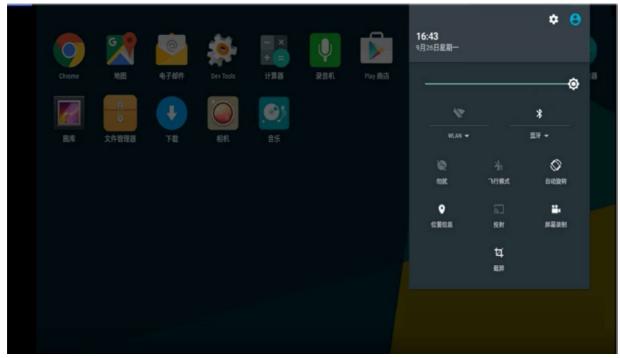

- Drag and slide down from the top of the display to view the brightness, settings, WIFI, rotating screen, flight mode, Bluetooth and information location.
- 3. The main interface software is as follows:



- 4. Create a shortcut icon in the main interface:
 - Press and hold the required icon in the menu to move to the main interface to generate shortcut icons.

Functions of icons in the menu

- Map: You need to connect to the network and click on the map to enter. You can search the address or route.
- Email: When you are connected to the network, enter your email address and password to log in.
- Calculator: It is convenient for calculation.
- **Browser:** When you are connected to the network, you can search for the content that needs to be queried by entering the URL.
- Recorder: You can record sound. Click Finish to browse the recorded audio in the music.
- Calendar: Check the date and add a memo.
- Settings: detailed in the next section.
- Clock: check the time and set the alarm clock, stopwatch and countdown timer.
- Video player: Play local videos and recorded videos.
- Search: used for network search.
- Gallery: You can view photos, videos, local videos and slide shows.
- **Download:** You can view the downloaded content.
- Camera: Take pictures and record videos.
- Music: You can play local music and recorded sound.
- Voice search is used for network search.
- The file manager can view the contents of local storage, SD card and U disk.
- Gmail: you can log in to google mailbox.
- Chrome: Google can be used for web surfing (login is required in China)
- Play store: downloadable games and software.

Introduction of basic selection functions


Click the WIFI option, turn on WIFI to select the router, and enter the correct password to connect.


· Bluetooth:

• Enter the setting interface and click the Bluetooth option; turn on Bluetooth and click the upper right corner to search for devices; at the same time, turn on the Bluetooth of the devices to be connected to search; Click the searched device name, and a Bluetooth pairing request appears. This machine and the device can be connected by clicking pairing at the same time.

• Multi-window:

• Click to open, select the window to be kept, and click " (when you can move windows at most at the same time, such as "Figure 2". When you close the window, when the interface is gray, drag the window with one finger and slide to the edge of the screen to close it.

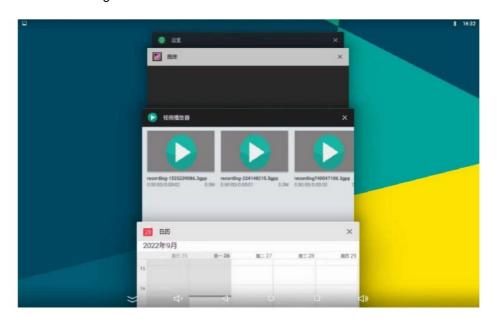

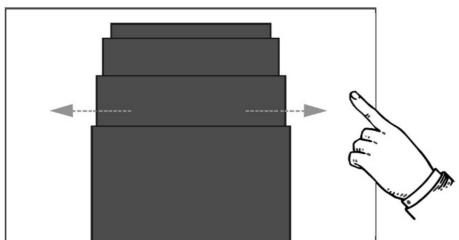

More:

It includes flight mode, network sharing and portable hot setting, VPN (setting up a private network on a
public network for encrypted communication), Ethernet (check when using wired connection) and mobile
network (3G USB Dongle).

Sound:

Set volume and system volume.

· Show:

• Set brightness, wallpaper, screen saver, font size, screen projection

· Screenshot settings:

• Set the screenshot delay, the screenshot storage location, and display the screenshot button on the

status bar (check it).

• Storage:

You can view local storage and remaining space.

• Battery (support to join the battery):

You can view the power usage and remaining power.

Application:

 You can view downloaded, SD card, running and all software (click on the normal running software to stop running or uninstall).

Location information:

For positioning

· Safety:

Set screen unlock password, location source (check when installing software for the first time)

· Language and input method:

Set system language, default keyboard and input method

· Backup and reset:

Backup data, restore factory settings

· Add account:

Set up email login account

• Date and time:

Can be used to modify the date and time

• Auxiliary functions:

 Potential amplification (need to check, click the screen three times in a row), and show the hidden status bar button on the status bar (need to check)

• Print:

Cloud printing function

• Developer options:

 USB debugging (need to be checked; when connecting the data cable, the connection prompt will appear in the upper left corner)

About tablets:

You can view the equipment model, system version number and status information

Common problems and Solutions

Common abnormal problems	Solutions
No power on phenomenon	Maybe the battery is dead. Connect the charger for 10 minutes a nd then turn it on
When charging, the touch screen does not r espond or automatically jumps to other interf aces	It may cause poor touch when connecting the charger not configured by our factory. Please use the charger configured at the fact ory, because the charger is qualified after professional debugging
After WiFi is turned on, the router cannot be connected	The WiFi password may be input incorrectly, please input the pas sword correctly
USB connection doesn't work	First, check whether the cable between the computer and the computer is connected, Then click the upper left corner of the screen, drag and slide, and click "USB connection" to check whether it is connected
After the abnormal operation, the system will crash and jam	Restart the machine to restore normal operation (this operation may cause the loss of unsaved data, please use with caution)

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. The device for operation in the band 5150–5250MHz is only for indoor use.

Documents / Resources

android tablet

anDROID YR108T Android Tablet [pdf] Instruction Manual
2BG9S-YR108T, 2BG9SYR108T, yr108t, YR108T Android Tablet, YR108T, Android Tablet, Tablet

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.