



ANESOK A6 Retro Record Player User Manual

[Home](#) » [ANESOK](#) » ANESOK A6 Retro Record Player User Manual 

ANESOK A6 Retro Record Player User Manual




Contents


- 1 BEFORE USE
- 2 TURNTABLE PARTS
- 3 FUNCTION DESCRIPTION
- 4 FUNCTION OVERVIEW
- 5 BLUETOOTH MODE:
- 6 PHONO MODE:
- 7 AUX IN MODE:
- 8 AMPLIFIER CONNECTION (IF REQUIRED)
- 9 HOW TO REPLACE THE NEEDLE
- 10 CONTACT INFORMATION:
- 11 Documents / Resources
- 12 Related Posts

BEFORE USE

1. Select a secure location and avoid placing the device in direct sunlight or near heat sources.
2. Avoid areas prone to vibrations, excessive dust, cold temperatures, or moisture.
3. Please refrain from opening or removing the black cover of the product itself and the turntable platter, as it may result in electric shock. If any foreign object is accidentally inserted, please contact our dealer for assistance.
4. Refrain from using chemical solvents to clean the unit, as they may damage the finish. It is recommended to use a clean, dry cloth for cleaning purposes.
5. Please keep this manual for future reference.

TURNTABLE PARTS

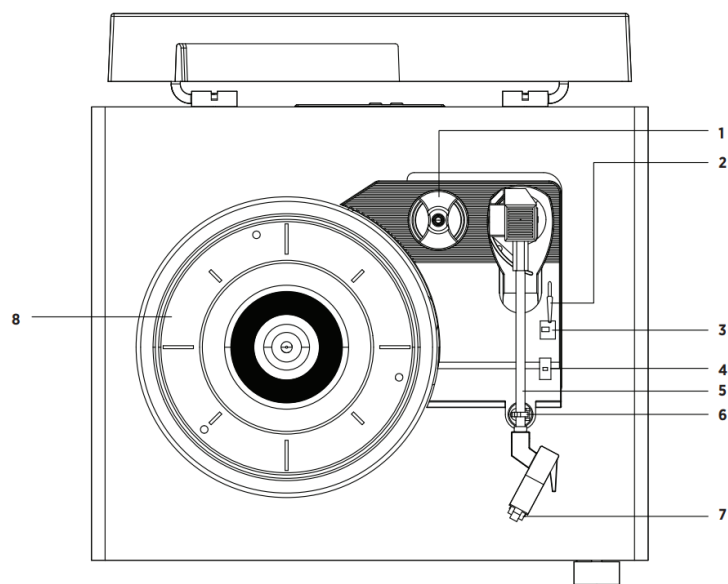

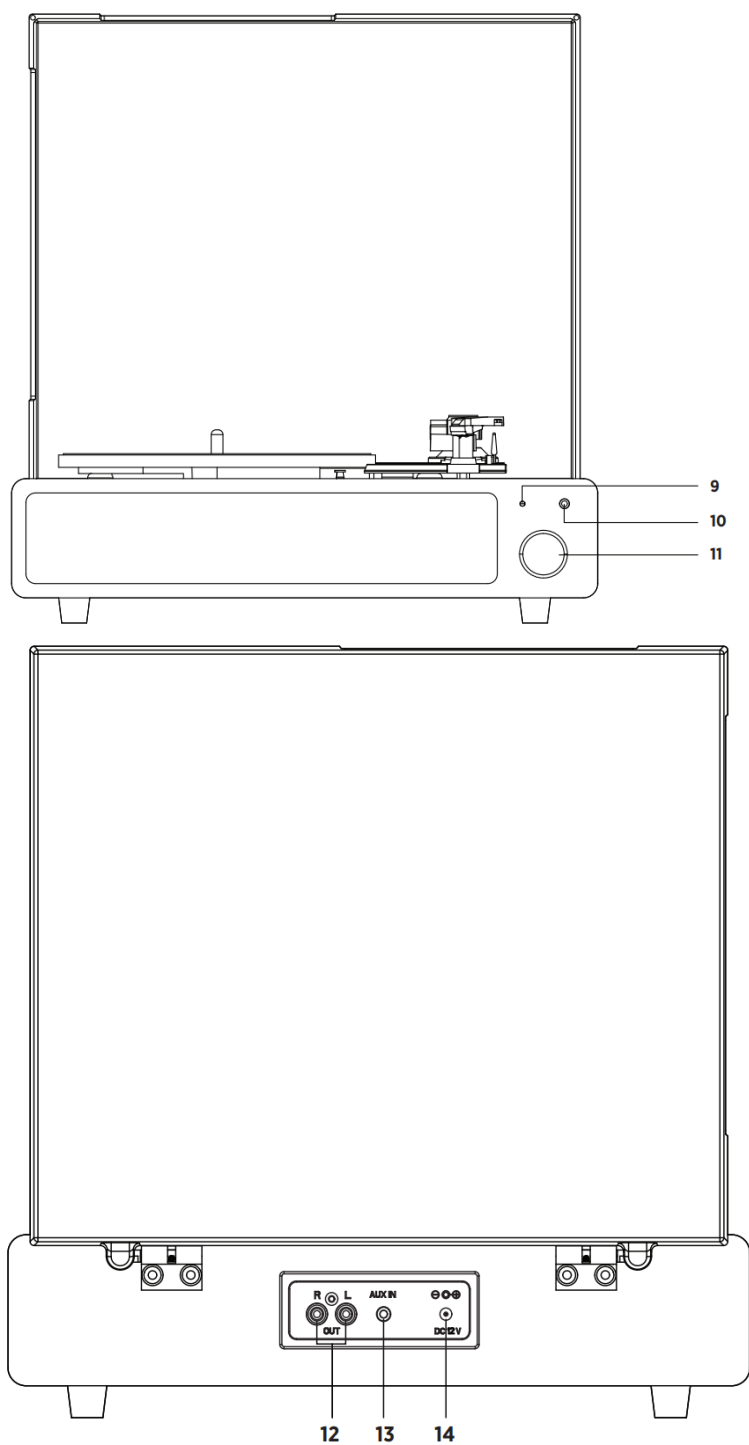

FUNCTION DESCRIPTION

1. 45RPM adaptor
2. Lift lever
3. AUTO-STOP ON/OFF switch
4. Speed switch
5. Tonearm
6. Tonearm lock
7. Cartridge with needle
8. Platter
9. Status indicator
10. 3.5mm headphone jack

11. Power ON/OFF and volume control knob
12. RCA out port—to connect external speaker system with built-in amplifier
13. Line in(AUX-IN) port
14. DC IN jack—to connect the power adaptor

Model	A6	Bluetooth	V 5.1
Input voltage	AC100V~240V50/60HZ	Play mode	LP/Bluetooth/AUX
Power Adapter	DC 5V/1.0A	Rotational speed	33/45/78 RPM
Product Dimensions	32*29*13 cm	Record size	7/10/12
Item Weight	2.16 kg	Power cord length	1 m

FUNCTION OVERVIEW

To ensure a secure connection, firmly insert the DC plug of the adaptor into the DC IN Jack on the unit. Next, insert the AC plugs of the adaptor into a power outlet for a reliable power source.

BLUETOOTH MODE:

1. Turn on the power switch knob. The device will automatically enter Bluetooth mode (ensure that the AUX-IN port is not occupied and the turntable's tonearm is locked in its original position). The status indicator light will turn blue and start flashing.
2. Enable the Bluetooth function on your smartphone or tablet and search for the device named A6. Once paired and connected, the indicator light will stay blue without flashing, indicating that you can play music from your smartphone or tablet through this turntable player. Adjust the volume by turning the VOLUME CONTROL KNOB. The volume control on your phone or tablet will also affect the overall volume. Please make adjustments simultaneously if necessary.

PHONO MODE:

1. Turn on the power switch knob.
2. Place a record on the turntable platter and select the appropriate speed (33/45/78) based on the record. Note: For 45RPM records, use the included 45RPM adapter located in the holder near the tonearm.
3. Remove the white needle protector and release the tonearm by opening the tonearm clip. Push the lift lever backward to raise the tonearm and carefully position it over the desired location on the record. Gently push the lift lever forward to lower the tonearm onto the record, and the device will automatically enter PHONO mode to start playing.
4. If the AUTO STOP ON/OFF Switch is turned ON, the record will stop playing automatically when it reaches the end (Note: Some vinyl records may not stop at the end, or may stop before reaching the end). If Auto Stop Control is turned OFF, the record will NOT stop playing automatically when it finishes.

Note: PHONO mode takes precedence over other modes. To switch to BT or AUX mode, PHONO mode must be stopped first.

AUX IN MODE:

1. Once connected, AUX-IN mode takes precedence. Simply plug in a 3.5mm Audio cable, and the device will automatically enter AUX-IN mode (cable not supplied).
2. You can now enjoy music from various devices such as iPod, MP3 players, mobile phones, and more through the record player.
3. Adjust the volume by turning the VOLUME CONTROL KNOB. Please note that the volume control on your iPod, MP3 player, or mobile phone will also affect the overall volume level. If necessary, please adjust the volume on your device accordingly.

AMPLIFIER CONNECTION (IF REQUIRED)

If you prefer to connect your turntable to your existing Hi-Fi system instead of using the built-in speakers, follow these steps:

Use an RCA cable to connect the audio plugs to the Line input on your mixer or amplifier.

- Insert the red plug into the R/H channel input.
- Insert the white plug into the L/H channel input.

HOW TO REPLACE THE NEEDLE

Follow these instructions to replace the needle on your turntable.

Removing the needle from the cartridge:

1. Place a screwdriver at the tip of the stylus and push downward in direction "A".



2. Pull the stylus forward and push downward to remove it from the cartridge.

Installing the needle :

1. Hold the tip of the stylus and insert it by pressing in direction "B".



2. Push the stylus upward in direction "C" until it locks into the tip position.

NOTES :

Please take note of the following information:

1. To ensure maximum protection, we recommend cleaning your turntable regularly using an anti-static cloth.
2. It is important to replace the needle periodically for optimal performance. We suggest replacing it approximately every 250 playback hours.

TIPS FOR OPTIMIZING TURNTABLE PERFORMANCE

1. When opening or closing the turntable cover, handle it with care, grasping it either at the center or on each side.
2. Avoid touching the needle tip with your fingers and prevent it from colliding with the turntable platter or record edge.
3. Regularly clean the needle tip using a soft brush, moving it in a “back-to-front” motion only.
4. If you need to use a needle cleaning fluid, apply it sparingly.
5. Gently wipe the turntable player housing with a soft cloth. If necessary, use a small amount of mild detergent to clean the turntable player.
6. Never use harsh chemicals or solvents on any part of the turntable system.

IF YOU ENCOUNTER ANY PRODUCT QUALITY ISSUES, PLEASE DON'T HESITATE TO REACH OUT TO OUR AFTER-SALES TEAM USING THE PROVIDED CONTACT INFORMATION. WE ARE COMMITTED TO PROMPTLY ASSISTING YOU IN RESOLVING ANY PROBLEMS YOU MAY HAVE.




CONTACT INFORMATION:

WhatsApp: +861856623607 6

Email: 18566236076@163.com

Skype: [405157891@qq.com](https://www.skype.com/people/405157891@qq.com)

Documents / Resources

	<p>ANESOK A6 Retro Record Player [pdf] User Manual A6, A6 Retro Record Player, Retro Record Player, Record Player, Player</p>
---	---