

angler FB-20K FastBox Octagonal Softbox Instructions

Home » angler » angler FB-20K FastBox Octagonal Softbox Instructions

Contents

- 1 Octagonal Softboxes
 - 1.1 FB-20K FB-24K FB-28K FB-32K
 - 1.1.1 FastBox Series
 - 1.2 INSTRUCTIONS
 - 1.2.1 Thank you for choosing Angler.
 - 1.2.2 Precautions
 - 1.2.3 Overview
 - 1.2.4 Setting Up the FastBox
 - 1.2.4.1 Opening the FastBox
 - 1.2.4.2 Mounting the FastBox on a Light
 - Stand
 - 1.2.4.3 Adjusting the Tilt Angle
 - 1.2.4.4 Collapsing the FastBox
 - 1.2.5 Attaching the Flash Adapter and Flash
 - 1.2.6 One-Year Limited Warranty
- 2 Documents / Resources
 - 2.1 References
- **3 Related Posts**

Octagonal Softboxes

FB-20K FB-24K FB-28K FB-32K

FastBox Series

INSTRUCTIONS





Thank you for choosing Angler.

The FastBox adds speed and flexibility to your lighting setup. Spring loaded tension arms make expanding and collapsing the FastBox a breeze. Simply pull back, lock it in place, and you're ready. Attaching and positioning the FastBox is easy. Mount it onto your light stand with the twist lock, and set the ideal lighting angle with the pistol grip tilt mechanism. When you need to fold the FastBox, slide the latch with a finger, and the FastBox collapses instantly.

A built-in speed ring offers quick flash attachment with adapters (sold separately), so you can use a variety of oncamera flash units such as the Profoto A1, A2, and the Godox V1/AD100 Pro, AD200/200Pro, and AD300Pro, as well as standard on-camera flash heads. To help shape the light, the inside sports a silver lining for maximum reflectivity, and two diffusers help soften the light to reduce hotspots and cast the ideal smooth look in your photos.

Precautions

- Please read and follow the instructions, and keep this manual in a safe place.
- Make sure this product is intact and that there are no missing parts.
- Use caution when expanding and collapsing this product.
- · Clean with only a dry, soft cloth.
- · All images are for illustrative purposes only.

| SPECIFICATIONS | FB-20K | FB-24K | FB-28K | FB-32K |
|----------------------|----------------|----------------|----------------|----------------|
| DIAMETER | 20 IN. | 24 IN. | 28 IN. | 32 IN |
| | (50.8 CM) | (61 CM) | (71.1 CM) | (81.3 CM) |
| COLLAPSED DIMENSIONS | 17.3 × 5.1 IN. | 20.7 × 5.1 IN. | 23.2 × 5.1 IN. | 26.6 × 5.1 IN. |
| | (44 × 13 CM) | (52.5 × 13 CM) | (59 × 13 CM) | (67.6 × 13 CM) |
| WEIGHT | 0.93 LB. | 1 LB. | 1.1 LB. | 1.2 LB |
| | (0.42 kg) | (0.46 Kg) | (0.52 kg) | (0.54 KG) |

Overview



- 1. Touch-fastener strip
- 2. Softbox
- 3. Softbox tab
- 4. Release latch

- 5. Flash adapter alignment dot
- 6. Flash adapter release latch
- 7. Pistol grip
- 8. Twist lock
- 9. Twist-lock socket
- 10. Carrying case

Setting Up the FastBox

Opening the FastBox

Hold the pistol grip with one hand, and pull the softbox tab up to the built-in speed-ring until it clicks in place.

 
Mounting the FastBox on a Light Stand

Fit the twist lock socket onto the spigot of your light stand.

Turn the twist lock counterclockwise until secure.

Adjusting the Tilt Angle

Squeeze and hold the pistol grip to adjust the angle of the FastBox, and release to lock in place.



Slide the release latch to the left to collapse the FastBox.

Attaching the Flash Adapter and Flash

See your Flash Adapter manual for full instructions.

Attach the flash adapter to the FastBox.



Insert your flash into the adapter.



One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state. To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit <u>www.anglerlights.com</u> or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group. www.gradusgroup.com

Angler is a registered trademark of the Gradus Group. © 2023 Gradus Group LLC. All Rights Reserved.



GG4

Documents / Resources



angler FB-20K FastBox Octagonal Softbox [pdf] Instructions

FB-20K FastBox Octagonal Softbox, FB-20K, FastBox Octagonal Softbox, Octagonal Softbox, Softbox

References

- Angler | Lighting Equipment & Accessories
- Gradus | Gradus Group
- User Manual

Manuals+, Privacy Policy