



angler FB-24K FastBox Octagonal Softbox Instructions

Home » angler » angler FB-24K FastBox Octagonal Softbox Instructions

Contents

- 1 angler FB-24K FastBox Octagonal Softbox
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 FΔQ
- **5 INSTRUCTIONS**
- **6 One-Year Limited Warranty**
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**



angler FB-24K FastBox Octagonal Softbox



Product Information

The Godox V1 Mount is a flash adapter designed for use with the FastBox Series. It allows you to attach your flash securely and easily to the adapter, providing enhanced lighting options for your photography needs.

Specifications

Model: F B-GV1

• Brand: Godox

• Compatibility: FastBox Series

• Material: Durable plastic

· Color: Black

• Magnets: Strong neodymium magnets for secure attachment

Product Usage Instructions

Attaching the Flash Adapter and Flash

- 1. Before proceeding, make sure to remove any diffuser already installed on the end of the flash head.
- 2. Line up the alignment dots on the FB-GV1 adapter and the speedring.
- 3. Insert the adapter into the speedring and rotate it clockwise until it clicks in place.
- 4. Align the head of your flash with the magnets on the FB-GV1 flash adapter.
- 5. Seat the flash into the adapter ensuring it is securely attached.

Removing the Flash and Flash Adapter

- 1. Carefully pull your flash out from the adapter's magnets.
- 2. Pull down on the flash adapter release latch.
- 3. Rotate the adapter counterclockwise to remove it from the speedring.

For more detailed information and troubleshooting tips, please refer to the user manual provided at https://manual-hub.com/.

FAQ

Q: Is the Godox V1 Mount compatible with all flash models?

A: The Godox V1 Mount is compatible with most standard flash models. However, it is recommended to check the product specifications or contact the manufacturer for specific compatibility information.

Q: Can I use the FB-GV1 adapter with other lighting modifiers?

A: The FB-GV1 adapter is designed to be used specifically with the FastBox Series. It may not be compatible with other lighting modifiers. Please refer to the product manual or contact the manufacturer for further information.

Q: How do I clean the FB-GV1 flash adapter?


A: To clean the flash adapter, use a soft, lint-free cloth to gently wipe away any dust or dirt. Avoid using harsh chemicals or abrasive materials that may damage the surface of the adapter.

INSTRUCTIONS

Attaching the Flash Adapter and Flash

Important! If your flash has a diffuser already installed on the end of the flash head, remove the diffuser before proceeding with the instructions.

- Line up the alignment dots on the FB-GV1 adapter and the speedring. Insert the adapter, and rotate clockwise until it clicks in place.
- Align the head of your flash with the FB-GV1 flash adapter's magnets. Seat the flash into the adapter so the flash is secure.

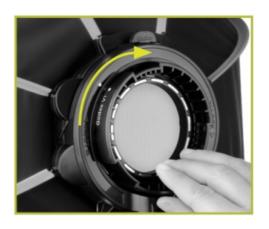



Removing the Flash and Flash Adapter

- Carefully pull your flash out from the adapter's magnets.
- Pull down on the flash adapter release latch, and rotate the adapter counterclockwise to remove.





- This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.
- This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.
- To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.
- For more information or to arrange service, visit www.anglerlights.com or call Customer Service at 212-594-2353.
- Product warranty provided by the Gradus Group. www.gradusgroup.com
- Angler is a registered trademark of the Gradus Group. © 2020 Gradus Group LLC. All Rights Reserved.

anglerlights.com

Documents / Resources



angler FB-24K FastBox Octagonal Softbox [pdf] Instructions

FB-24K FastBox Octagonal Softbox, FB-24K, FastBox Octagonal Softbox, Octagonal Softbox, Softbox

References

A Angler | Lighting Equipment & Accessories

- <u>Manual-Hub.com Free PDF manuals!</u>
- A Angler | Lighting Equipment & Accessories
- Gradus | Gradus Group
- <u>Manual-Hub.com Free PDF manuals!</u>
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.