




Angler FB-SM-V2 On-Camera Flash Mount Instructions

[Home](#) » [angler](#) » Angler FB-SM-V2 On-Camera Flash Mount Instructions 

Angler FB-SM-V2 On-Camera Flash



Contents

- [1 Angler FB-SM-V2 On-Camera Flash Mount Instructions](#)
- [2 Attaching the Flash Adapter and Flash to the FastBox](#)
- [3 Removing the Flash and Adapter](#)
- [4 Using the Adapter with the Pistol Grip](#)
- [5 Using the Adapter with a Tripod](#)
- [6 One-Year Limited Warranty](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Angler FB-SM-V2 On-Camera Flash Mount Instructions


The Angler FB-SM-V2 adapter lets you attach most standard and compact shoe-mount flashes to the Angler FastBox. A built-in 1/4-20 socket allows you to mount your flash directly onto the FB-PG pistol grip or onto a light stand. Attach the adapter to the Angler FB-PG FastBox Pistol Grip to use it as a handheld unit, or to mount it on any stand with a 5/8-inch stud.

Attaching the Flash Adapter and Flash to the FastBox


Line up the alignment dots on the FB-SM-V2 adapter and the speed ring. Insert the adapter, and rotate clockwise until it clicks in place.



Insert your flash into the flash adapter. Press the lock down until the flash is secure.

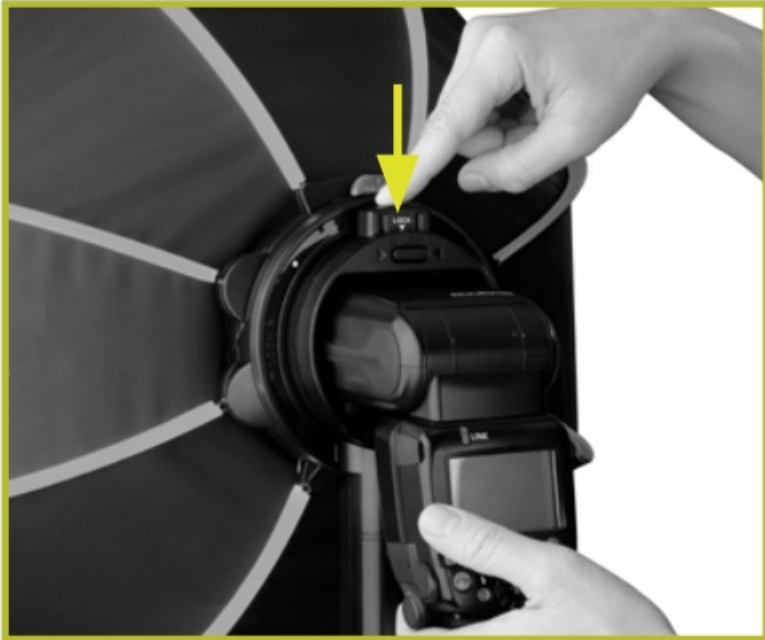

If your flash head is too small, insert the compact flash adapter.

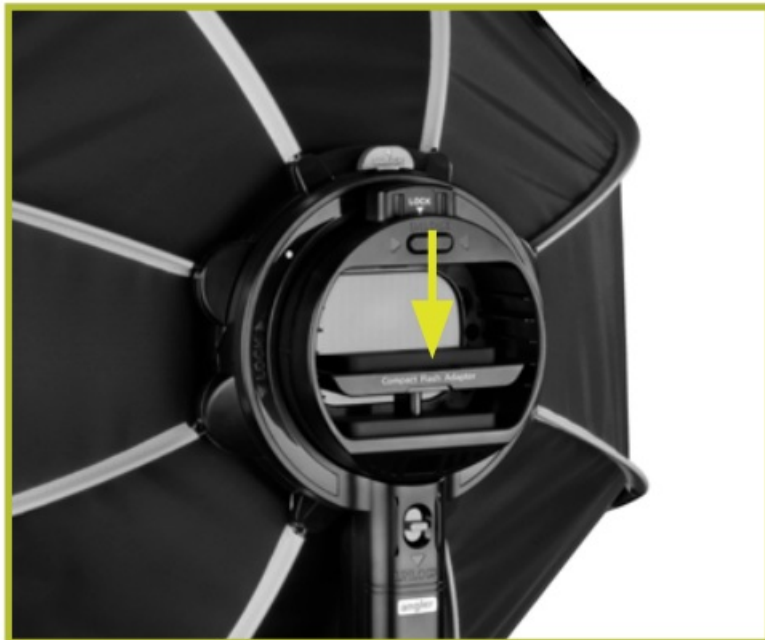

Removing the Flash and Adapter

Press the adapter's Unlock button, and slide your flash out of the adapter.



Pull down on the release latch, and twist the adapter counterclockwise to remove.



Using the Adapter with the Pistol Grip

The FastBox Pistol Grip (FB-PG) is sold separately. It features a 5/8 inch receiver with twist lock for light stand mounting, an umbrella socket, and a cold shoe for attaching additional accessories such as a radio slave

Use the pistol grip as a handheld unit.

Turn the pistol grip's locking wheel until the adapter is securely attached.



Using the Adapter with a Tripod

Attach the adapter and your flash to a tripod or light stand with a 1/4-20 screw for stand-alone use.



One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty(30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization (“RMA”) number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser’s own risk and expense.

For more information or to arrange service, **visit** www.anglerlights.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com Angler is a registered trademark of the Gradus Group. © 2021 Gradus Group LLC. All Rights Reserved.



Documents / Resources

| | |
|--|--|
| <p>Thank you for choosing Angler.</p> <p>The Angler FB-SM-V2 adapter lets you attach most standard and compact shoe-mount flashes to the Angler Flashline. A built-in 1/4-20 threaded sleeve lets you mount your flash directly onto the FB-PC pistol grip or onto a light stand. Attach the adapter to the Angler FB-PC Flashline Pistol Grip to use it as a handheld unit, or to mount it on any stand with a 1/4-20 nut.</p> <p>Attaching the Flash Adapter and Flash to the Flashline</p> <p>Line up the alignment dots on the FB-SM-V2 adapter and the shoe-mount flash. Insert the adapter, and rotate clockwise until it clicks in place.</p> <p>Insert your flash into the flash adapter. Press the lock down until the flash is secure.</p> <p>If your flash head is too small, insert the compact flash adapter.</p> <p>Removing the Flash and Adapter</p> <p>Press the adapter's Unhook button and slide your flash out of the adapter.</p> <p>Pull down on the release latch, and twist the adapter counterclockwise to remove.</p> <p>Using the Adapter with the Pistol Grip</p> <p>The Flashline Pistol Grip (FB-PC) is sold separately. It features a 5/8 inch receiver with twist lock for light stand mounting, an optional screw, and a nut for attaching additional accessories such as a radio dish.</p> <p>Use the pistol grip as a handheld unit.</p> <p>Turn the pistol grip's locking wheel until the adapter is securely attached.</p> <p>Using the Adapter with a Tripod</p> <p>Attach the adapter and your flash to a tripod or light stand with a 1/4-20 screw for stand alone use.</p> | <p>Angler FB-SM-V2 On-Camera Flash Mount [pdf] Instructions</p> <p>FB-SM-V2 On-Camera Flash Mount, FB-SM-V2, On-Camera Flash Mount, Camera Flash Mount, Flash Mount, Mount</p> |
|--|--|

References

- [Angler | Lighting Equipment & Accessories](#)
- [Angler | Lighting Equipment & Accessories](#)
- [Gradus | Gradus Group](#)