



ANKER A3303 Bluetooth 2-in-1 Transmitter and Receiver aptX Low-Latency Technology User Manual

[Home](#) » [Anker](#) » ANKER A3303 Bluetooth 2-in-1 Transmitter and Receiver aptX Low-Latency Technology User Manual 

Contents

 
- 1 ANKER A3303 Bluetooth 2-in-1 Transmitter and Receiver aptX Low-Latency Technology
- 2 At a Glance
- 3 Connecting
 - 3.1 Connect to PC Bluetooth USB adapter
 - 3.2 iOS System
 - 3.3 Windows System
 - 3.4 Software (Zoom)
 - 3.5 Connect to PC (USB-C cable)
 - 3.6 Connect to smartphone (Bluetooth pairing)
- 4 Powering On/Off
- 5 Button Controls
- 6 Status LED
- 7 Charging
 - 7.1 Charge your PowerConf+
 - 7.2 Charge an external device
- 8 Audio Output
 - 8.1 Soundcore App
- 9 Specifications
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts



ANKER A3303 Bluetooth 2-in-1 Transmitter and Receiver aptX Low-Latency Technology



At a Glance

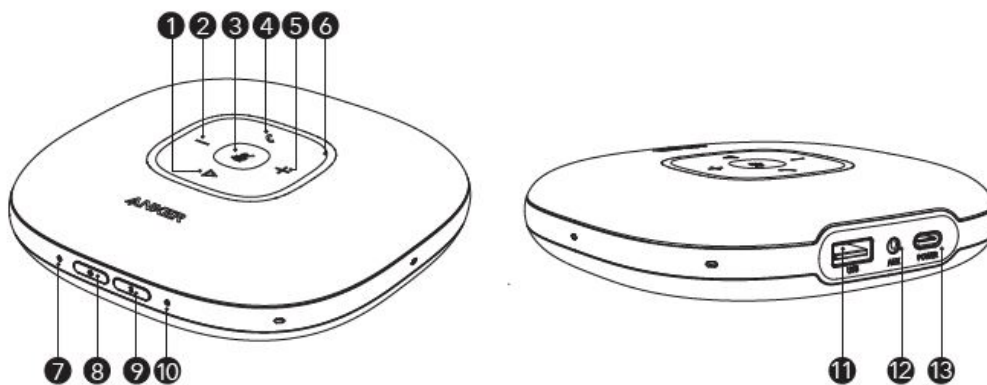


1. Multi-function button
2. Volume down button
3. Mute button
4. Phone call button
5. Volume up button
6. Status LED
7. Power LED
8. Power button
9. Bluetooth button
10. Bluetooth LED
11. USB port (Type-A) for charge-out
12. Audio output port
13. USB port (Type-C) for charge

Connecting

Connect to PC Bluetooth USB adapter


Plug the Bluetooth USB adapter into a USB port on your PC, Power Conf+ is ready to use when powered on.

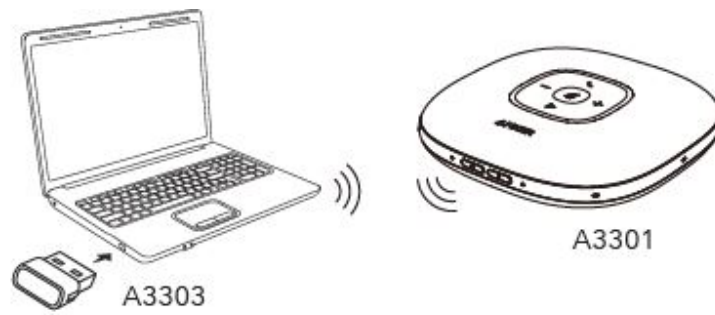

Having a problem? You might need to manually set PowerConf+ as the audio device for your PC system or conference software.


iOS System

 System Preferences > Sound > Sound Effects / Output / Input

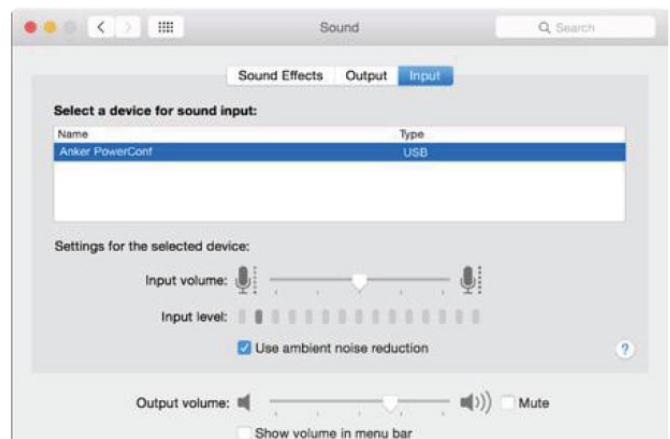


Windows System

 Right click on the sound icon > Open Sound settings > Choose your output device / Choose your input device

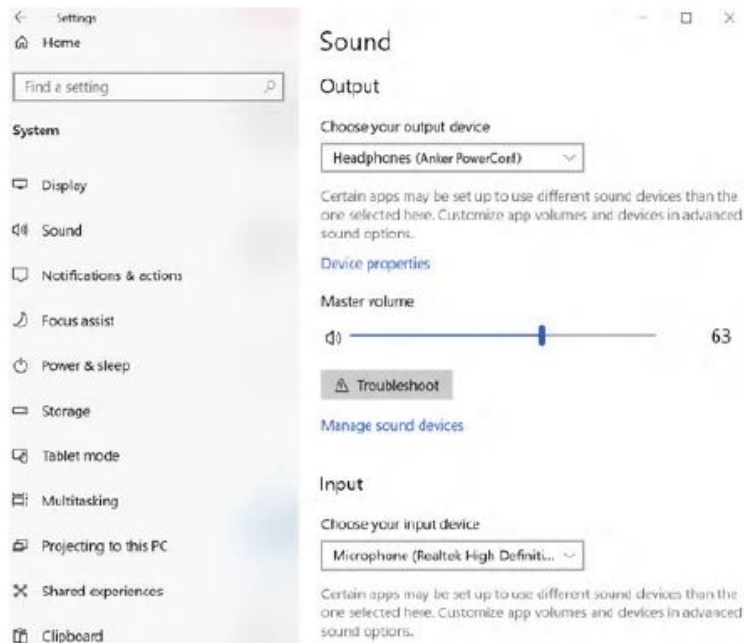


Software (Zoom)

 Audio Settings... > Microphone / Speaker

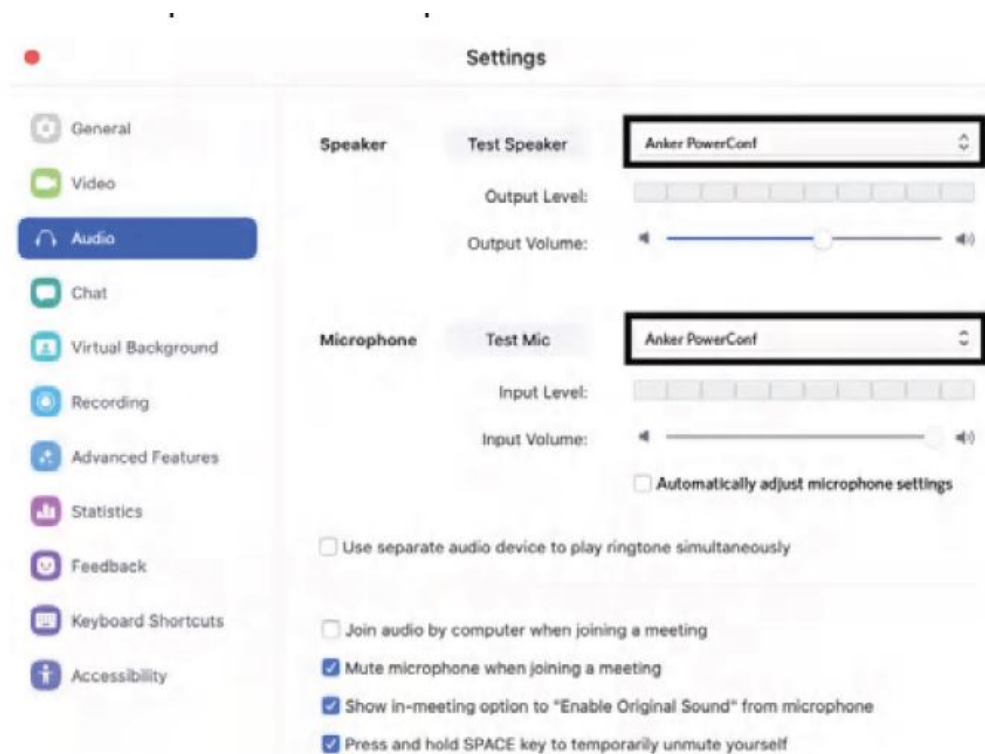


Connect to PC (USB-C cable)

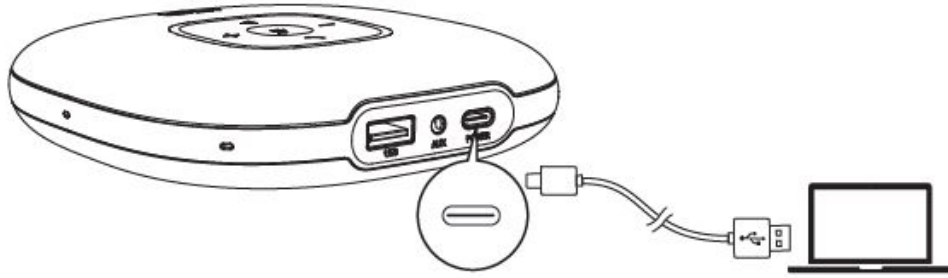 

Connect to smartphone (Bluetooth pairing)

 When powered on, PowerConf+ will automatically enter the Bluetooth pairing mode. Select Anker PowerConf+ on your smartphone's Bluetooth list to connect.

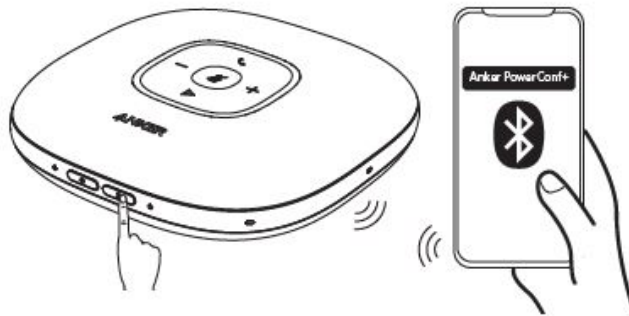


	Press	Enter pairing mode
	Flashes blue	Bluetooth pairing
	Steady blue	Bluetooth connected

Each time you power on PowerConf +, it will automatically connect with the last successfully connected device if available. To disconnect Bluetooth, press the Bluetooth button again.

Powering On/Off

Press and hold the power button for 2 seconds to power on. The status LED will light on clockwise and then fade out. To power off, press and hold the power button for 2 seconds.

-

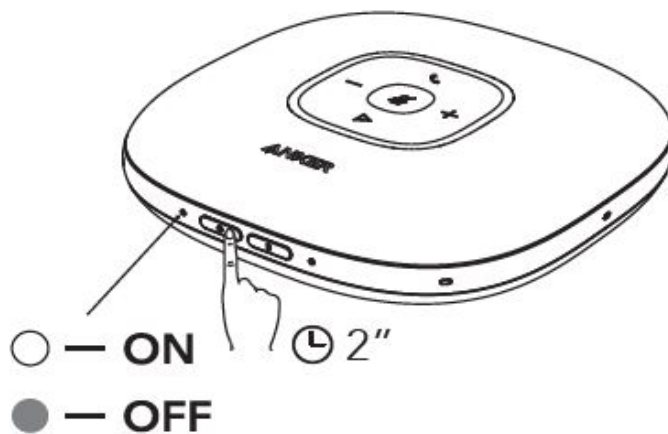

PowerConf+ will automatically power on once connected to your PC by using the USB-C cable.

- PowerConf+ will automatically power off after 30 minutes of inactivity or no source.

Button Controls


	Press or press and hold	Volume up/down
	Press	Answer/End a call
	Press and hold for 2 seconds	Reject a call
	Press	Mute or restore the microphone
	Press	Play/Pause music

Status LED


Lights up white for 2 seconds	Connected to power or PC
Breathes green	Coming call
Partially lights up blue	Sound direction detected
Lights up blue clockwise or counterclockwise	Increase/Decrease volume
Turns red	Muted
Lights up green	Press Power button to check the battery level

Charging

Charge your PowerConf+

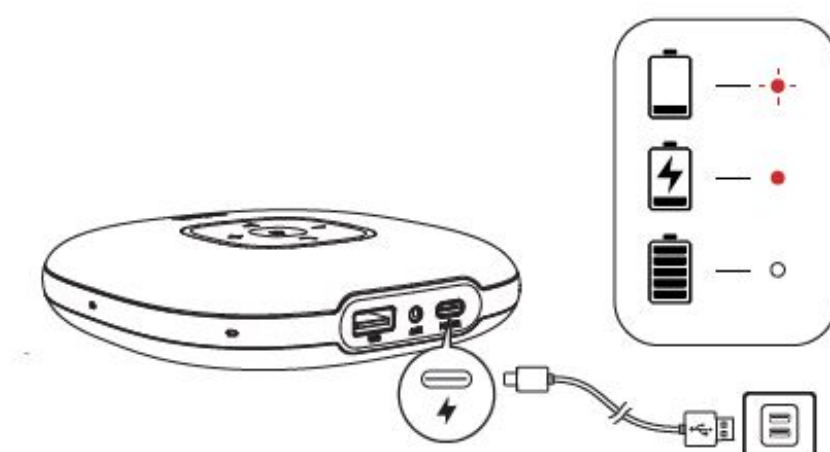


Charge an external device

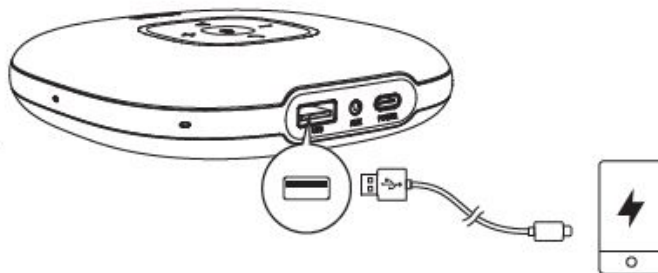

When powered off or being charged, PowerConf + won't charge out. When the remaining battery is less than 30%, the charge out current will be 5V 1A; if less than 10%, PowerConf + won't charge out.

Audio Output

Connect an external speaker to the AUX OUT port of PowerConf + by using an AUX cable (not provided). The audio will be played through the speaker.

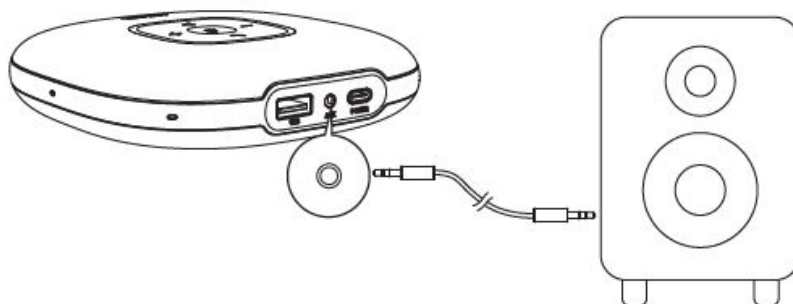

Soundcore App

Download the Soundcore App for software updates.



Soundcore





Google Play and the Google Play logo are trademarks of Google Inc.




Apple and the Apple logo are trademarks of Apple Inc.

Specifications

Charge input	5V  2A
Charge out	5V  2.1A
Rated output power	3W RMS
Battery capacity	6700 mAh
Charging time	4 hours
Talktime	24 hours
Driver size	1 x 1.75" (full range)
Frequency response	20 Hz - 20 kHz
Bluetooth version	V 5.0
Bluetooth range	10 m / 33 ft

Documents / Resources

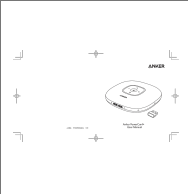	<p>ANKER A3303 Bluetooth 2-in-1 Transmitter and Receiver aptX Low-Latency Technology [pdf] User Manual</p> <p>A3303, 2AOKB-A3303, 2AOKBA3303, A3303 Bluetooth 2-in-1 Transmitter and Receiver aptX Low-Latency Technology, Bluetooth 2-in-1 Transmitter and Receiver aptX Low-Latency Technology, Transmitter and Receiver aptX Low-Latency Technology, aptX Low-Latency Technology</p>
---	---

References

- [🔊 soundcore Headphones & Speakers - Hear it, Feel it - soundcore US](#)
- [⚡ Anker | Live Charged. - Anker US](#)
- [⚡ Anker \(\) Japan – Anker Japan](#)
- [🔊 soundcore Headphones & Speakers - Hear it, Feel it - soundcore US](#)