

ANKER S3 PowerConf Bluetooth Speakerphone User Manual

Home » Anker » ANKER S3 PowerConf Bluetooth Speakerphone User Manual

Contents


- 1 ANKER S3 PowerConf Bluetooth
- **Speakerphone**
- 2 At a Glance
- 3 Connecting
- 4 Powering On/Off
- **5 Button Controls**
- 6 Status LED
- 7 Charging
- **8 Audio Output**
- 9 Soundcore App
- 10 Specifications
- 11 File Downloads
- 12 Related Manuals
- 13 Documents / Resources
- **14 Related Posts**



ANKER S3 PowerConf Bluetooth Speakerphone



At a Glance

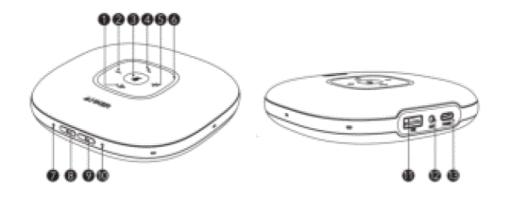


- 1. Multi-function button
- 2. Volume down button
- 3. Mute button
- 4. Phone call button
- 5. Volume up button
- 6. Status LED
- 7. Power LED
- 8. Power button
- 9. Bluetooth button
- 10. Bluetooth LED
- 11. USB port (Type-A) for charge-out
- 12. Audio output port
- 13. USB port (Type-C) for charge-in

Connecting

• Connect to your PC by using a USB-C cable



Connect to your PC or mobile device via Bluetooth pairing
When powered on for the first time, PowerConf S3 will automatically enter the Bluetooth pairing mode.

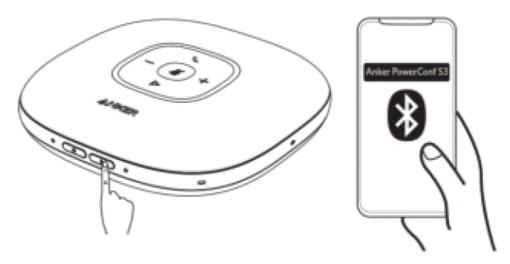

- ** Press
 - Enter pairing mode
- Flashes
 - blue Bluetooth pairing
- Steady
 - blue Bluetooth connected
- Each time you power on PowerConf S3, it will automatically connect with the last successfully connected device if available.
- To disconnect Bluetooth, press the Bluetooth button again


Powering On/Off

Press and hold the power button for 2 seconds to power on. The status LED will light on clockwise and then fade out. To power off, press and hold the power button for 2 seconds.



- PowerConf S3 will automatically power on once connected to your PC.
- PowerConf S3 will automatically power off after 30 minutes of inactivity or no source.

Button Controls

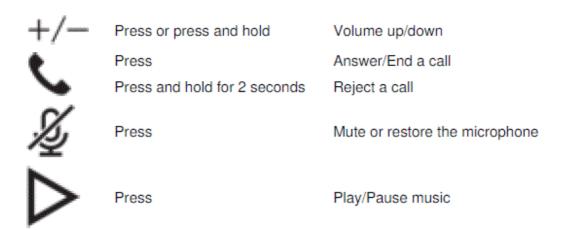


Status LED


- · Lights up white for 2 seconds
 - Connected to power or PC
- · Breathes green
 - Coming call
- · Partially lights up blue
 - Sound direction detected
- · Lights up blue clockwise or counterclockwise
 - Increase/Decrease volume
- Turns red
 - Muted
- Lights up green Press

Charging

• Charging PowerConf S3

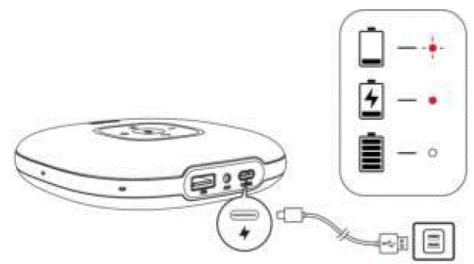


· Charging an external device

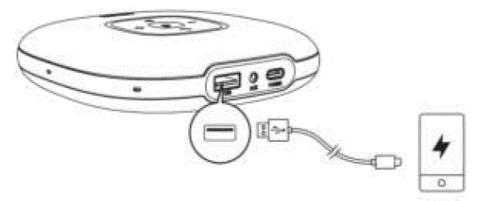

- When powered off or being charged, PowerConf S3 won't charge out.
- When the remaining battery is less than 30%, the charge out current will be 5V = = 1A; if less than 10%, PowerConf S3 won't charge out.


Audio Output

Connect an external speaker to the AUX OUT port of PowerConf S3 by using an AUX cable (not provided). The audio will be played through the speaker.

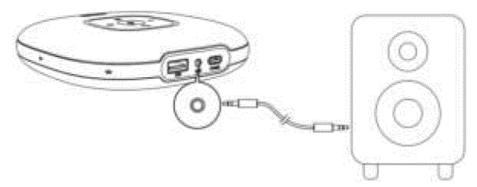

Soundcore App

Download the Soundcore App for software updates.

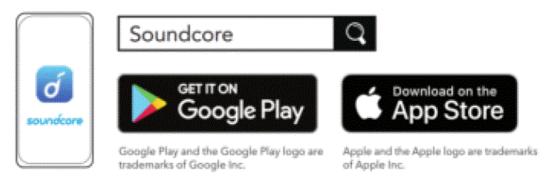

Specifications

Specifications are subject to change without notice.

- Charge input
 - 。 5V 2A
- Charge out
 - 。 5V 2.1A
- · Rated output power
 - 3W RMS
- · Battery capacity
 - 。6700 mAh
- Charging time
 - 4 hours
- Talktime
 - o 24 hours
- Driver size
 - 1 x 1.75" (full range)
- Frequency response
 - 20 Hz 20 kHz
- · Bluetooth version
 - 。 V 5.0
- · Bluetooth range
 - 10 m / 33 ft

service@soundcore.com

<u>support.mea@soundcore.com</u> (For Middle East and Africa Only)+1 (800) 988 7973 (US) Mon-Fri 9:00 – 17:00 (PT)

File Downloads



User Manual **Download** [optimized] PowerConf S3 **Download**

Related Manuals

- 1. ANKER PowerConf User Manual Anker PowerConf User Manual At a Glance 1 Multi-function button...
- 2. Anker PowerConf A3301 User Manual USER MANUAL Anker PowerConf A3301 Anker Innovations Limited. All rights...
- 3. Anker Anker Soundcore Liberty 2 User Manual Anker Anker Soundcore Liberty 2 Product specification Product number :...
- 4. ANKER PowerPort User Manual ANKER PowerPort User Manual Attention Read all the instructions before...
- 5. Anker SoundCore Boost User Manual USER MANUAL How to Use ...
- 6. ANKER PowerPort III User Manual PowerPort III USER MANUAL Power port III 65w pod Read...

Documents / Resources



ANKER S3 PowerConf Bluetooth Speakerphone [pdf] User Manual S3 PowerConf Bluetooth Speakerphone, S3, PowerConf Bluetooth Speakerphone

Manuals+, home privacy