



anko 42976622 Clock Radio with White Noise Instruction Manual

[Home](#) » [Anko](#) » anko 42976622 Clock Radio with White Noise Instruction Manual 



**Clock Radio with White Noise
Operating instructions**

Includes:

 
- clock radio with white noise
- charging cable
- (USB cable)) user manual



Contents

- [1 Function overview:](#)
- [2 How to use this product: Function Operation](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Function overview:

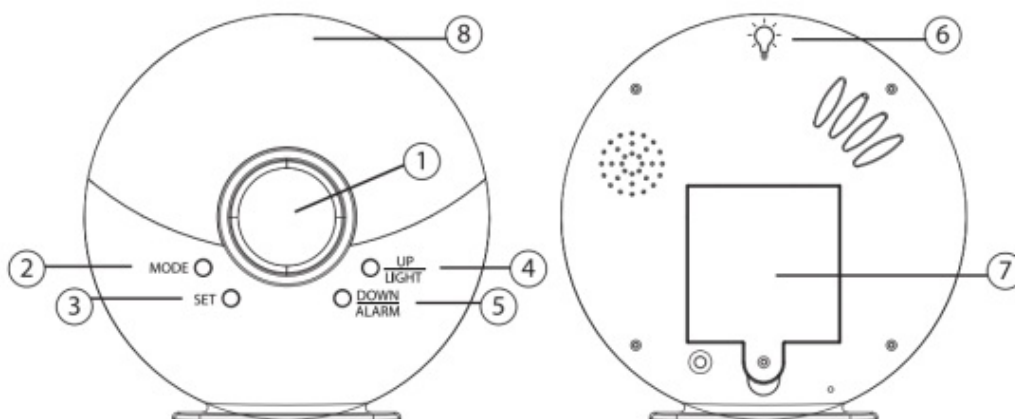

- 1. LCD Display
- 2. Mode
- 3. Set
- 4. Up/Light
- 5. Down/Alarm

6. Lighting Touch Control
7. Battery Compartment
8. Light Panel

How to use this product: Function Operation

Mode Button

- By default, this product is in clock mode. Press the MODE button to change modes.
- The mode order is Clock – White Noise – FM Radio – Clock.

Set Button

- In Clock mode. press and hold the SET button for 2 seconds till the LCD shows flashing 12H” or “24H”, indicating it’s now In setting mode. Press UP/DOWN to choose from a 12H or 24H time display. Press the SET button again, in turn, to change the setting of an hour/minute/alarm hour/alarm minute/alarm sound/back to the clock display.
- In FM mode. Press the SET button to change to the next channel.
- In White Noise Mode, press SET to enter White Noise Volume changing.
- In Clock mode. touch the lighting touch control area of the back of the light panel to turn the light ON/OFF. Press the SET button to switch the light color.

Note: The light can be turned on in all modes, the brightness and color can only be changed while in clock mode.

Lighting Touch Control

- In any mode. press the touch control area to turn ON/OFF the light.
- When the alarm sounds, press the light to touch the control area to snooze for 5 minutes. A flashing snoozing symbol will show up on the LCD display



LCD Full display

The default state of this device:

- 12hr display, when time turns 12:00. the time (AM) symbol will appear.
- Light panel brightness: 50%

- Alarm is of
- Alarm time: 6:00 am
- When the unit is powered on, LCD display turns on with full display and bird sound.



LCD normal display

Time and alarm setting

- In Clock mode, press and hold the SET button to enter the time setting in sequence: 12/24hr setting – hour set – minute setting – Alarm hour setting – Alarm minute setting – Alarm sound selection (10 white noise or FM radio) – Back to the clock display.

Note: If the ()/on sound is set to FM by default, the FM alarm sound is the last FM channel listened to. If the channel is not your preferred channel, please go to FM mode to change to your preferred channel and then exit and repeat the alarm setting.

- The setting item flashes, press the UP/LIGHT button or DOWN/ALARM button to change. Press the SET button to confirm each setting.
- No operation in 15 seconds, the device exits setting mode and the setting values are saved.
- Under Clock mode, Press the DOWN/ALARM button to turn on/off the alarm in sequence: Alarm on – Alarm off.

 
Note: if the LIGHT is on, please turn the light off first.

- When the alarm sounds, press the DOWN/ALARM button to turn the alarm off, or press the light touch control to enter snooze, the snooze symbol appears and flashes. The alarm sounds again after 5 minutes, press any other button to turn the alarm off.
- If there is no operation when the alarm sounds, the alarm sound lasts for 5 minutes and then turns off. The Lights will turn off too. If the alarm sound is Radio, it will remain on after the 5 minutes.

Notes: When the light panel is off, if the alarm time is set to above 20 minutes, the light panel turns on gradually 20 minutes before the alarm sounds. When the set alarm time is reached, the light panel turns on to full brightness and sounds the preset alarm sound/ Radio. If the setting time to alarm time is within 20 minutes, the light panel turns on immediately when the alarm sounds.

LCD Display Backlog

- When powered by batteries, press the UP/LIGHT button to turn on the LCD display backlight for 15 seconds.
- When powered by the USB Cable. the LCD display backlight will remain ON.

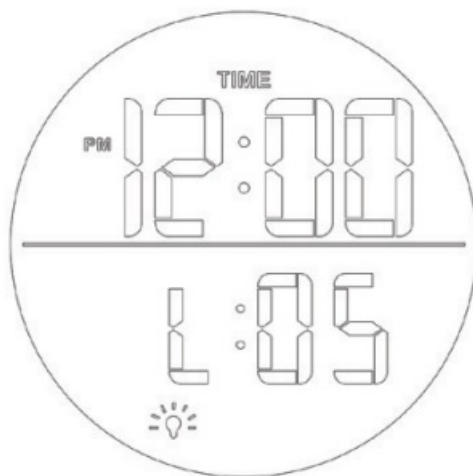

light adjustment
display

 
Liga Effect

- Touch the light control area to turn the light ON/OFF in any mode.
- The default light is in warm white color. 50% brightness, after that It will keep the lost records before it was turned off e.g., it's blue light and full brightness, if we turn off the light and turn it on again, it will keep blue light and full brightness.
- When the lights are on, press SET to switch the light colors in sequence: worm white – circular Light display: red – yellow – green – blue – purple – light blue-white.
- When it's under the circular Light display, each light colour will remain on for 10 seconds and then gradually change to the next colour in the sequence.
- Press the UP/LIGHT or DOWN/ALARM button to increase or decrease the light brightness by 10% from 10% to 100% or 100% to 10%.

Note: please set Light color and brightness in Clock mode. If you are in another mode like White noise or FM mode, please exit first.

White Noise Mode


- In Clock mode. Press the MODE button to enter white noise mode.
- The default is Music 1. and playtime is 10 minutes.
- Press UP or DOWN to change to the previous or next music setting. Press the SET button to enter the volume setting. Press UP/DOWN to adjust Volume between V:01-V:03. Press SET again to return to Music selection.

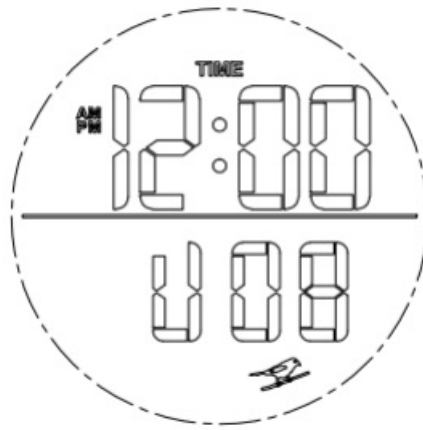


White Noise display

FM Radio

 - On the time display interface, press the MODE key twice to enter the Radio mode. To exit Radio mode, press MODE again. When you enter Radio mode again, it automatically plays the last set channel.
- In Radio mode, press the SET button to search for the next channel.
- Press the UP or DOWN button to increase/decrease radio volume.
- When adjusting the volume, the volume will be displayed at the Alarm minute position. The default volume is 10. and the volume range is 00-15.

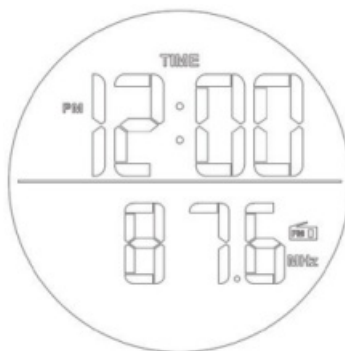

Radio playing interface

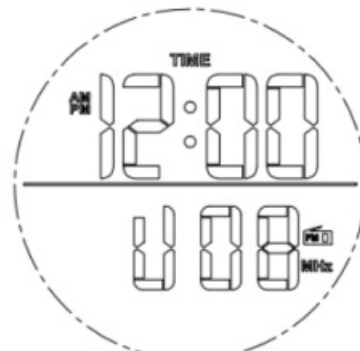 

Volume

Radio and white noise sound play conflict

- If you are listening to the radio with the alarm set to radio function, the radio will continue to play and the alarm symbol will flash on the screen.
- When Alarm clock mode is set with white noise, and you are listening to the radio. The speaker will exit the radio and play white noise. The alarm symbol flashes on the screen.

Specifications:

Model No: 42976622

USB Charging Input: 5V/1.2A (please use provided charging cable only)

Backup Battery: 4 X AA (Not included)

Output Power: 0.5W

LCD Display: 1.49 Inches

Frequency Response: 10Hz-20kHz

FM Frequency: 87.5Hz-108MHz

12-month warranty

Thank you for your purchase from Kmart. Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair, or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

 
Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING Do not dispose of unit in fire or water) Never attempt to disassemble and reassemble.) Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check with your local authority for recycling advice.) Keep your device and all accessories out of the reach of children and animals.) Small parts may cause choking or serious injury if swallowed.) Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device.) Do not allow your device to get wet liquids that can cause serious damage.) Do not handle your device with wet hands.

Documents / Resources

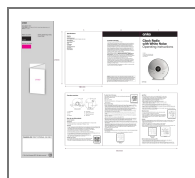

[Anko 42976622 Clock Radio with White Noise](#) [pdf] Instruction Manual
42976622, Clock Radio with White Noise