



anko 43136087 HDMI Multi Switch Box User Manual

[Home](#) » [Anko](#) » anko 43136087 HDMI Multi Switch Box User Manual 

anko

User Manual
HDMI MULTI SWITCH BOX
Keycode 43136087



Contents

- 1 43136087 HDMI Multi Switch Box
- 2 Packing Contents:
- 3 Product Introduction
- 4 Operating and Connecting
- 5 Documents / Resources
- 6 Related Posts

43136087 HDMI Multi Switch Box

Please read all the information carefully before you use the device to avoid accidents and keep it for future reference.

Packing Contents:

- 1. HDMI Switch X1
- 2. Remote control X1 2AAA batteries not included
- 3. Adaptor X1 (5V 1A)

Product Introduction

Support connect five HDMI sources to one HDMI display (Only one screen can display at one time, screens CANNOT display simultaneously) Plug And Play, with remote control.

HDMI version 1.4 A

Easy install & operation

Support up to 4K/30Hz resolution

Support 3D video format

MAX operation current: 600mA

Remark: Compatible HDMI cable must be used to support the connection for highest resolution and refresh frequency.

Operating and Connecting

1. Connect 5 HDMI cables (not included) from HDMI source device into HDMI input ports.
2. Connect 1 HDMI cable (not included) from HDMI source device into HDMI output ports.
3. Connect 5V/1A power adapter to the HDMI switch.
4. Switch the monitor display by remote or press SELECT button on device



1. Power Indicator
2. Remote Control
3. Input Indicator
4. Power on/off Button
5. HDMI Source Switch Button



6. Power Input
7. HDMI Input Ports
8. HDMI Output Port

anko

 anko User Manual HDMI Multi Switch Box Keycode 43136087 anko 43136087 HDMI Multi Switch Box 43136087, HDMI Multi Switch Box, Multi Switch Box, Switch Box, Box	anko 43136087 HDMI Multi Switch Box [pdf] User Manual 43136087 HDMI Multi Switch Box, 43136087, HDMI Multi Switch Box, Multi Switch Box, Switch Box, Box
---	--