



## anko 43243990 RGB Wired Controller Instruction Manual

[Home](#) » [Anko](#) » anko 43243990 RGB Wired Controller Instruction Manual 

### Contents

- [1 anko 43243990 RGB Wired Controller](#)
- [2 Specification](#)
- [3 Product Overview](#)
- [4 12 Month Warranty](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

# anko

anko 43243990 RGB Wired Controller

 


Please read all the information carefully before you use the product and keep the manual for future reference.


## Specification

- **Product size:** 152\*115\*58mm
- **Product weight:** 190g
- **Power supply:** Cable connection to console
- **Input:** 5V 500mA (Max)

## Product Overview

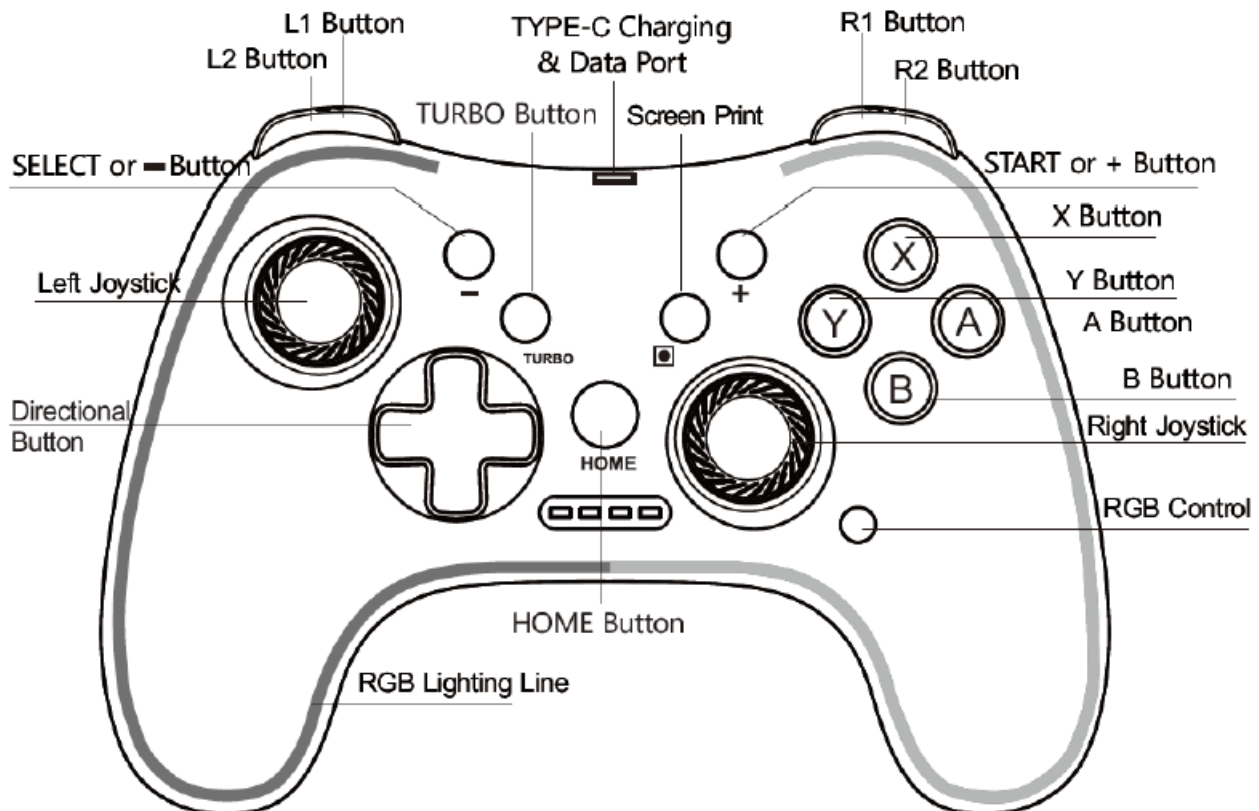



## Switch Gamepad Mode—Connect for Nintendo Switch Console

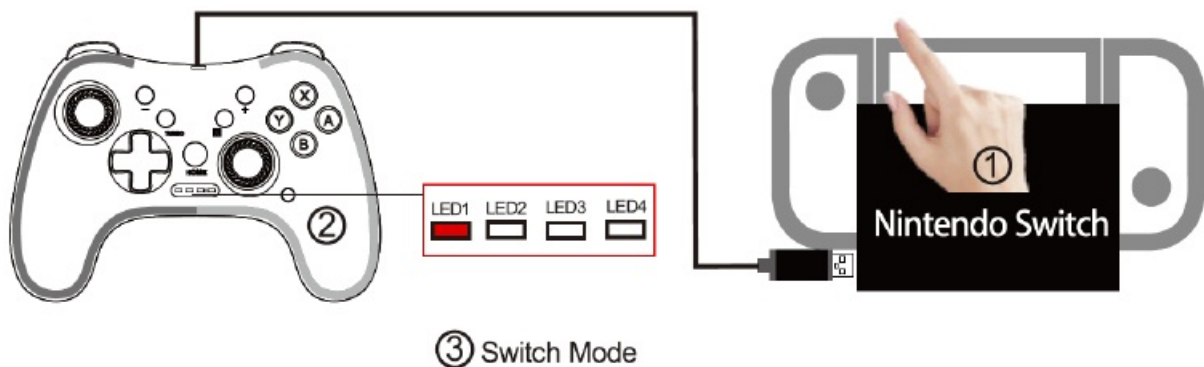 


1. Press the POWER to wake up the Nintendo Switch gaming console.
2. Connect the game controller with type C cable to USB port of Nintendo Switch gaming console charging dock, the LED1,2,3,4 flash together for pairing.
3. After Nintendo Switch console recognized the controller, the gamepad will vibration for 1 second, then connect,

and press A button to confirm the connection, the LED1 will be long on.

  4. If the LED light is still off after go through all the above steps, try to open Pro Controller Wired Communication in system setting Panel.

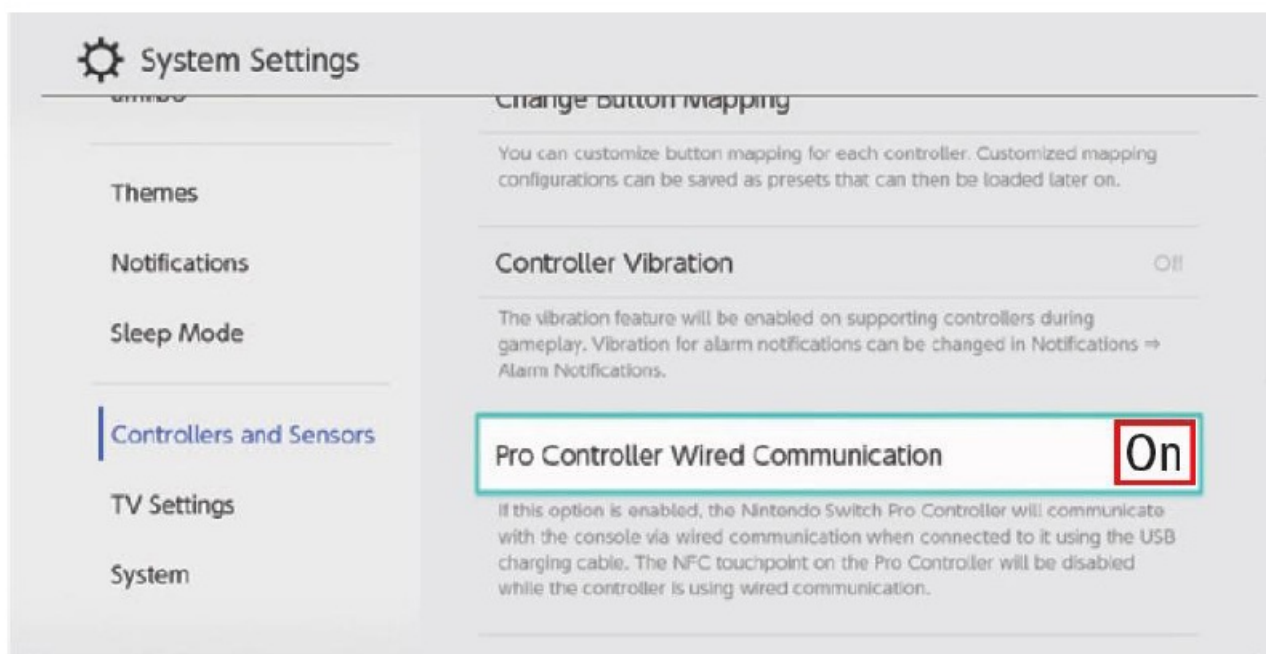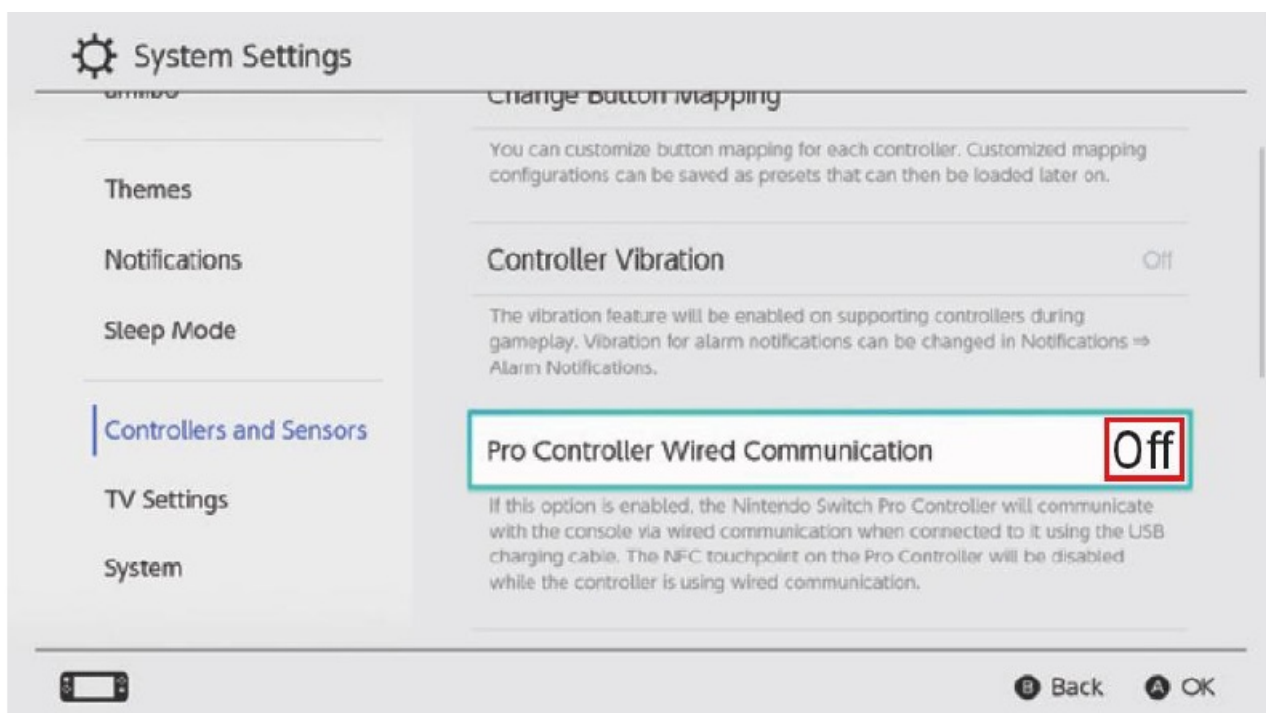


**X-Input Mode—Connect for Window 7/8/10**


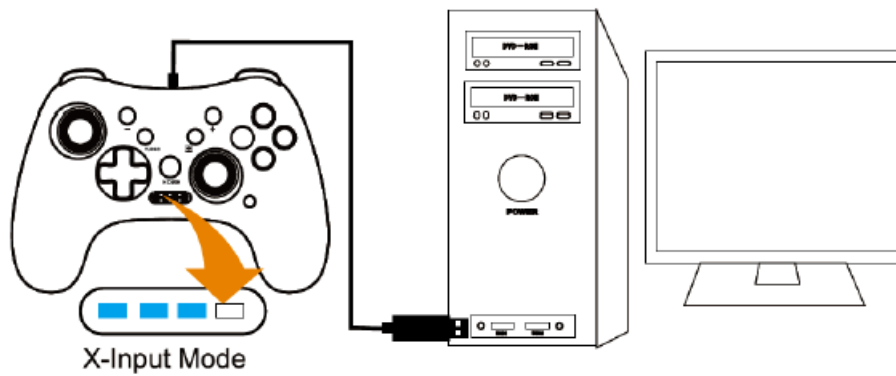 


Connect the gamepad with type C cable to USB port of PC computer, after the system recognize the game controller, the gamepad will vibration for 1 second to show successful connect. The LED1,2,3 will be long on. The mode is in X Input mode.


### D-Input Mode

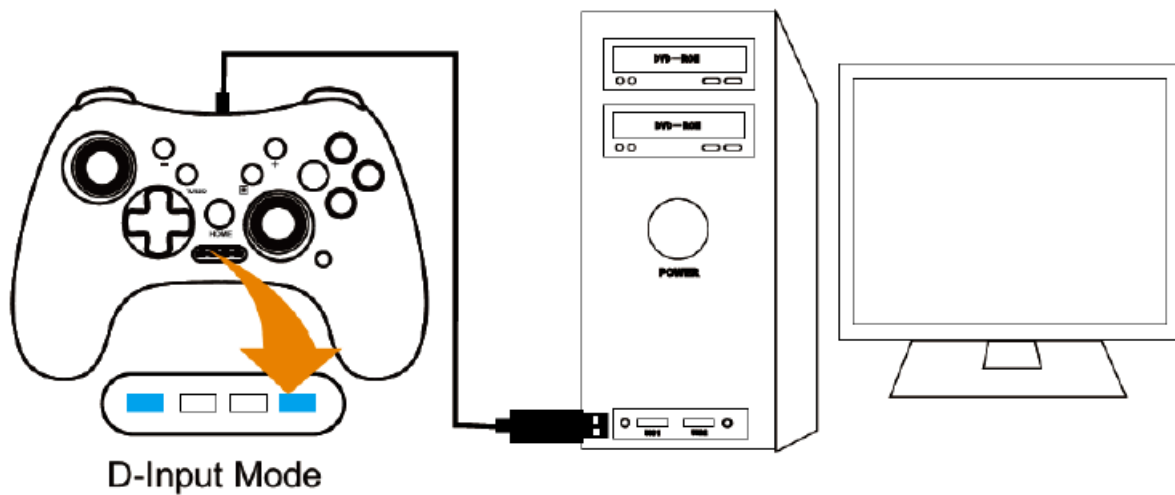 

  Long press the HOME button with 3 5 seconds, the gamepad will transfer to D Input mode. It will vibration for 1 second after transfer successful. The LED turn to LED1+LED4 light. In this D input mode, it includes Analog mode and Digital mode, and press HOME button shortly to switch Analog mode to Digital mode

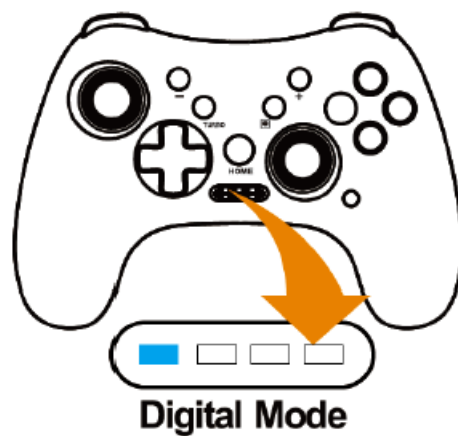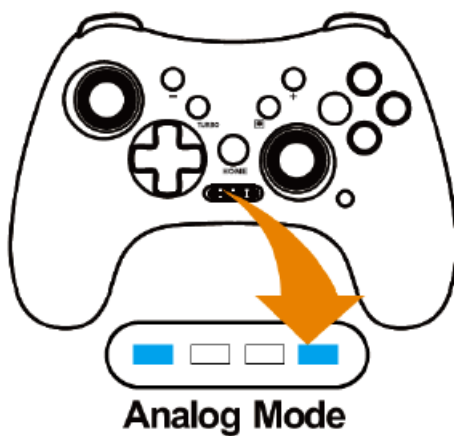


### Android 6.0+ Controller Mode

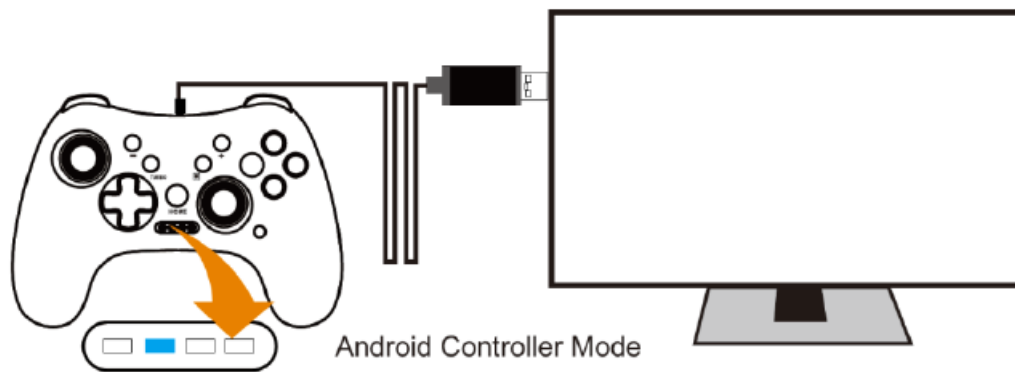 

Connect the gamepad with type C cable to USB port of Android media box, android TV set, after the system recognized the game controller, the gamepad will vibration for 1 second to show successful connect. The LED2 will be long on. The mode is in Android gamepad mode.

### Ps3 Controller Mode

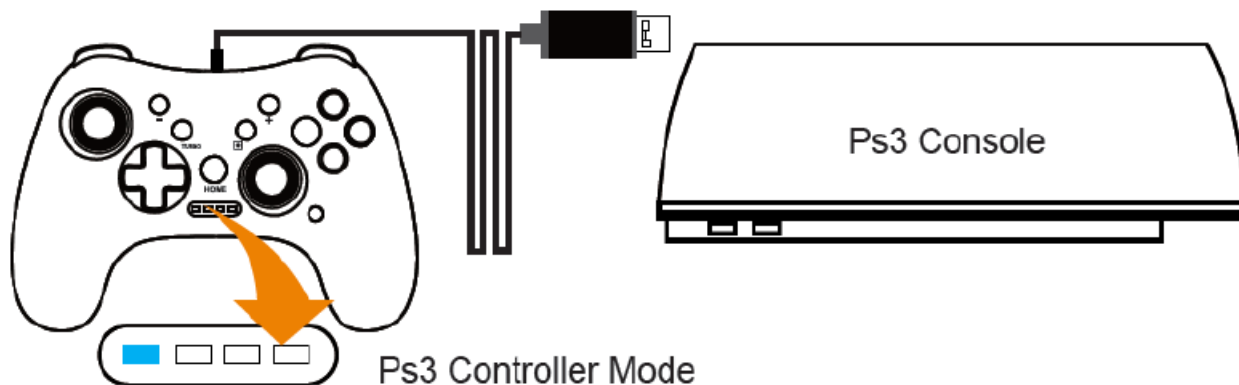 

Connect the gamepad with type C cable to the USB port of Ps3 console, after the system recognized the game controller, the gamepad will vibration for 1 second to show successful connect. The LED1 will be long on. The mode is in Ps3 gamepad mode.

### Turbo Function & Speed Adjustment

Buttons can be set to the Turbo function (which is called for short function buttons): A/B/X/Y/L1/L2/R1/R2 button



### Enable/ Disable the TURBO function:

1. **Step 1:** Press the TURBO button and one of A/B/X/Y/L1/L2/R1/R2 button simultaneously to enable the TURBO function.
2. **Step 2:** Repeat the step 1 to disable the TURBO function

### Adjust TURBO speed



1. Press TURBO button + direction UP button to adjust to the fastest TURBO speed.
2. Press TURBO button + direction RIGHT button to adjust to the middle TURBO speed.
3. Press TURBO button + direction DOWN button to adjust to the slow TURBO speed.

### **Adjust Vibration Intensity(Only available for Nintendo Switch Controller Mode)**

This controller have 4 levels of vibration intensity and Strongest/ Moderate/ Weakest/None Vibration will be LED1/ LED2/ LED3/ LED4 on



1. Make sure you connect the controller to the switch console.
2. Press 4 buttons (L1/L2/R1/R2) simultaneously for around 2 seconds.
3. Release the 4 buttons when you feel the vibration.
4. The vibration mode can be adjusted by repeating above operation.

### **RGB Control**

Press RGB control button to change 3 kinds of RGB light effect Changing light mode/ Fixed light mode/Light off mode




### **12 Month Warranty**

Thank you for your purchase from Kmart. Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a

result of alteration, accident, misuse, abuse or neglect. Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**Documents / Resources**

	<p><a href="#">anko 43243990 RGB Wired Controller</a> [pdf] Instruction Manual</p> <p>43243990, RGB Wired Controller, Wired Controller, RGB Controller, Controller</p>
---	--

**References**

-  [Kmart.com.au](https://www.kmart.com.au)