



anko 43351206 Wireless Keyboard and Mouse Combo Instruction Manual

[Home](#) » [Anko](#) » anko 43351206 Wireless Keyboard and Mouse Combo Instruction Manual 

Contents

- [1 anko 43351206 Wireless Keyboard and Mouse Combo](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Safety Instructions](#)
- [5 Features](#)
- [6 System requirements](#)
- [7 Before first use](#)
- [8 Product Overview](#)
- [9 Install the Battery](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

anko

anko 43351206 Wireless Keyboard and Mouse Combo



Product Information

- **Specifications:**
 - 2.4GHz wireless technology
 - 800DPI / 1000 DPI / 1200 DPI adjusting mouse sensor
 - Working distance up to 10m (without any obstructions)

- Compatible with Windows, Mac OS, and Android operating systems

Product Usage Instructions

• Safety Instructions:

- Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.
- Keep the instruction manual for future reference.
- Should this device be given to a third party, then this instruction manual must also be handed over.
- Use this device solely for its intended purpose.
- Only use this appliance indoors.
- Keep the appliance away from all hot surfaces and naked flames.
- Always put the appliance on a level, stable, clean, dry surface.
- Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity, and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- Do not open the housing under any circumstances.
- Do not introduce any objects into the interior of the housing.
- Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

• Before First Use:

- Unpack the device and check if all parts are there and undamaged. Should this not be the case, return the product to the store for replacement.
- The danger of suffocation! Keep all packaging materials away from children.
- Dispose of the packaging materials properly. Inform yourself at the local authorities regarding collection points or garbage separation.
- Remove all protective foils and packaging material before use.

• Install the Battery:

- Remove the battery compartment covers of the mouse and keyboard, and insert 1 x AAA battery to the mouse and 2 x AAA batteries to the keyboard (not included in the package).
- Ensure correct placement of the anode and cathode of the mouse and keyboard batteries.
- Replace the battery compartment covers again, making sure they are closed firmly.
- **Caution:** Danger of explosion if the batteries are incorrectly replaced.

• Connecting the USB Receiver:

- Remove the USB receiver from its compartment inside the keyboard.
- Plug the USB receiver into a free USB port on the computer, and then the mouse and keyboard are connected. The device does not require a driver.

• Auto Wake Sleep:

- After a period of non-use, your mouse and keyboard will enter sleep mode to save battery life. To wake your keyboard, simply press any key or move your mouse.

• FAQ:

- **Q:** What should I do if the batteries leak?
- **A:** If the batteries leak, remove them with a cloth and dispose of them accordingly. Ensure that leaking

battery acid does not come into contact with skin and eyes. If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a physician immediately!

Please read all the information carefully before you use the product and keep the manual for future reference.

Safety Instructions

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.

- Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- Use this device solely for its intended purpose.
- Only use this appliance indoors.
- Keep the appliance away from all hot surfaces and naked flames.
- Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- Do not open the housing under any circumstances.
- Do not introduce any objects into the interior of the housing.
- Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

Features

- 2.4GHz wireless technology
- 800DPI / 1000 DPI / 1200 DPI adjusting mouse sensor Working distance up to 10m (without any obstructions)

System requirements

- Compatible with Windows, Mac OS, and Android operating systems

Before first use

1. Unpack the device and check if all parts are there and undamaged. Should this not be the case, return the product to the store for a replacement.
2. The danger of suffocation! Keep all packaging materials away from children.
3. Dispose of the packaging materials properly. Inform yourself at the local authorities regarding collection points or garbage separation.
4. Remove all protective foils and packaging material before use.

Product Overview



Install the Battery

1. Remove the battery compartment covers of the mouse and keyboard, and insert 1 x AAA battery to the mouse and 2 x AAA batteries to the keyboard (not included in the package). please notice the Battery place of the anode and cathode of the mouse and keyboard.
2. **Caution** The danger of explosion if the batteries are incorrectly replaced.
3. Replace the battery compartment covers again, making sure it is closed firmly.

Notes on batteries

- Only use top-quality batteries. Cheap batteries could leak and damage the device as a result.
- If the batteries leak, remove them with a cloth and dispose of them accordingly.
- Ensure that leaking battery acid does not come into contact with skin and eyes.
- If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a physician immediately! If battery acid comes into contact with your skin, wash the affected area with lots of water and soap.
- If the device is not to be used for an extended period, then the batteries should be removed, as the device could become damaged should they leak. If the device functions weaken, replace all batteries.
- **Batteries do not belong in household waste!** Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations.

- Batteries are very dangerous if swallowed.
- Please keep the batteries and the device components away from children at all times.
- If a battery is swallowed, seek medical attention immediately.
- Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited.
- Remove the batteries before disposing of the device.


Connecting the USB Receiver

1. Remove the USB receiver from its compartment inside the keyboard.
 2. Plug the USB receiver into a free USB port on the computer, and then the mouse and keyboard are connected.
- The device does not require a driver.

Auto Wake Sleep

- After a period of non-use, your mouse and keyboard will enter sleep mode to save battery life.
- To wake your keyboard, simply press any key or move your mouse.
- **K:** 43351206
- **T:** 68778248
- Wireless Keyboard & Mouse Combo

Documents / Resources

	anko 43351206 Wireless Keyboard and Mouse Combo [pdf] Instruction Manual 43351206 Wireless Keyboard and Mouse Combo, 43351206, Wireless Keyboard and Mouse C ombo, Keyboard and Mouse Combo, Mouse Combo, Combo
---	---

References

- [User Manual](#)