





anko 43396474 Motion Sensor Light Instruction Manual

Home » Anko » anko 43396474 Motion Sensor Light Instruction Manual

Contents

- 1 anko 43396474 Motion Sensor Light
- **2 IMPORTANT SAFETY**

INSTRUCTIONS

- 3 Operating manual
- **4 Battery Installation**
- 5 Documents / Resources
 - **5.1 References**



anko 43396474 Motion Sensor Light



IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed to reduce the risk of electric shock, personal injury, or fire. It is important to read all of these instructions carefully before using the product, and to save them for future use, reference, or new users.

WARNING

- 1. Read this user manual thoroughly before first use and pass it on with the product.
- 2. LEDs are not replaceable. When it reaches the end of its life, the whole light shall be replaced.
- 3. Do not stare into the LED beam.
- 4. The product is intended to be used in moderate climates only. Do not use in tropical or very humid climates.
- 5. Do not move the product from cold into warm environments and vice versa.
- 6. The use of accessories and parts not specifically recommended by the manufacturer may cause injuries or damage and will result in forfeiture of the warranty.
- 7. If the product shows damage, do not use it any longer and have it repaired by a qualified technician, or contact our customer service department.
- 8. Do not disassemble the product, and do not try to repair it yourself.
- 9. Remove the batteries from the product before disposal.
- 10. Do not attempt to open the LED module to avoid damage.
- 11. The battery in the product can be replaced but cannot be charged.
- 12. Children must not use this product without adult supervision.
- 13. Do not expose the product to fire or high temperatures over 45°C.
- 14. Keep away from water, liquids, or wet areas.
- 15. Use a dry cloth to clean this product. Do not use chemicals on this product.
- 16. Do not place the product in direct sunlight, heat, or under the windshield.
- 17. When the unit is not in use, make sure it is correctly turned off and stored in a cool, dry place.
- 18. When disposing of this product. Do so responsibly, following local government requirements.

WARNING: READ AND FOLLOW ALL ABOVE INSTRUCTIONS CAREFULLY. DO NOT DROP OR APPLY EXCESSIVE FORCE TO THIS PRODUCT. DO NOT EXPOSE TO HIGH TEMPERATURES. IMPROPER USE OR HANDLING OF THIS PRODUCT MAY RESULT IN FIRE OR EXPLOSION, CAUSING SERIOUS INJURY OR PROPERTY DAMAGE.

Operating manual

- 1. The battery cover is on the side. Unscrew it first, then press and move the battery cover.
- 2. Insert 3x 1.5V AAA batteries.
- 3. Move back the battery cover and screw again.
- 4. When in a dark area, once a person or animal enters the sensing area, the light will turn on for around 25-35 seconds.
- 5. Three ways to fix on the wall: magnetic/hook, and loop/Hang it on a hook(not included).

Battery Installation

- Product: requires 3×1.5V AAA batteries (Not included).
- · Battery installation by an adult is required.

BATTERY WARNING

Batteries are to be inserted with the correct polarity.

- Do not mix different types of batteries or new and used batteries.
- The supply terminals are not to be short-circuited.
- Remove batteries from the product when not in use for an extended time or when Batteries become exhausted.
- Dispose of batteries responsibly.
- Do not dispose of it in the fire.

Documents / Resources



anko 43396474 Motion Sensor Light [pdf] Instruction Manual 43396474 Motion Sensor Light, 43396474, Motion Sensor Light, Sensor Light

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.