



anko AD-313 Nose and Brow Trimmer User Manual

June 21,
2025

Contents [[hide](#)]

- 1 [AD-313 Nose and Brow Trimmer](#)
- 2 [Specifications](#)
- 3 [Product Usage Instructions](#)
 - 3.1 [Changing Attachments](#)
 - 3.2 [Battery Installation](#)
 - 3.3 [Operations](#)
 - 3.4 [Cleaning and Maintenance](#)
- 4 [FAQ](#)
 - 4.1 [What type of battery does this trimmer use?](#)
 - 4.2 [How do I clean the trimmer attachments?](#)
 - 4.3 [Can I use this trimmer for other body parts besides nose, ears, and eyebrows?](#)
 - 4.4 [Documents / Resources](#)
 - 4.4.1 [References](#)

AD-313 Nose and Brow Trimmer

Specifications

- Battery type: 1 x AA battery required (not included)
 - 12 Month Warranty
-

Product Usage Instructions

Changing Attachments

Always ensure the trimmer is turned OFF when changing or removing attachments.

1. **Removing the attachment:** Hold the appliance body and rotate the trimmer head until alignment indicator I is away from the front panel. Pull to detach the trimmer head.
2. **Installing the attachment:** Hold the appliance body and insert the trimmer head. Rotate the head until alignment indicator I is facing the front panel.

Battery Installation

1. Rotate the battery cover to align symbol I and pull to detach the cover.
2. Insert one AA battery according to the battery compartment instructions.
3. Close the battery cover and rotate to lock position.

Operations

1. Attach the desired trimming head on the main unit.
2. Push the switch to turn on the unit.
3. Lightly place the blade on the area you want to trim and move against the hair growth direction.
4. Turn off the unit when finished.
5. Use the Cleaning Brush to remove hair residue from the trimmer head.

Cleaning and Maintenance

Regularly clean your trimmer after each use to maintain optimal performance. Use the provided cleaning brush to remove any hair residue.

FAQ

What type of battery does this trimmer use?

The trimmer uses 1 x AA battery, which is not included in the package. Make sure to insert it correctly following the given instructions.

How do I clean the trimmer attachments?

To clean the attachments, detach them from the main unit and use the cleaning brush provided to remove any hair or debris. Ensure they are dry before reattaching them for storage.

Can I use this trimmer for other body parts besides nose, ears, and eyebrows?

This trimmer is specifically designed for nose, ears, and eyebrows. Avoid using it on other body parts to prevent damage or injury.

[View Fullscreen](#)

Nose & brow Trimmer Model no.: AD-313 User Manual

PLEASE READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFETYGUARDS

To ensure proper operation of this appliance, please read this instruction manual completely and carefully before using the appliance and keep it for future reference.

WARNING! · Do not use this appliance under the following conditions: children; persons with skin

inflammation or skin diseases; persons with allergies; do not use the appliance on the eyelids throat; on areas where epilation or where any surgery has been performed. · Do not press the trimming head with excessive force and do not use it repeatedly in the same area. Do not insert the Nose & Ears Trimmer Head too deep into the nose and

ears. · If you feel any discomfort on your skin during or after using the appliance, stop using it and seek medical assistance if necessary. · Do not store the appliance in a hot or humid environment. · Do not attempt to modify, disassemble (except the removable parts), or repair the appliance by yourself for safety. NOTE: After using the appliance, you may notice a slight redness on the skin. Although this is normal, you can avoid skin irritation by moving the trimmer head gently against the direction of hair growth. Do not trim with excessive force. If after three days skin is still irritated, it is recommended to consult a doctor. · Children should be supervised to ensure that they do not play with the appliance. · Always switch OFF the appliance when not in use or before cleaning. · Do not leave the trimmer unattended when switched ON. · Do not use any attachments other than supplied. · This appliance is not intended for commercial use. · Do not place on any surface while it is operating. · Do not use this appliance with damaged or broken blade, as injury may occur. · This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. · Cleaning and user maintenance shall not be made by children without supervision. · WARNING: Keep the appliance dry. · Non-rechargeable batteries are not to be recharged. · Batteries are to be inserted with the correct polarity. · Exhausted batteries are to be removed from the appliance and safely disposed of.

· If the appliance is to be stored unused for a long period, the batteries should be removed.

· The supply terminals are not to be short-circuited. · Type of Battery: 1.5V AA · Open the cover, insert the battery with correct polarity, then closed the cover correctly.

Read and Save These Instructions

PARTS

1. Nose & Ear Trimmer 2. Brow Trimmer with double side comb attachment 3. On/Off switch 4. Battery cover 5. Protection cap 6. Cleaning brush

CHANGING ATTACHMENTS

Always turn the trimmer to OFF when changing or removing attachment.

Removing the attachment: Hold the appliance body then rotate the trimmer head until

alignment indicator “I” is away from front panel. Pull to detach the trimmer head.

Install the attachment: Hold the appliance body then insert the trimmer head. Rotate the head until alignment indicator “I” is facing the front panel.

BATTERY INSTALLATION

1. Battery cover is locked when the alignment indicator “I” is pointed to “”.
2. Rotate the battery cover to align symbol “I”, 3. Pull to detach the battery cover.
4. Insert one AA battery according to the battery compartment instructions.
5. Close the battery cover, rotate to lock position.

OPERATIONS

CHOOSE ATTACHMENT

Nose and ear trimmer (1) This attachment is suitable to trim nose and ears hair. Gently and slowly insert the tip of the trimmer head in the entrance of the nose and ears.

WARNING! Do not insert it too deep to avoid injuries. Clean the nostril and ear canal after trimming.

Brow trimmer (2) This trimmer attachment is suitable to trim facial hair and shape eyebrows. Select the appropriate length of the double-side comb, attach to the facial trimmer. Trim against the direction of eyebrows growth.

USE YOUR TRIMMER 1. Attach the desired trimming head on the main unit. 2. Push the switch to turn on the unit. 3. Lightly place the blade on the area you want to trim.

Move the trimmer against the direction

of hair growth. 4. Turn off the unit when finished. 5. Use the Cleaning Brush to remove hair residue from the trimmer head.

CLEANING AND MAINTENANCE

WARNING! Make sure the trimmer is switched OFF before cleaning. · Clean the trimmer attachments with the cleaning brush provided or remove the trimmer

attachments and rinse with water to remove hair residues. **CAUTION:** Use cold or warm water, do not use hot water, sea water or cleaners, as they can cause damage to the

waterproof seals. · Wipe the trimmer housing with a damp cloth. **CAUTION:** Never immerse the trimmer housing in water or any other liquids! · Dry all the parts thoroughly.

· Store the appliance in a dry location and out of the reach of children.

SPECIFICATIONS

Battery type: 1 x AA battery required (not included)

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases


Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170
Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au

Contact for Target purchases

Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams

Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

Documents / Resources

	anko AD-313 Nose and Brow Trimmer [pdf] User Manual AD-313, AD-313 Nose and Brow Trimmer, Nose and Brow Trimmer, Brow Trimmer, Trimmer
---	---

References

- [User Manual](#)

🔍 AD-313, AD-313 Nose and Brow Trimmer, Anko, Brow Trimmer, Nose and Brow Trimmer,

📁 Anko Trimmer



Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.