

**anko**  
**APB19W Portable  
Blender**



## anko APB19W Portable Blender Instruction Manual

[Home](#) » [Anko](#) » anko APB19W Portable Blender Instruction Manual 

### Contents

- [1 anko APB19W Portable Blender](#)
- [2 Specifications](#)
- [3 OPERATING INSTRUCTIONS](#)
- [4 FAQs](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

**anko**

**anko APB19W Portable Blender**



## Specifications



- **Model No.:** APB19W/G/B/L
- Designed for domestic use only
- **Output:** DC 5V 2A
- Portable and lightweight design
- USB charging cable included

To ensure the proper operation of this appliance, please read this instruction manual carefully before using the appliance and save it for future reference.

## IMPORTANT SAFEGUARDS

- Read all instructions thoroughly before use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed.
- Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions onto the next owner of this appliance.

## Explanation of Symbols

-  **WARNING!** This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.
-  **CAUTION!** This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.

**NOTICE!**

- This signal word warns of possible property damage.
- This symbol provides you with useful additional information about assembly or operation.

**Warning****Risk of Injury!**

- If you do not use the product properly, there is an increased risk of injury.
- The product can be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- The product shall not be used by children. Keep the product out of reach of children.
- Avoid contact with the moving parts of the product.
- Always disconnect the product from the mains supply if it is left unattended and before assembling, disassembling, or cleaning.

**WARNING!**

- DO NOT pour any hot liquid into the product. If hot liquid is poured in it can be ejected from the product due to sudden steaming and cause scalding.
- Switch off the product before changing accessories or approaching parts that move during operation.
- The product has the potential to cause injury from misuse. Improper installation and the use of accessories not recommended by the manufacturer may result in personal injury.
- Be careful when handling the sharp cutting blades, emptying the bowl, and during cleaning.
- Regarding operating time and rest time, refer to "Operating Instructions".
- Regarding the instructions for cleaning surfaces in contact with food, refer to

**"Cleaning and Maintenance".**


- The product must not be operated with an external timer or a separate remote-control system.
- Suffocation hazard. Make sure that children do not play with the plastic wrapping.
- This product is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices, and other working environments,
  - farmhouses,
  - by clients in hotels, motels, and other residential-type environments,
  - bed and breakfast type environments.

**Warning****Risk of electric shock!**

- A faulty electrical installation, excessive line voltage, or incorrect operation may result in an electric shock.
- The product is designed for domestic use only and should not be used for commercial or industrial purposes.

- Only connect the USB charging cable if the line voltage of the socket corresponds to the information shown on the rating label on the product.

## **WARNING**

- To recharge the battery, only use the USB charger with DC 5V output and 2A output to charge this item. Disconnect the USB cable after the charging.
- Only connect the USB charging cable to an easily accessible socket so that you can quickly disconnect it from the power supply in the event of a problem.
- The appliance must only be supplied by AS/NZS 60335.2.29 certified battery charger with output DC 5V  2A.
- For the information regarding charging, please refer to the section "Charging the product"
- Do not use the product if it is damaged.
- Do not open the housing; instead, have a qualified professional perform repairs.
- Only parts that comply with the original device data may be used for repairs. This product contains electrical and mechanical parts which are essential for protecting sources of danger.
- Do not immerse the motor base in water or other liquids.
- Never touch the USB charging cable with wet hands.
- Keep the product and the USB charging cable away from open flames and hot surfaces.
- Lay the USB charging cable so that it does not pose a tripping hazard.
- Do not kink the USB charging cable and do not lay it over sharp edges.
- Only use the product indoors. Do not use the product in damp rooms or in the rain.
- Do not place the product such that there is a risk of it falling into a tub or sink.
- Never insert any objects into the housing.
- Always switch the product off and unplug it when you are not using it, when you intend to clean it, or in the event of a malfunction.

## **Warning**

### **Risk of injury!**

- If you do not use the product properly, there is an increased risk of injury.
- If you notice any smoke, unusual noises or strange smells, switch off the product immediately. If this occurs, do not continue to use the product and have it checked by an expert.
- Use only the original and provided accessories of the product. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Keep hands and utensils away from moving blades when processing food to reduce the risk of severe injury to persons or damage to the product.
- The cutting blades are extremely sharp and must be handled carefully.
- Ensure all parts are installed correctly and locked into place before operation.

## **Notice**

### **Risk of damage!**

- Improper handling of the product may result in damage to the product.
- Do not use this product in continuous operation. The maximum recommended operating time is 30 seconds.
- Allow the product to cool down for at least 1 minute to an ambient temperature before using it again. There is a risk of overheating if the product is operated for longer periods.
- Never use the product near curtains, walls, under cupboards, or near other flammable materials.
- Do not place the product at the edge of the working surface.
- Never place the product on or close to sources of heat. Keep the product away from open flames, direct sunlight, hot surfaces, or extreme temperatures.
- Do not use the product and its accessories when deformities, cracks or damages are found.
- Do not make any modifications to the product. Any changes to the product that have not been expressly authorized by the manufacturer may lead to the user's warranty being rendered null and void.
- Do not use the product if the cutting blades are damaged.
- Do not use the product to process overly hard food (such as ice cubes or meat with bones).
- Only process small quantities of food. The product is not intended to prepare large quantities of food at one time.

## **WARNING!**


- The batteries in the product shall not be exposed to excessive heat such as sunlight, fire, or the like.
- The batteries in the product are non-replaceable.

## **Warning**

- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord, or plug to rain moisture or any liquid.
- Do not use the product near baths, basins, or other vessels containing water or other liquids, or when standing in or on damp surfaces.
- If the appliance is dropped into water, turn off the power at the power outlet and remove the plug immediately.
- DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER OUTLET.
- It is important to note that the appliance will have to be inspected by a qualified technician before using it again.

## **SAVE THESE INSTRUCTIONS**

## **PRODUCT OVERVIEW**

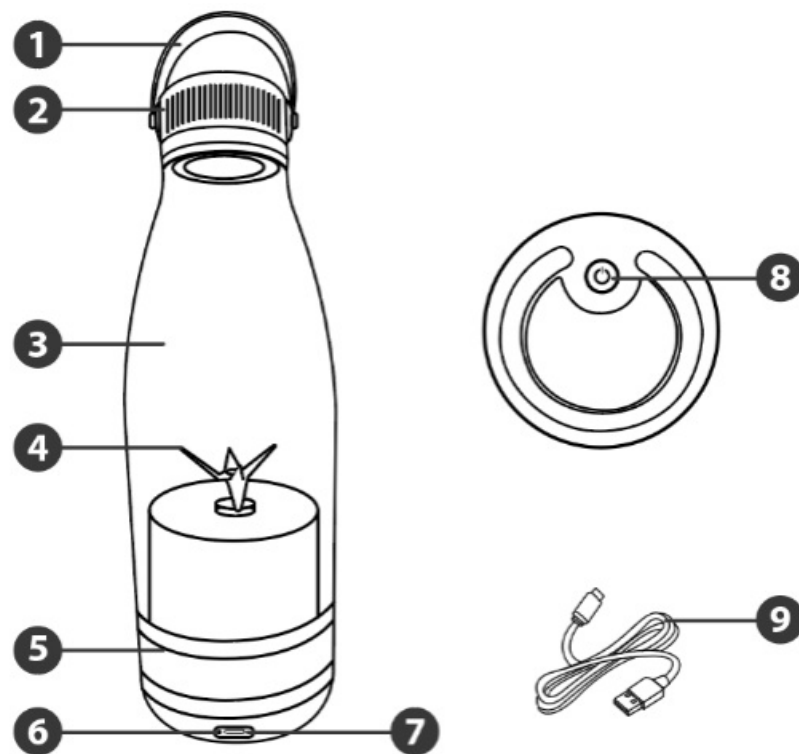

1. Carrying strap
2. Lid
3. Blending bottle
4. Cutting blades
5. Motor base
6. Indicator light
7. Charging port
8. Power button (on the bottom of the product)
9. USB charging cable

The product is exclusively designed for mixing drinks. It can be easily carried around with the carrying strap (1).

## INSTRUCTIONS

### FIRST USE

- Checking the product and the package contents

### Notice

#### Risk of damage!

- If you are not cautious when opening the packaging with a sharp knife or other pointed object, you may quickly damage the product.
- For this reason, be very careful when opening it.

1. Take the product out of the packaging.

2. Check to make sure that all parts are included (check Product Overview).
3. Check whether the product or individual parts are damaged. If any parts are missing, return the product to Kmart/Target.


### **Basic cleaning**

1. Remove the packaging material and plastic wrappings.
2. Clean all parts of the product before first use as described in the chapter "Cleaning and Maintenance".

### **Charging the product**

- Fully charge the product before the first use
  - The indicator light illuminates red during charging.
  - The product cannot be used during charging.
1. Fully unwind and extend the USB charging cable.
  2. Insert the smaller end of the USB charging cable into the charging port of the product.
  3. Insert the larger end of the USB charging cable into a compatible power source, e.g. USB port of a phone charger, USB charger (NOT INCLUDED).
  4. The indicator light will illuminate blue when charging is complete. Remove the USB charging cable from the charging port and the power source.

## **OPERATING INSTRUCTIONS**

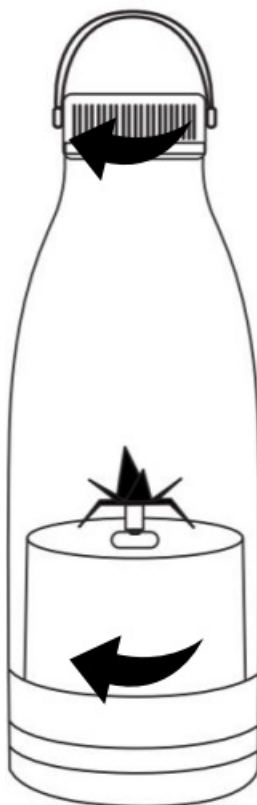

1. Fully charge the product (see "Charging the product").
2. Screw the blending bottle onto the motor base by turning the blending bottle clockwise until it is securely

attached.

3. Add solid ingredients (cut into small pieces 1cm x 1cm x 1cm into the blending cup). Recipe for max. load: 133g carrots & 200g water
4. Add liquid ingredients into the blending cup from the top. Fill only up to the maximum line of the cup. Do not overfill.
5. Screw the lid onto the bottle by turning the lid clockwise until it is securely attached.
6. Double-press the power button (on the base of the product) to turn on the product. The indicator light illuminates blue during operation.
7. Press the power button again to turn off the product. The product also turns off automatically after about 30 seconds without pressing the power button. Turn on the blender again if you need longer processing.

### **IMPORTANT!**

- Do not operate the product continuously for more than 30 seconds at a time to avoid overheating. Allow the product to pause before using it again.

1. Unscrew the lid and pour the drink into a glass or cup for consumption.
2. Clean all parts thoroughly after use (see "Cleaning and Maintenance")

### **NOTE:**

- This item is equipped with protection features. If the blender detects an empty load or other abnormal conditions, it will shut down within 5 seconds

### **TROUBLESHOOTING**



PROBLEM	POSSIBLE REASON	SOLUTION
The product does not start.	The battery power level is low.	Fully charge the product before use (see “Charging the product”).
The product does not start and the indicator light flashes blue and red when the power button is pressed.	The blending bottle is not securely attached to the motor base.	Turn the blender bottle clockwise until the indicator light flashes blue briefly. This indicates that the blending cup is securely attached on the motor base.
The product suddenly stops during operation.	The product has overheated.	Stop using the product and let it cool down completely before using it again.
Liquid leaks around the motor base, or lid.	The sealing rings on the parts are dirty.	Properly clean the product after each use. (See “Cleaning and Maintenance”).
The product shut down within 5 seconds even the cup is not empty	The liquid inside cup is too less.	Add liquid to at least 50% of cup

## CLEANING AND MAINTENANCE

### Warning

#### Risk of injury!

- Improper handling of the product may increase the risk of injury.
- The cutting blades are very sharp. Never handle the blades with your bare hands.

### Notice

#### Risk of injury!

- Water that has penetrated the housing may cause a short circuit.
- Make sure that no water penetrates the housing on the motor base.
- Never immerse the motor base in water.

### Notice

#### Risk of injury!

- Improper handling of the product may result in damage.
- Do not use any aggressive cleaners, brushes with metal or nylon bristles, or sharp or metallic cleaning utensils such as knives, hard scrapers, and the like. They could damage the surfaces.
- Do not put the product in the dishwasher, as this will destroy it.

### **Cleaning the cutting blades**

- Add a little water to the blending cup (4) and operate the product for a few seconds (see “Operating Instructions”) to remove food residues from the cutting blades (5). Discard the water after cleaning.

### **Cleaning the blending cup, and lid**

- Clean the blending cup (4), and lid (2) in warm soapy water. Rinse and dry all parts thoroughly after cleaning.

### **Cleaning the motor base**

- Clean the motor base (6) with a damp cloth and dry all parts after cleaning with a dry cloth.

### **STORAGE**

- All parts must be completely clean and dry before being stored
- Always store the product in a dry area.
- Protect the product from direct sunlight.
- Store the product so that it is not accessible to children.

### **TECHNICAL DATA**

- **SUPPLY VOLTAGE:** DC 5 V, 2 A
- **RATED POWER:** 60 W
- **BATTERY CAPACITY:** DC 7.4V, 2000mAh Li-ion rechargeable battery
- **USABLE CAPACITY:** 400 ml

### **12 MONTH WARRANTY**

- Thank you for your purchase. Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used by accompanying recommendations or instructions where provided.
- This warranty is in addition to your rights under the Australian Consumer Law.
- For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.
- We will provide you with your choice of a refund, repair (where possible), or exchange (availability dependent) for this product if it becomes defective within the warranty period.
- The business will bear the reasonable expense of claiming the warranty.
- The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.
- Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.
- Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
- You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/-Customer Service Centre 690 Springvale Road, Mulgrave VIC 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, VIC, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>

## FAQs


### Q: Can I use the blender for commercial purposes?

A: No, the blender is designed for domestic use only and should not be used for commercial or industrial purposes.

### Q: What should I do if the product is damaged?

A: Do not use the product if it is damaged. Contact a qualified professional for repairs.

## Documents / Resources

	<a href="#">anko APB19W Portable Blender</a> [pdf] Instruction Manual APB19W, APB19G, APB19B, APB19L, APB19W Portable Blender, APB19W, Portable Blender, Blender
---	---

## References

- [kmart.com.au](http://kmart.com.au)
- [User Manual](#)

### [Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.