



## anko BD24480MC Animated Multifunction Snowglobe Projector User Guide

[Home](#) » [Anko](#) » anko BD24480MC Animated Multifunction Snowglobe Projector User Guide 

anko BD24480MC Animated Multifunction Snowglobe Projector User Guide



## Contents

- 1 Contents:
- 2 Connection
- 3 Connecting Power:
- 4 Operation Instruction:
- 5 Product Specification:
- 6 Safety Instruction:
- 7 Documents / Resources
  - 7.1 References
- 8 Related Posts

## Contents:

 
A. Snowglobe projector x 1




B. USB Plug x 1



C. Plastic cover x 1

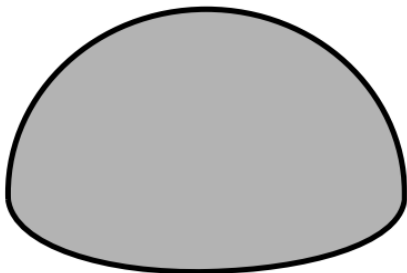


## Connection

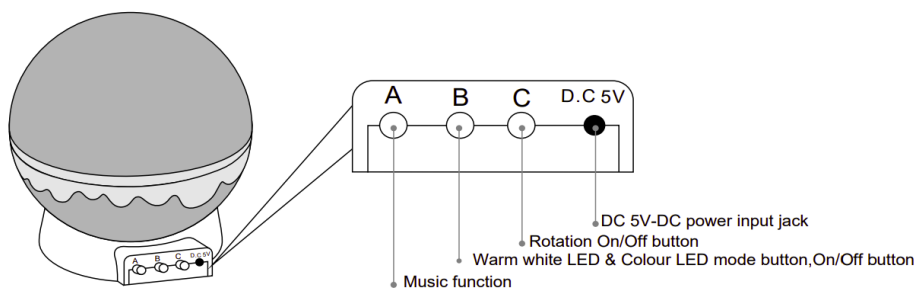 


A – Music function  
B – Warm White LED & Colour LED mode button, On/Off button  
C – Rotation On/Off button  
DC 5V – DC power input jack.

### **Connecting Power:**

 1. Install 3 x AA batteries into the battery compartment (batteries not included)

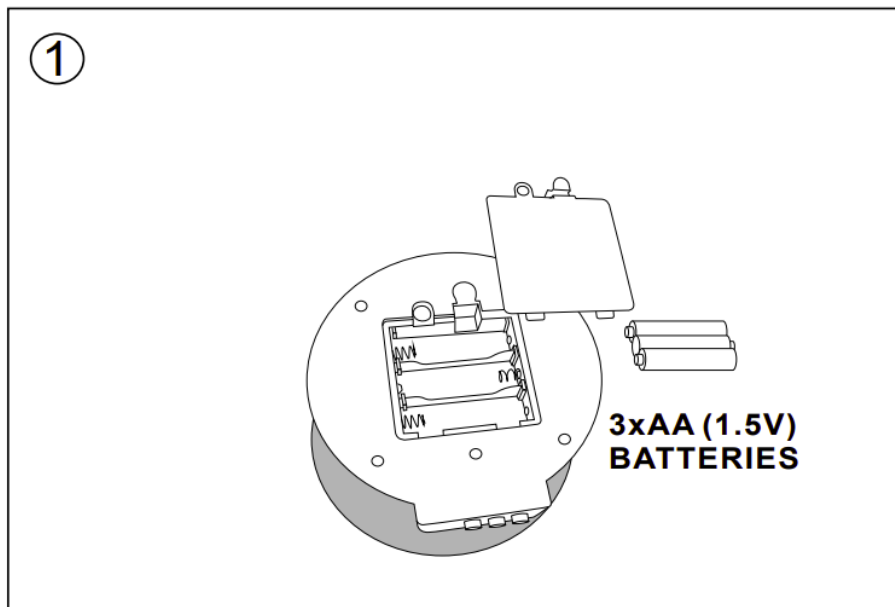

 2. Connect the USB cable to USB power source 2 power connection is available as below.

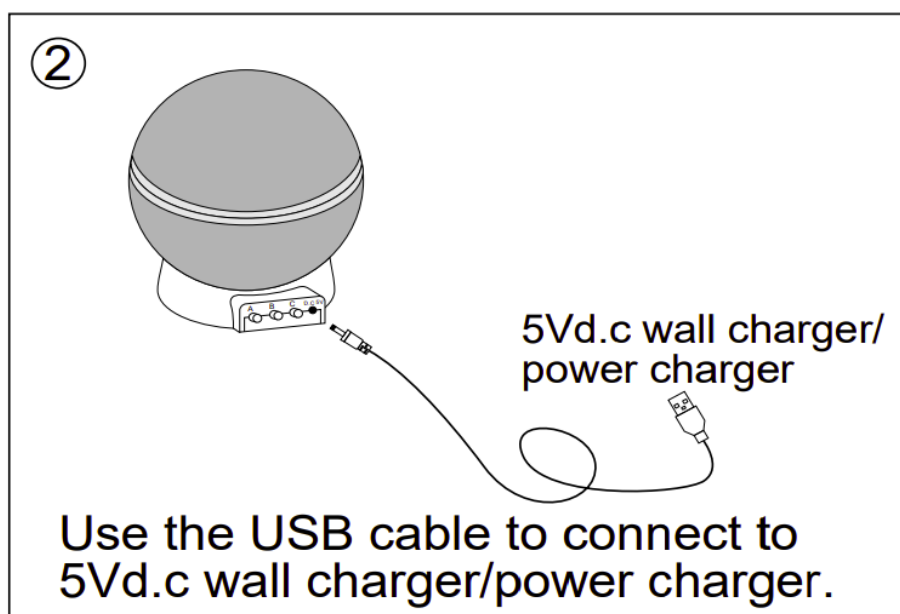

### **Operation Instruction:**

Follow below step to operate your unit

1. Connect provided USB cable to USB power source or install 3 x AA batteries to battery compartment.
2. When connect to USB power or batteries, unit will be auto on 20 seconds and music will be stopped.
3. Press A button to turn on/off the music function.
4. Press B button to select color mode.

5. Press C button to turn on/off snowflake and reindeer with sleigh moving.

### **Product Specification:**

- ▶ Open the battery compartment cover at bottom of unit.
- ▶ Unscrew the screw and lift the cover off.
- ▶ Insert 3 x AA 1.5V batteries (not included) according to the polarity indicated in the battery compartment.
- ▶ Reinstall the battery compartment cover.
- ▶ Remove the batteries if they are flat or you do not use the device for a longer period of time.

 
### **Safety Instruction:**

**WARNING:**FOR DECORATION ONLY. THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN AND PET.

- Before using the unit, please read the manual carefully.
- An adult must carry out battery replacement and installation.
- Remove exhausted batteries from this product.
- Do not dispose of batteries in a fire, batteries may explode or leak.
- Do not short-circuit the battery terminals.
- Do not mix used and new batteries.
- Do not mix alkaline standard (carbon-zinc), lithium or rechargeable batteries.
- Do not mix different types of batteries.
- Do not use rechargeable batteries in this product.
- Do not recharge non-rechargeable batteries.
- Do not allow any part to come in contact with heat or a direct flame.
- Do not allow water to come into contact with the batteries or wiring.
- Install carefully to prevent any damage to the batteries.
- When installing [ 3 x 1.5V AA (LR6) ] batteries in the battery compartment, ensure the batteries are placed as marked (+)(-).
- Only the recommended batteries should be used.
- Remove batteries from product when not in use for long periods of time.
- Keep this product out of the reach of small children.
- Store unused batteries in their original packaging.
- Dispose of used batteries responsibly.
- This product is suitable for INDOOR use only.
- Remove all packaging before use.
- This product is not suitable for children under 36 months. Keep out of reach of small children.
- This product has small parts, which may pose a choking hazard if detached.
- Keep away from fire and sources of heat.
- Use provided USB cable only.
- The light source of this projector is not replaceable; when the light source reaches its end of life the projector shall be replaced.



Documents / Resources

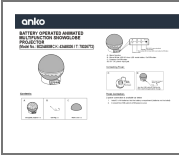	<a href="#">anko BD24480MC Animated Multifunction Snowglobe Projector</a> [pdf] User Guide BD24480MC Animated Multifunction Snowglobe Projector, BD24480MC, Animated Multifunction Snowglobe Projector, Multifunction Snowglobe Projector, Snowglobe Projector, Projector
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.